



# INSTALLATION INSTRUCTIONS

Accessory  
DOOR EDGE GUARDS


Application  
2008 ACCORD  
4-DOOR

Publications No.  
All 37089


Issue Date  
AUG 2007

## PARTS LIST

Right front door edge guard

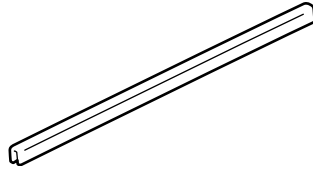

Left front door edge guard

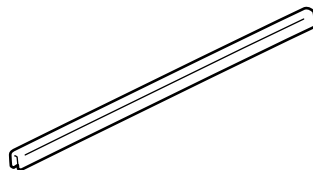


Right rear door edge guard



Left rear door edge guard



Seam sealant cutting tool

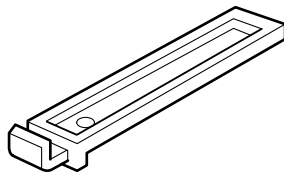

## TOOL AND SUPPLIES REQUIRED

Rubber mallet

Felt-tip pen

Touch-up paint

Scale

## INSTALLATION


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

### NOTE:

- When installing the door edge guard and the side protector, install the door edge guard before installing the side protector.
  - These instructions show the right door edge guard being installed. The same procedure applies to installing the left door edge guard.
1. Clean and wax the areas to be covered with a high quality paste wax.
  2. Identify each door edge guard by holding it up to the door and matching its contour with the door edge.

## Front Door Edge Guards



3. Measure and mark the sealant at the measurement shown.
4. Position the right front door edge guard on the right front door while aligning it with the mark you made in step 3. Mark the sealant at the bottom ending point of the edge guard.

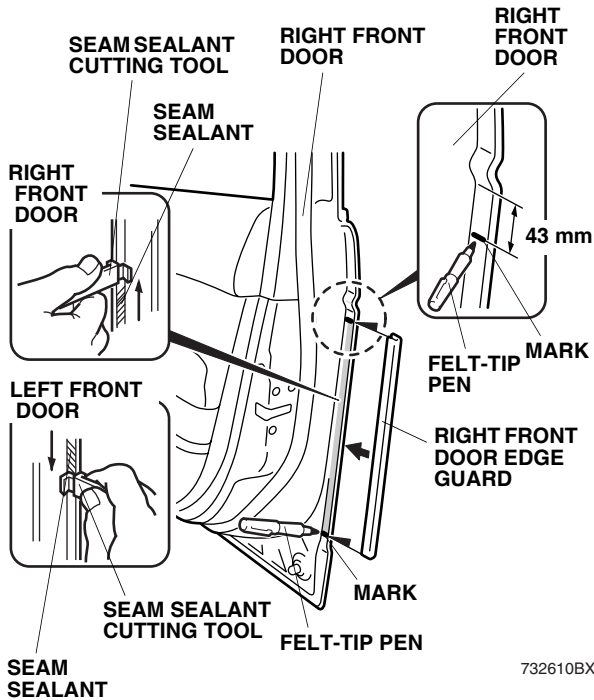

5. Position the cutting edge of the seam sealant cutting tool against the door edge, and trim the seam sealant from mark to mark.  
NOTE: The cutting tool only cuts in one direction. Move it upward on the right and downward on the left side of the vehicle.
6. Apply touch-up paint to the cut seam sealant area, and let it dry.

7. Position the right front door edge guard on the right front door edge, and tap it into position with a series of light taps using a rubber mallet.

NOTE: Be sure the right front door edge guard position is correct. Once in place, do not remove, reposition, or reinstall the right front door edge guard, or it will not hold securely.

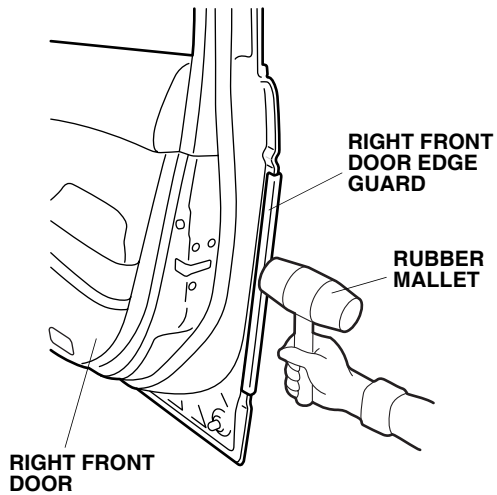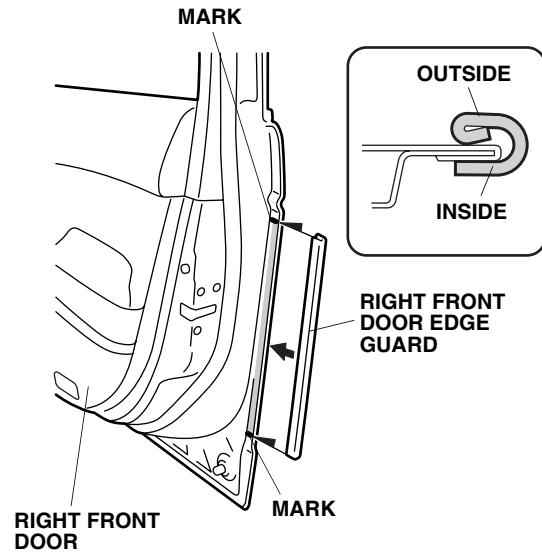


732611BX

8. Repeat steps 3 through 7 to install the left front door edge guard.

## Rear Door Edge Guards

- Measure and mark the sealant at the measurement shown.
- Position the right rear door edge guard on the right rear door while aligning it with the mark you made in step 9. Mark the sealant at the bottom ending point of the right rear edge guard.


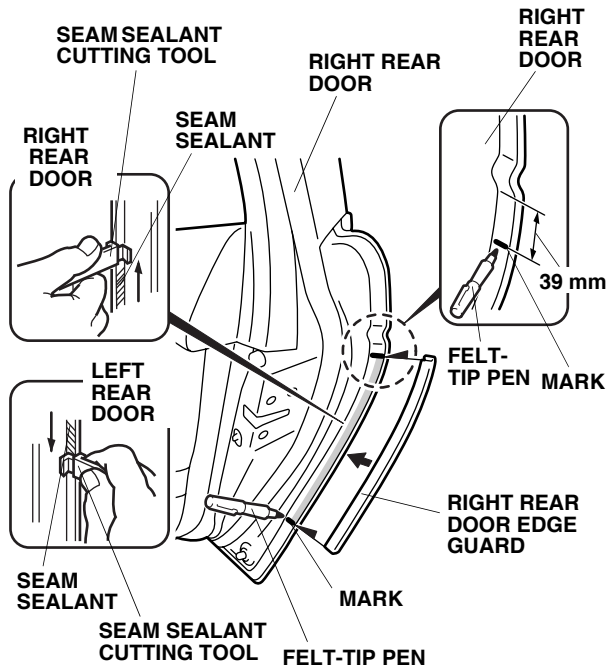


732613BX

- Position the cutting edge of the seam sealant cutting tool against the right rear door edge, and trim the seam sealant from mark to mark.  
NOTE: The cutting tool only cuts in one direction. Move it upward on the right and downward on the left side of the vehicle.
- Apply touch-up paint to the cut seam sealant area, and let it dry.

- Position the right rear door edge guard on the right rear door edge, and tap it into position with a series of light taps using a rubber mallet.

NOTE: Be sure the right rear door edge guard position is correct. Once in place, do not remove, reposition, or reinstall the right rear door edge guard, or it will not hold securely.

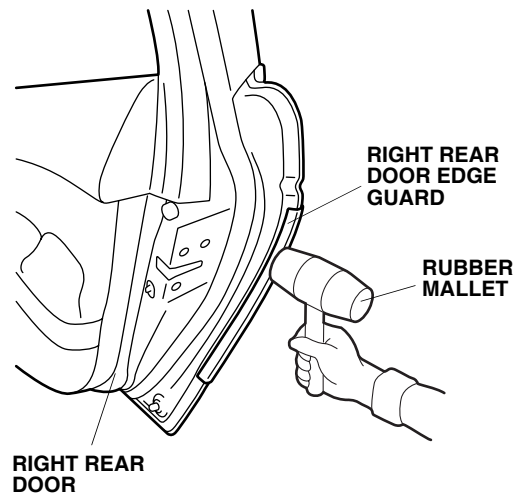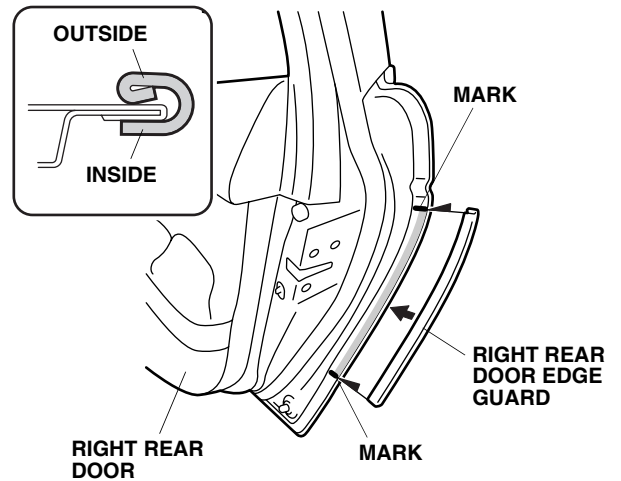

732614BX

- Repeat steps 9 through 13 to install the left rear door edge guard.