


Remote Control Transmitter

Controls and Functions

- The doors cannot be locked or unlocked with the remote control transmitter when the key is in the ignition switch.
- The doors cannot be locked if any one of the doors is open.
- The panic mode will not work when the key is in the ignition switch.

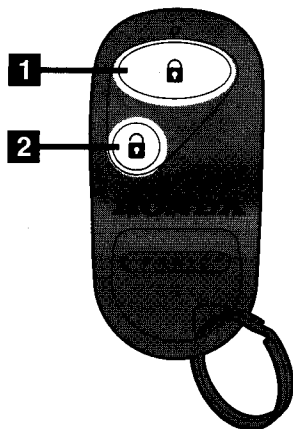

1



LOCK Button

When used alone this button locks the doors and flashes the parking lights once.

Note:

If the lock button is pressed for a second time (within 5 seconds of the first push) the horn will beep once and parking lights will flash once to confirm the doors are locked and the system is armed.

2




UNLOCK Button

This button unlocks the door(s). When this button is pressed once, only the driver side door will unlock and the parking lights will flash twice. Pressing the button again, within 30 seconds, will unlock all the doors and flash the parking lights twice. The interior light illuminates for 30 seconds when the interior light switch is set to the center position.

Note:

After unlocking the door(s), the system will rearm (with no "beep") and relock in 30 seconds if the doors are not opened.

Remote Control Transmitter

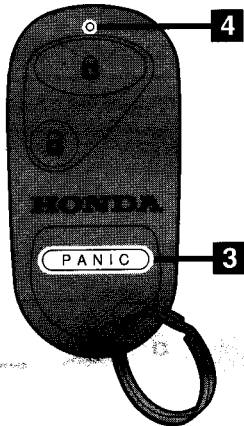

3

PANIC

PANIC Button

When this button is pressed and held for more than 1 second, the keyless entry system is set to the panic mode.

The horn will sound for 30 seconds and the parking lights will flash.

To deactivate the panic mode, press the "LOCK", "UNLOCK" or "PANIC" button or turn the ignition key to the "ON" (II) position.

4



Signal Indicator LED


The LED will light when a remote control button is pushed and the remote control is transmitting a control signal.

The LED indicates the remote control's battery condition. If the brightness of the LED dims, the battery should be replaced.

Remote Control Code Programming

How to Program Remote Control Transmitters


- For steps 2 through 12, each step must be completed within 5 seconds. For step 13, within 10 seconds for each remote.
- Up to 3 remotes can be stored in memory.
- All remotes to be programmed must be on hand.
- A non programmed remote will work for this procedure.
- Turn the ignition key to the "OFF" position to complete the programming procedure.

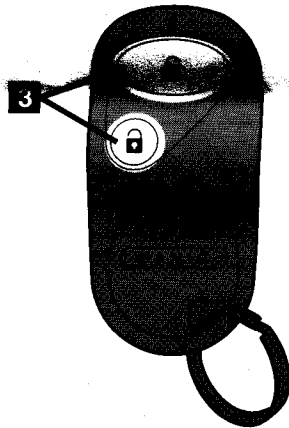

1

Unlock the doors.

2

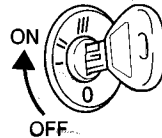


Turn the ignition key to the "ON" (II) position.

3




Press the "LOCK" or "UNLOCK" button on the remote control transmitter.

4

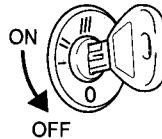


Turn the ignition key to the "OFF" (0, I) position.

5

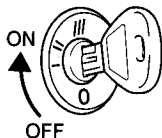


Turn the ignition key to the "ON" (II) position.

Remote Control Code Programming

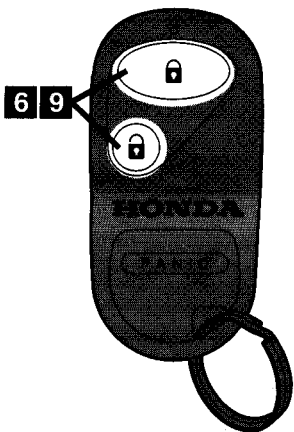


6

 


Press the "LOCK" or "UNLOCK" button on the remote control transmitter.

7

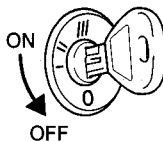

Turn the ignition to the "OFF" (0, I) position.

8

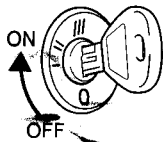


Turn the ignition to the "ON" (II) position.

9




Press the "LOCK" or "UNLOCK" button on the remote control transmitter.

10

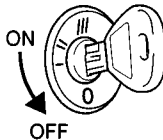



Turn the ignition to the "OFF" (0, I) position.

11

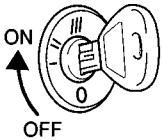

Turn the ignition to the "ON" (II) position.

Remote Control Code Programming

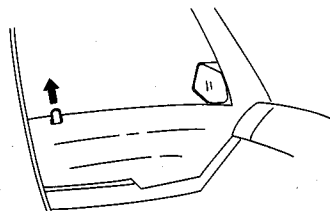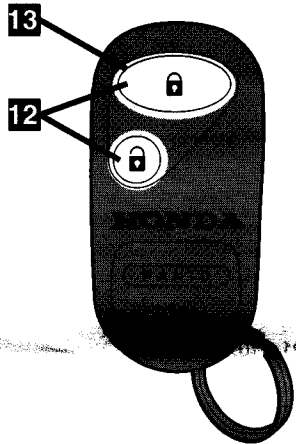

12



Press the "LOCK" or "UNLOCK" button on the remote control transmitter.

- The power door locks cycles to indicate programming mode.
- To terminate the programming mode at this point, either turn the ignition key to the "OFF" position or leave the remote's button untouched for over 10 seconds. To program the remote, perform steps 2 through 12.

13



Press the "LOCK" button of each remote (one at a time) to be stored in memory.

- The power door locks cycle to confirm each entry.
- A button on each remote control transmitter to be programmed must be pressed. Perform the programming step within 10 seconds for each remote or else the programming mode will terminate.

Note:

Only 3 remotes can be stored in the system's memory.