



**HONDA****INSTALLATION
INSTRUCTIONS**Accessory
DOOR EDGE GUARDSApplication
CR-VPublications No.
All 32945Issue Date
SEP 2006**PARTS LIST**


Right front door edge guard

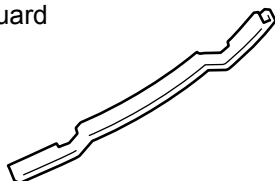


Left front door edge guard

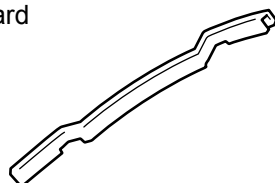


Right rear door edge guard

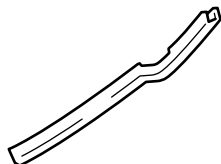

Left rear door edge guard

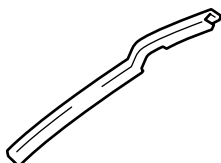

Seam sealant cutting tool

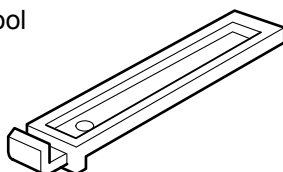**TOOLS AND SUPPLIES REQUIRED**

Rubber mallet

Felt-tip pen

Touch-up paint

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE: These instructions show the right door edge guard being installed. The same procedure applies to installing the left door edge guard.

1. Clean and wax the areas to be covered with a high-quality paste wax.
2. Identify each door edge guard by holding it up to the door and matching its contour with the door edge.



Front Door Edge Guards

3. Position the door edge guard against the inside edge of the front door using the bends for reference. Mark the sealant at the top and bottom ending points of each door edge guard.

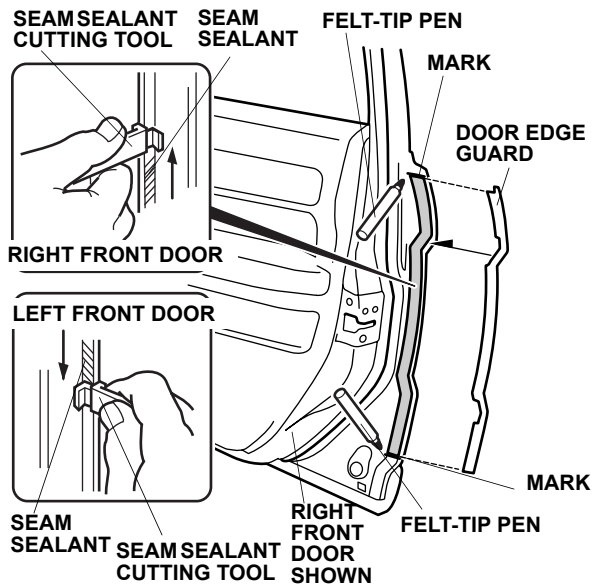

4. Position the cutting edge of the seam sealant cutting tool against the door edge, and trim the seam sealant from mark to mark.
NOTE: The cutting tool only cuts in one direction. Move it upward on the right and downward on the left side of the vehicle.
5. Apply touch-up paint to the cut seam sealant area, and let it dry..


6. Position the door edge guard on the door edge, and tap it into position with a series of light taps using a rubber mallet.

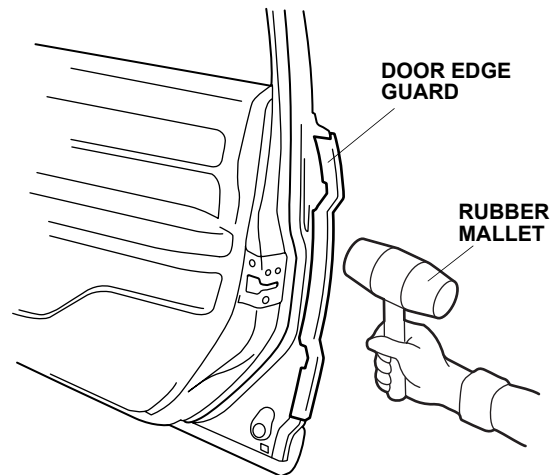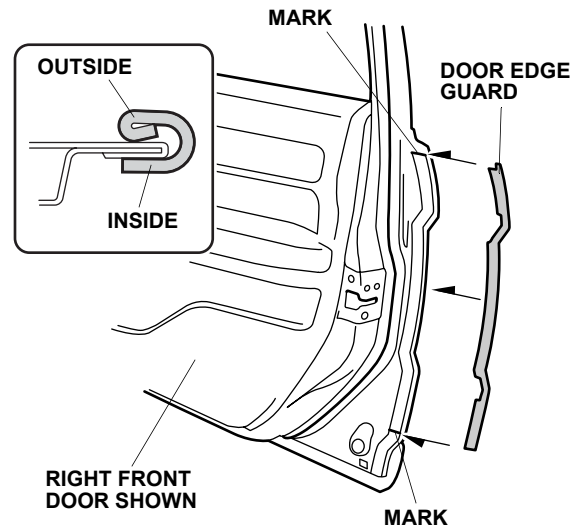

7. Repeat steps 3 through 6 to install the left front door edge guard.



Rear Door Edge Guards

- Position the door edge guard against the inside edge of the front door using the bends for reference. Mark the sealant at the top and bottom ending points of each door edge guard.

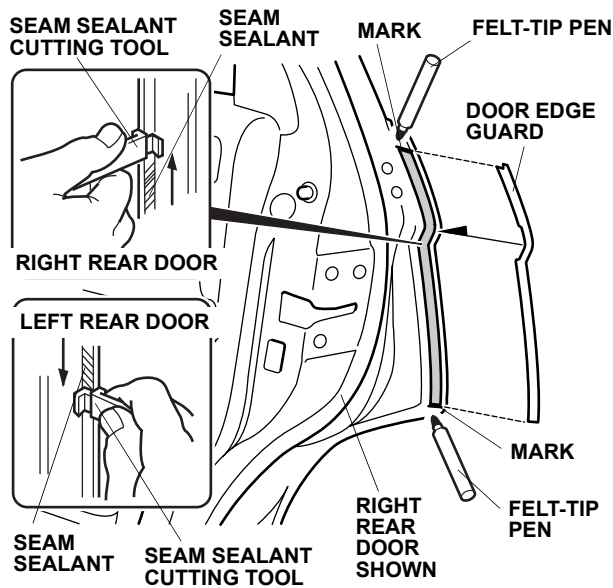

- Apply touch-up paint to the cut seam sealant area, and let it dry.
NOTE: The cutting tool only cuts in one direction. Move it upward on the right and downward on the left side of the vehicle.
- Position the cutting edge or the seam sealant cutting tool against the door edge, and trim the seam sealant from mark to mark.

- Position the door edge guard on the door edge, and tap it into position with a series of light taps using a rubber mallet.

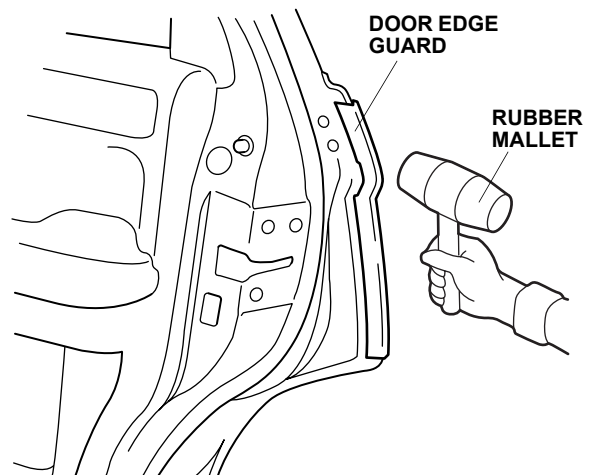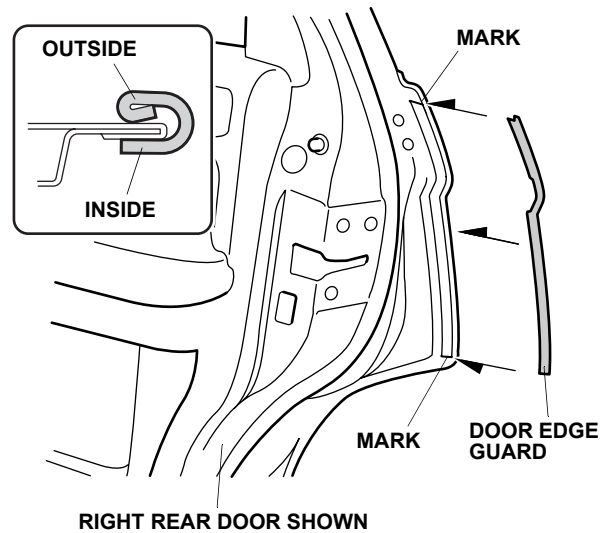

- Repeat steps 10 through 11 to install the left rear door edge guard.