

KEYLESS ENTRY PROGRAMMING

Have all remotes for the vehicle on hand.

Make sure all the doors and rear hatch/trunk are closed during programming.

Only use 1 remote to get through step 9, have all remotes on hand to use for step #10

Each step must be completed within 5 seconds of starting that step.

1. Sit in the car with all doors and rear hatch tightly closed
2. Turn the key to the ON position, marked by "II" on the ignition bezel so the dash lights come on, then within 5 seconds press the "Lock" button on the remote for 1 second or so and release the button.
3. Turn the key to the OFF position, marked by "I" on the ignition bezel – dash lights go off.
4. Turn the key to the ON position, marked by "II" on the ignition bezel so the dash lights come on, then within 5 seconds press the "Lock" button on the remote for 1 second or so and release the button.
5. Turn the key to the OFF position, marked by "I" on the ignition bezel – dash lights go off.
6. Turn the key to the ON position, marked by "II" on the ignition bezel so the dash lights come on, then within 5 seconds press the "Lock" button on the remote for 1 second or so and release the button.
7. Turn the key to the OFF position, marked by "I" on the ignition bezel – dash lights go off.
8. Turn the key to the ON position, marked by "II" on the ignition bezel so the dash lights come on, then within 5 seconds press the "Lock" button on the remote for 1 second or so and release the button.
9. The locks will make a cycling sound (clunk), locks will NOT lock or unlock at this point, they will just make a noise.
The system is now in **programming mode**. Do not turn the key off.
10. Within 5 seconds of entering programming mode and within 5 seconds of each other, press the lock button ON EACH remote you are programming, for a second or so and release. This step needs to be completed within 10 seconds. Each time a remote button is pushed, the locks should cycle. Up to 3 remotes can be programmed.
11. Turn ignition completely off and remove the key. Step out of car and close door. The remotes should be programmed and should work. If you have a trunk/hatch release, the button for this feature needs to be held for a few seconds before the trunk/hatch will "pop".