



INSTALLATION INSTRUCTIONS

Accessory

SHIFT KNOB

Application

FIT

Publications No.

All 31713

Issue Date



MAR 2006

PARTS LIST

Shift knob



 Flange nut

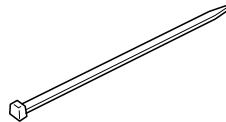
Shift lever collar
(Not used)Ty-rap
(Not used)Boot ring
(Not used)

TOOLS REQUIRED


14 mm Combination wrench

INSTALLATION

1. Remove the shift knob by turning it counter-clockwise.

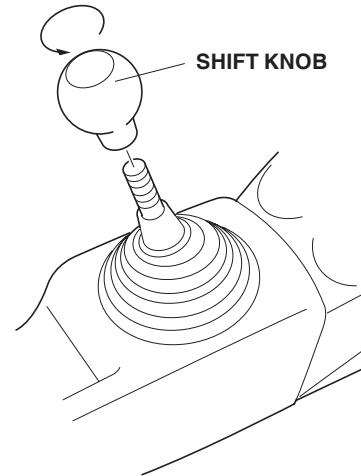

2. Install the flange nut on the shift lever to the end of the threads. Note the direction of the flange nut.

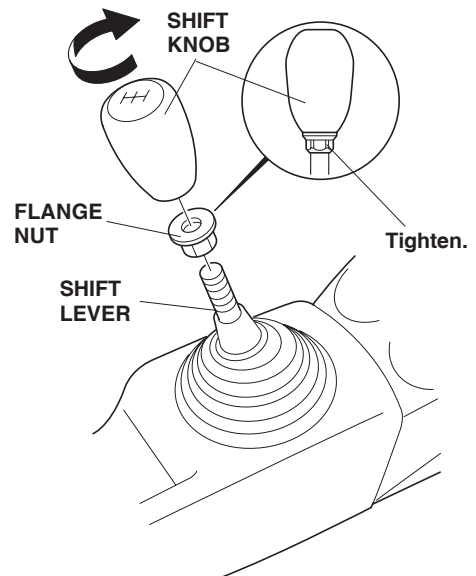

3. Install the shift knob on the shift lever until it's tight, then place it in the correct location, and tighten the flange nut securely.