


## 2002 - 2004 ODYSSEY - Engine Oil Filter Replacement

### Special Tools Required

- Oil filter wrench 07AAA-PAAA100


1. Remove the oil filter with the special tool.
2. Inspect the threads (A) and rubber seal (B) on the new filter. Wipe off the seat on the engine block, then apply a light coat of new engine oil to the filter rubber seal. Use only filters with a built-in bypass system.
3. Install the oil filter by hand.

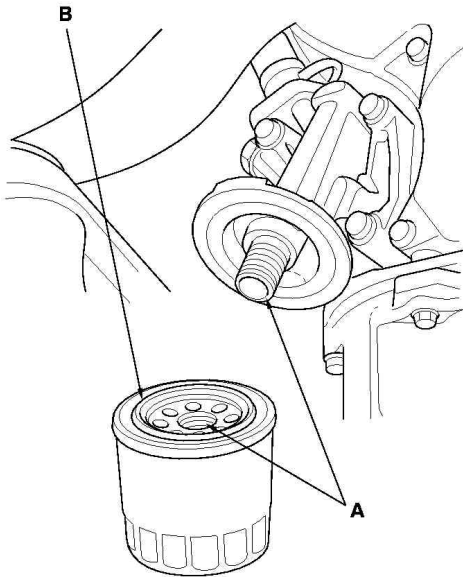

4. After the rubber seal seats, tighten the oil filter clockwise with the special tool.

**Tighten: 7/8 turn clockwise.**

**Tightening torque: 22 N•m (2.2 kgf•m, 16 lbf•ft)**

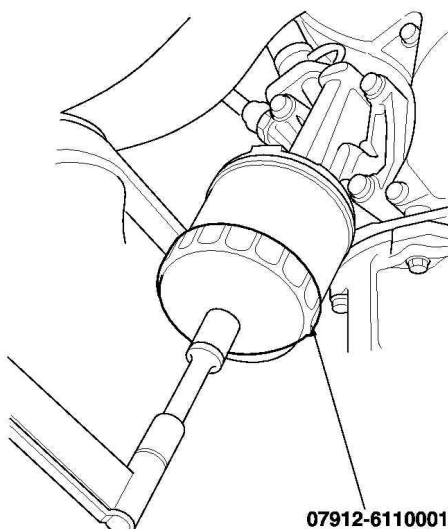


5. If eight numbers (1 to 8) are printed around the outside of the filter, use the following procedure to tighten the filter.

## INTERACTIVE NETWORK


- Spin the filter on until its seal lightly seats against the block, and note which number is at the bottom.
- Tighten the filter by turning it clockwise seven numbers from the one you noted. For example, if number 2 is at the bottom when the seal is lightly seated, tighten the filter until the number 1 comes around to the bottom.

Number when rubber seal is seated	1	2	3	4	5	6	7	8
Number after tightening	8	1	2	3	4	5	6	7

6. After installation, fill the engine with oil up to the specified level, run the engine for more than 3 minutes, then check for oil leakage.

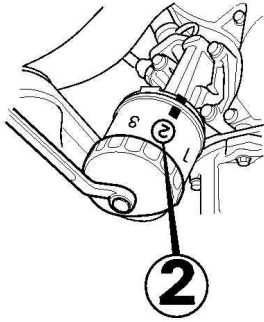

**Number when rubber seal is seated.**

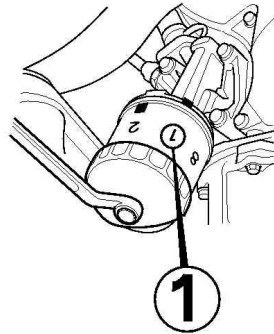

**Number after tightening.**