

INSTALLATION INSTRUCTIONS

Accessory
SKI/SNOWBOARD ATTACHMENT
 P/N 08L03-TA1-100B


Application
ALL APPLICABLE MODELS

Publications No.
GII 23096
 Issue Date
FEB 2003

Give this information to your customer for future reference.

PARTS LIST


2 Ski/snowboard attachments

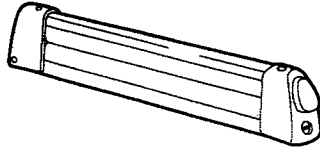


4 Knobs



4 Short T-bolts (Accord)

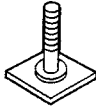

4 Long T-bolts (CR-V, Element, Odyssey, and Pilot)

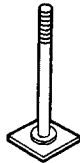

4 Spacers (CR-V, Element, Odyssey, and Pilot)



2 Keys



TOOLS REQUIRED

Phillips screwdriver
 T30 Torx bit
 Ratchet


INSTALLATION

NOTE:

- The ski/snowboard attachments are designed to be used exclusively with a Honda roof rack, which is sold separately. If the vehicle is not equipped with a roof rack, install a roof rack before installing the ski/snowboard attachment.
- The ski/snowboard attachments may be installed either with both on the driver's side or with both on the passenger's side.


If the vehicle is equipped with a removable roof rack (Accord), do steps 1 through 6. If the vehicle is equipped with a fixed roof rack, (CR-V, Element, Odyssey, or Pilot) go to step 7.

- Pull out on the end cap to open the crossbar access cover for both crossbars.

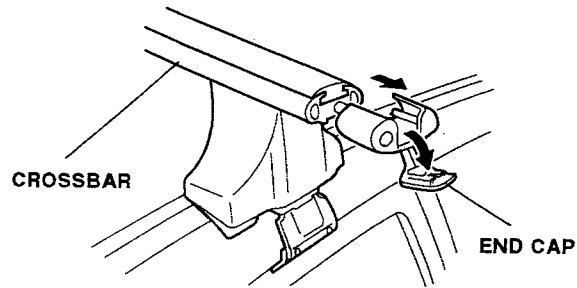


- Remove the rubber moldings from the front and rear crossbars. Retain the rubber moldings to be installed if the ski/snowboard attachment is removed.
- Slide two short bolts into each crossbar (front and rear).


RUBBER MOLDING
 (Save for your customer.)

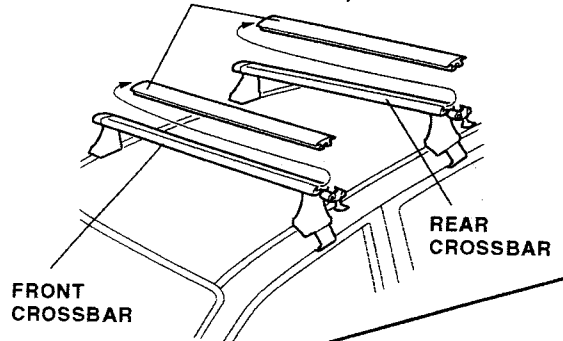


SHORT T-BOLTS

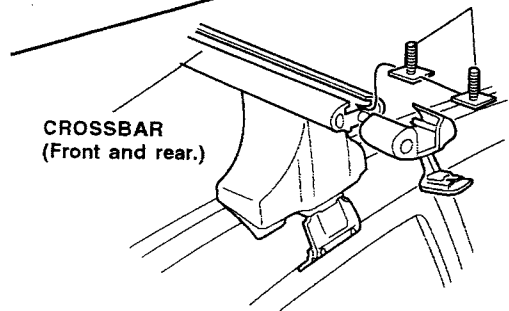

4. Insert the key, and turn it clockwise to unlock the top frame. Press the button, and open the top frame completely.

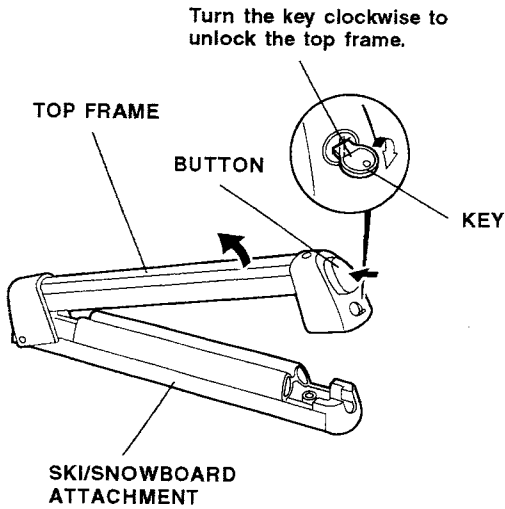

5. Position the ski/snowboard attachment onto the T-bolts, and install the two knobs. Tighten the knobs securely.

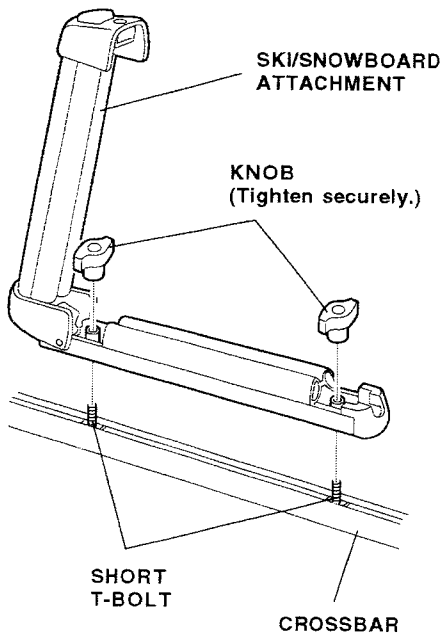


6. Repeat steps 4 and 5 to install a ski/snowboard attachment to the rear crossbar.


If the vehicle is a CR-V, Element, Odyssey, or Pilot, do steps 7 thru 16. If the vehicle is an Accord, go to step 17.

7. If equipped, remove the roof rack cover. Using a flat-tip screwdriver wrapped with a shop towel, push in on the locking tab and remove the roof rack cover. Remove the roof rack cover from the other roof rack the same way.

Element:


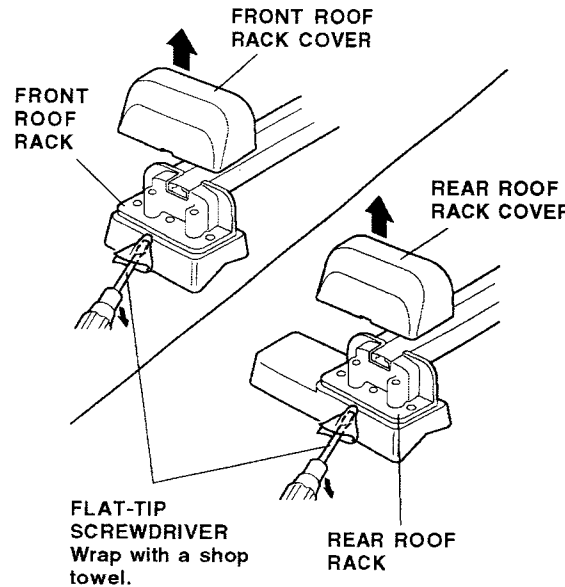


CR-V:

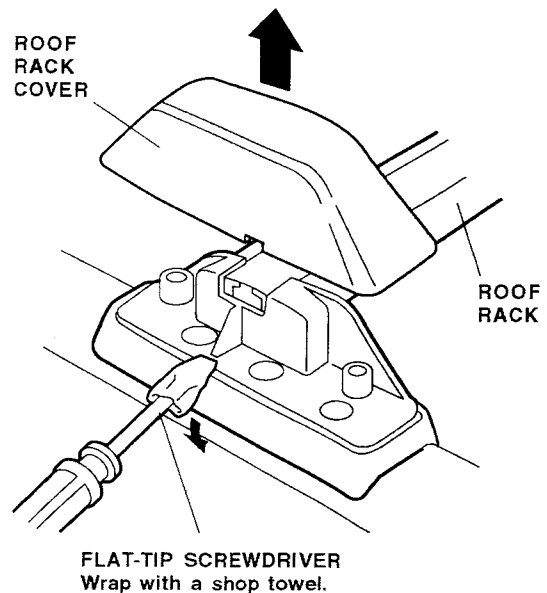



Odyssey EX and Pilot EX: Remove the front and rear crossbars (four Torx bolts, four lock washers, and the four washers), and the front and rear end caps (four Torx self-tapping screws and eight washers).

Odyssey EX/Pilot EX:

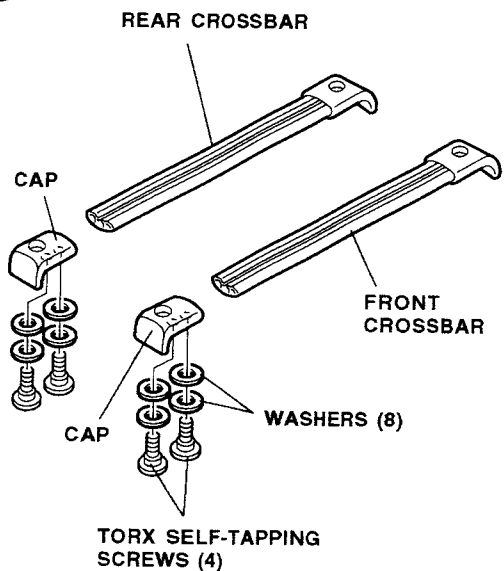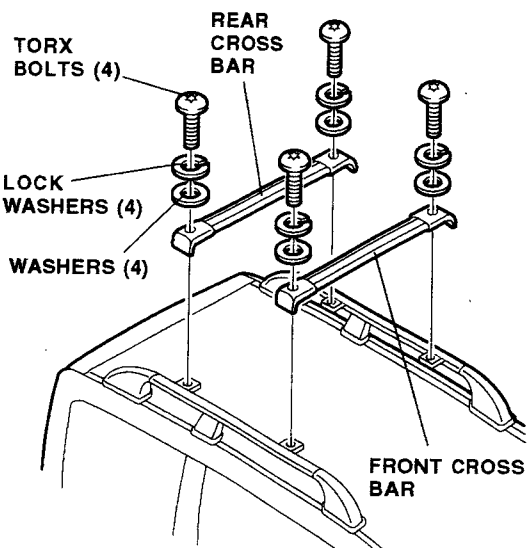


9. Odyssey LX and Pilot LX: Remove the right roof rack side rail (six screws to remove the right side rail, and four self-tapping Torx screws and washers to remove the side rail from the crossbars).

Odyssey LX/Pilot LX:

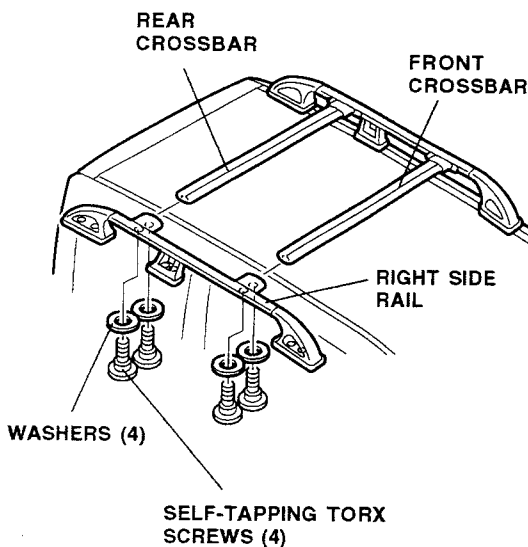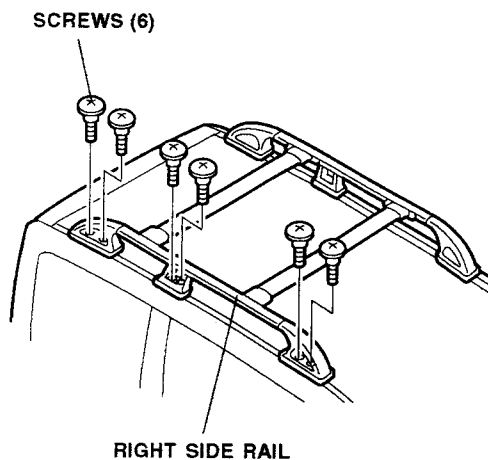


11. Remove the rubber moldings from the front and rear roof rack crossbars. Retain the rubber moldings to be reinstalled if the attachment is removed.


Element/CR-V:

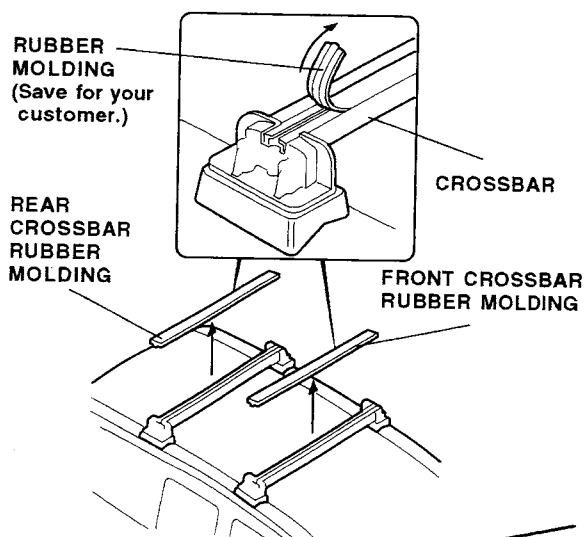

Odyssey EXIPilot EX:

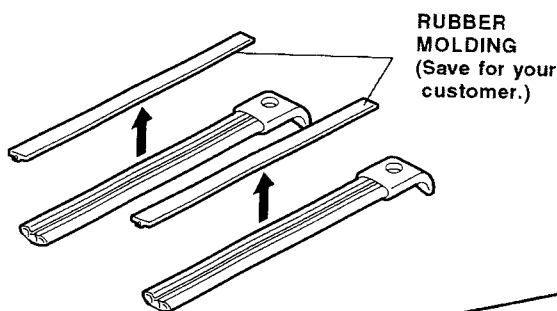


Odyssey LXIPilot LX:

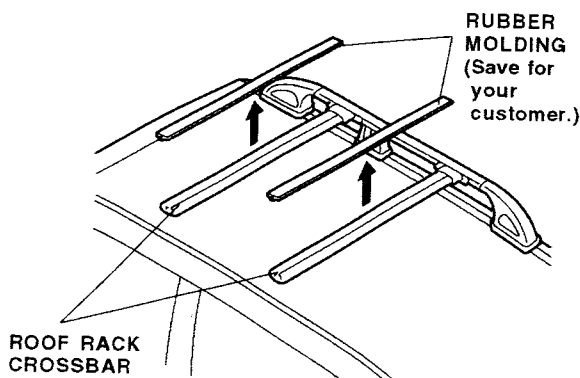


12. Slide two long T-bolts into each crossbar.


Element/CR-V:

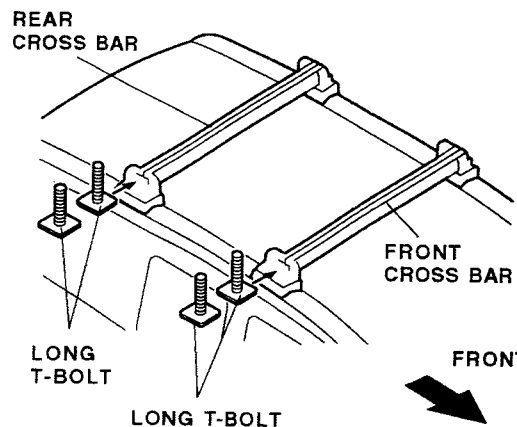


Odyssey EXIPilot EX:

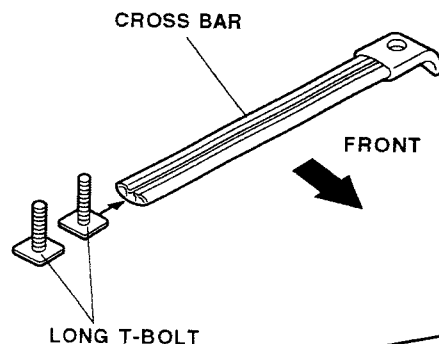


Odyssey LXIPilot LX:

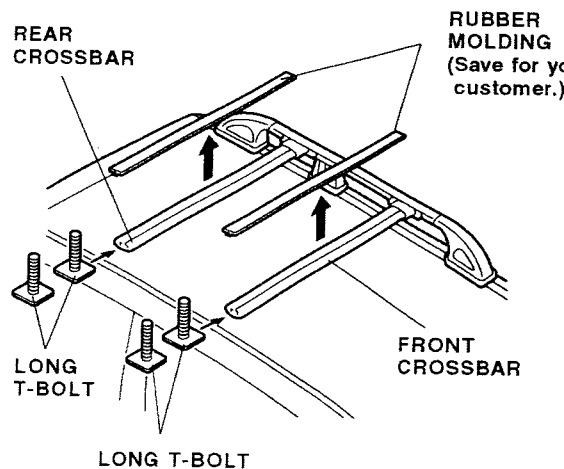

13. Reinstall the right side rail to the crossbars (if equipped), and torque the screws to 5 to 7 lb-ft (7 to 10 N-m). Reinstall the caps and crossbars (if equipped), and torque the Torx bolts to 7 lb-ft (10 N-m). Reinstall the roof rack cover (if equipped).
14. Insert the key, and turn it clockwise to unlock the front ski/snowboard attachment. Press the button and open the top frame completely.

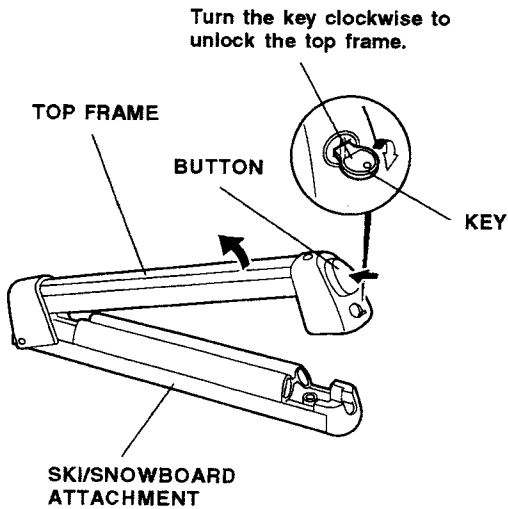


15. Position the spacers and the front ski/snowboard attachment onto the long T-bolts, and install the two knobs. Tighten the knobs securely.

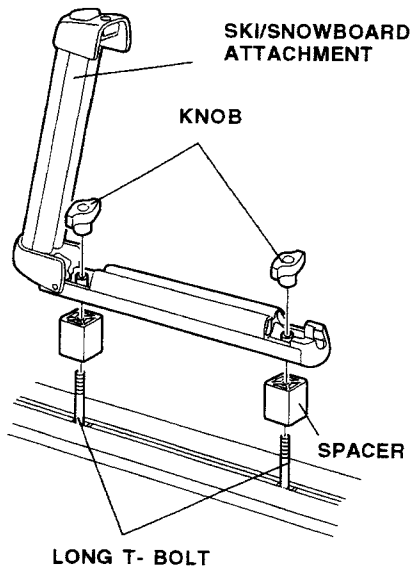

16. Repeat steps 14 and 15 to install a ski/snowboard attachment to the rear crossbar.
17. Close the top frame, and listen for it to "click" into position, then turn the key counterclockwise to lock the top frame.
18. Rock the ski/snowboard attachment in all directions to make sure it is installed securely. If necessary, retighten the T-bolts, or reinstall the ski/snowboard attachment.
19. Tell the customer to write down the key number, and put the number in a safe place in case the key is lost or stolen.
20. Put the rubber moldings removed in steps 3 and 11 in the cargo area.

Loading Skis/Snowboard on the Attachment


1. Insert the key, and turn it clockwise to unlock the top frame. Push the button and raise the top frame completely.

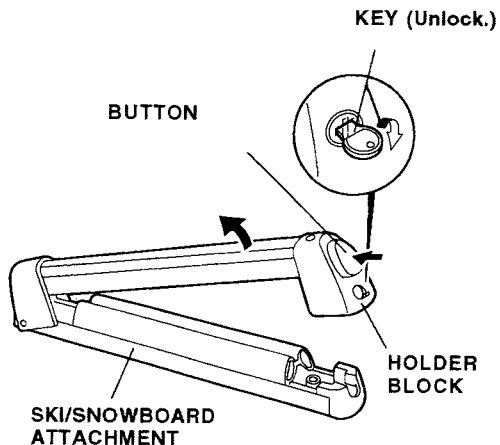


2. Position the skis or the snowboard on the attachment:

Skis

- Load with the rear of the skis facing forward and the bindings between the front and rear attachments.

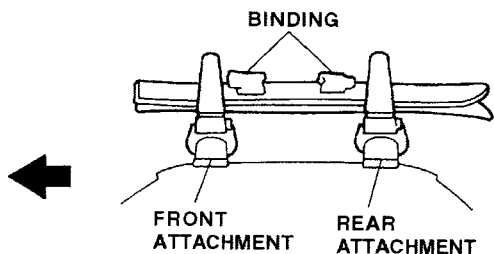


- If the bindings cannot be positioned between the front and rear attachments, install the skis with one of the bindings positioned behind the rear attachment.

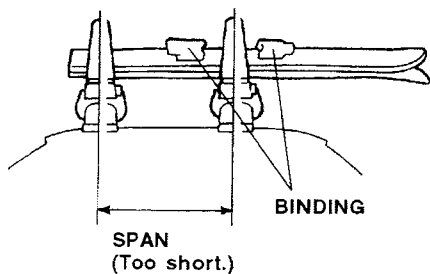


Snowboard



- Load with the bindings between the front and rear attachments.

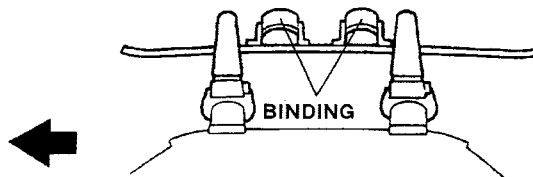

- If the bindings cannot be positioned between the front and rear attachments, install the snowboard with one of the bindings positioned behind the rear attachment.

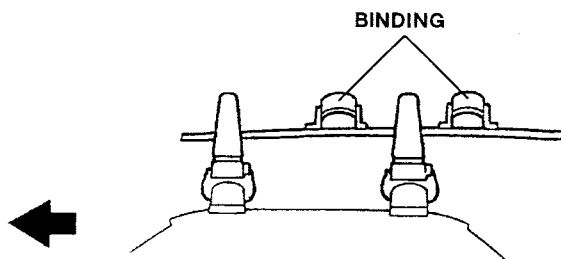


3. Close the top frame and listen for it to "click" into position. Depending on the thickness of the ski/snowboard you may need to attach the hook in the second position.

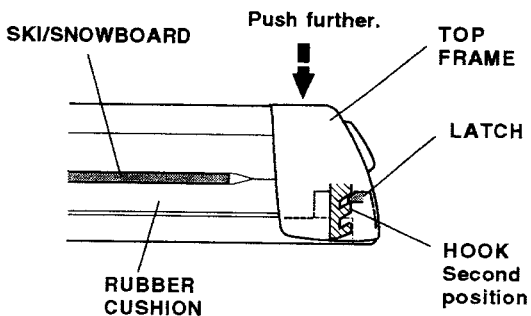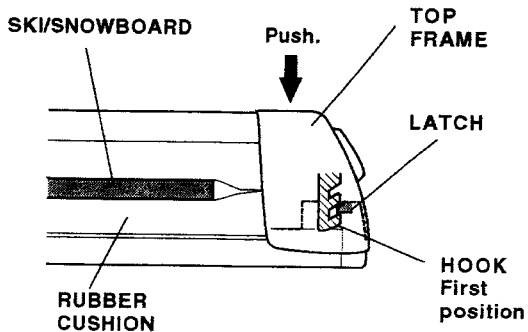


4. Lock the top frame by turning the key counterclockwise. Remove the key.

SKI/SNOWBOARD ATTACHMENT

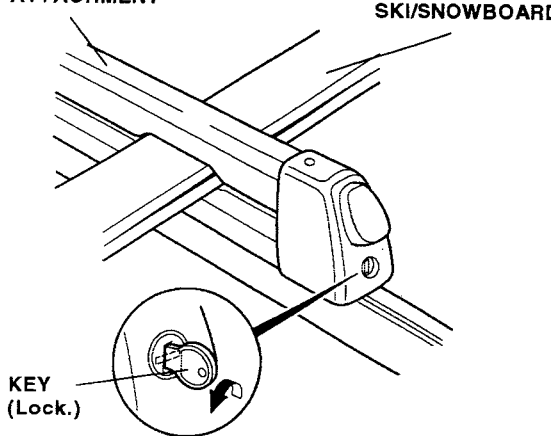

5. With the ski/snowboard attached, rock the attachment in all directions to make sure it is installed securely. Adjust as necessary.

SKI/SNOWBOARD ATTACHMENT

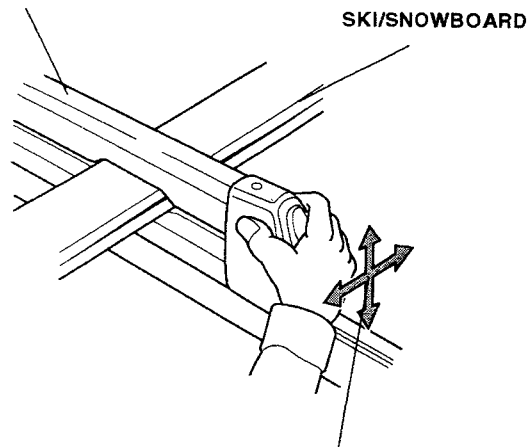

Rock the ski/snowboard attachment in all directions to make sure it is installed securely.