
 <b>HONDA</b> <b>INSTALLATION</b> <b>INSTRUCTIONS</b>	Accessory	Application	Publications No.
	SECURITY SYSTEM	2000 S2000	All 20595-21391
			Issue Date
			APRIL 2000
Revised April 25, 2000			


**PARTS LIST**

**Security System:**  
**P/N 08E51-S84-100**

2 Remote controls

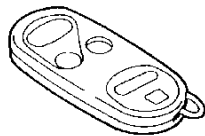

Control unit

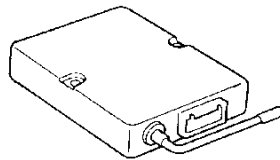


LED




Push nut



 2-Pin connector (for LED)




Disarm switch

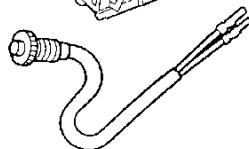

Window decal



 3-Pin connector  
(for disarm switch)



Nut, 12 mm



Washer



Owner's Manual




2 Washer-screws, 4 x 30 mm




**Attachment Kit:**  
**P/N 08E55-S2A-100**


Security system harness

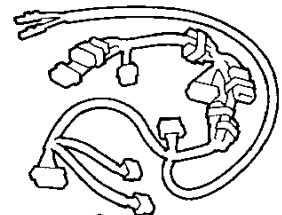


Control unit bracket

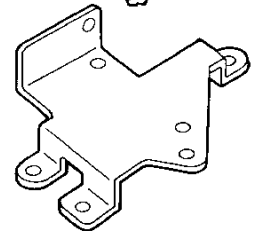


Relay, 4-pin

 

Relay, 6-pin

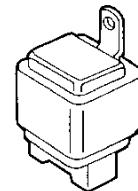

Fuse label

 


4 Grommets




4 Self-tapping screws



 17 Wire ties



Cushion tape

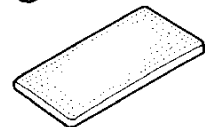


Wire tie with clip

2-Pin connector, female

Antenna bracket

Washer-bolt, 6 x 12 mm


Flange nut, 6 mm

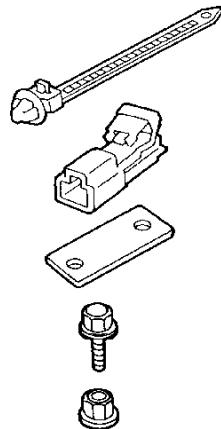

**TOOLS AND SUPPLIES REQUIRED**


- Small flat-tip screwdriver
- #2 Phillips screwdriver
- Center punch
- Eye protection (face shield, safety goggles, etc.)
- Drill
- 5.5 mm and 12 mm Drill bits
- Tape measure
- File
- Felt-tip pen
- Ratchet
- 10 mm, 12 mm, and 14 mm Sockets
- Piece of cardboard
- Diagonal cutters
- Electrical tape
- Piece of wire
- 17 mm Wrench

**Illustration of Security System Installed on the Car**

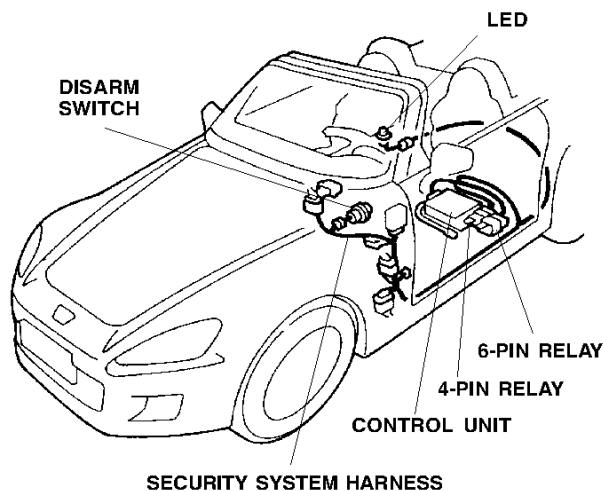

**Adjusting the Control Unit**

Use a small flat-tip screwdriver to change the mode switch and the horn/siren switch and to adjust sensitivity. The horn/siren switch must be set in the "HORN" position.

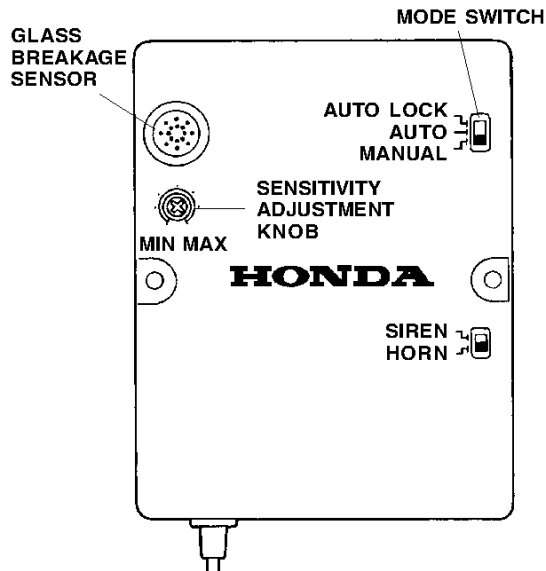

**Mode Switch:**

- Set the mode switch according to the customer's choice.
- Refer to the Owner's Manual for the explanation of each mode.

**Glass Breakage Sensor:**

Do not attach anything like scotch tape over the holes; this is a microphone pickup.

**Sensitivity Adjustment Knob:**

- Adjust the sensitivity only if the customer requests it; the sensitivity adjustment of the glass breakage sensor is factory-set.
- Be careful when you adjust the sensitivity; if you raise the sensitivity too much, the security system can give a false alarm, and if the sensitivity is too low, the security system may not work even if glass is broken.

**INSTALLATION**

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your car. These procedures should not be attempted by "do-it-yourselfers."

NOTE: The keyless entry transmitters supplied with the vehicle will unlock the doors but **will not** disarm the security system. Discard the two keyless entry transmitters, and use the new security system transmitters supplied with the security system.




KEYLESS ENTRY TRANSMITTER (Discard)




SECURITY SYSTEM TRANSMITTER (Supplied with security system)


1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.
3. Remove the front left door sill trim (three retaining clips).

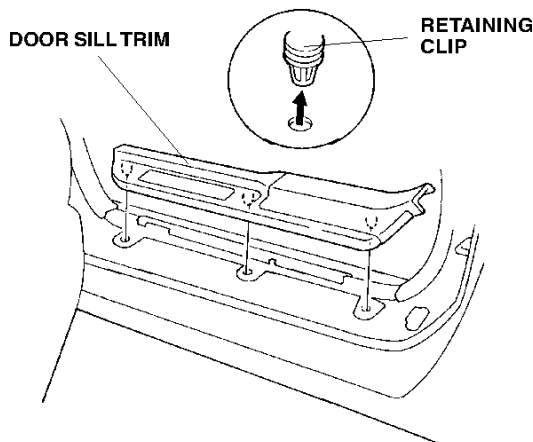


4. Remove the left kick panel (two clips).

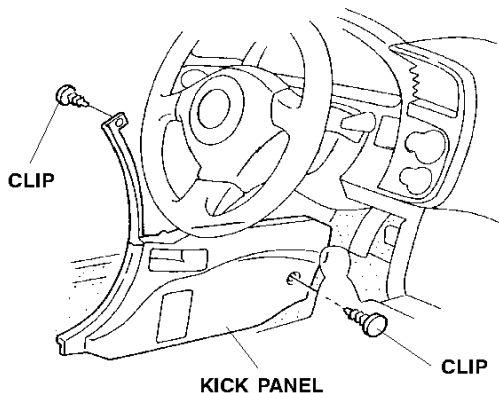


5. Remove the lower steering column cover (three screws, and pull gently to release the four tabs).

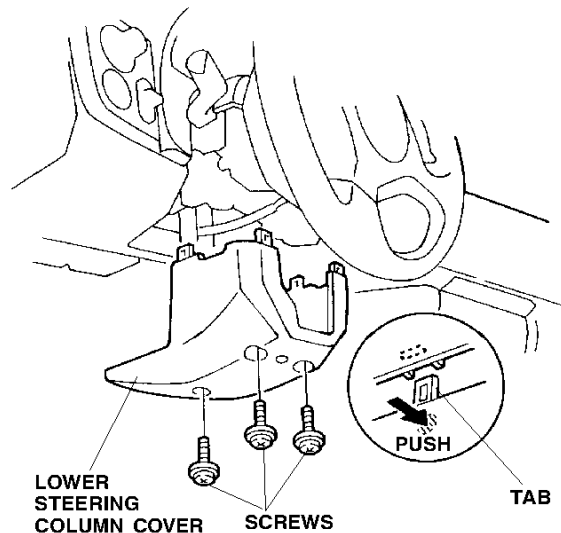


6. Remove the driver's seat (four bolts, and unplug the connector). Place the seat on a piece of cardboard.

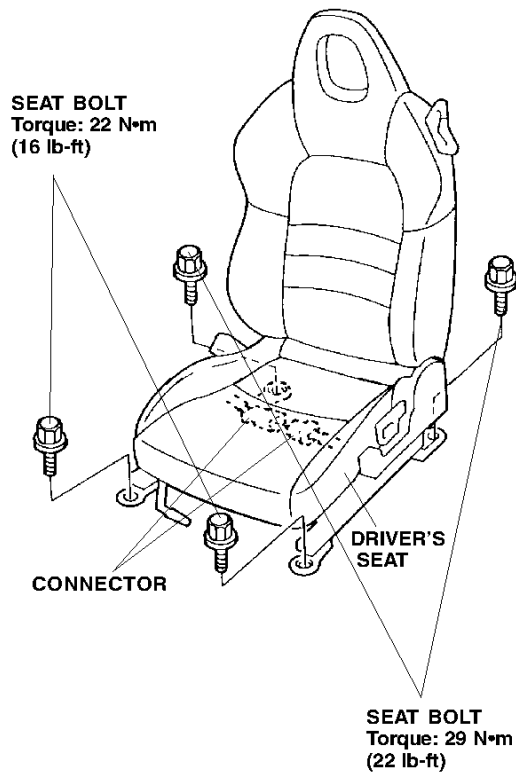


7. Remove the roll bar lower trim from the roll bar (two hooks and five retaining tabs).

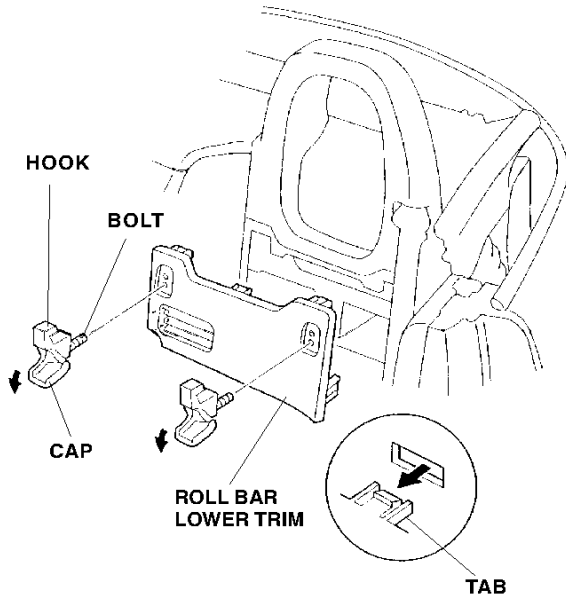

8. Remove the left rear side trim (one self-tapping screw and one retaining clip).

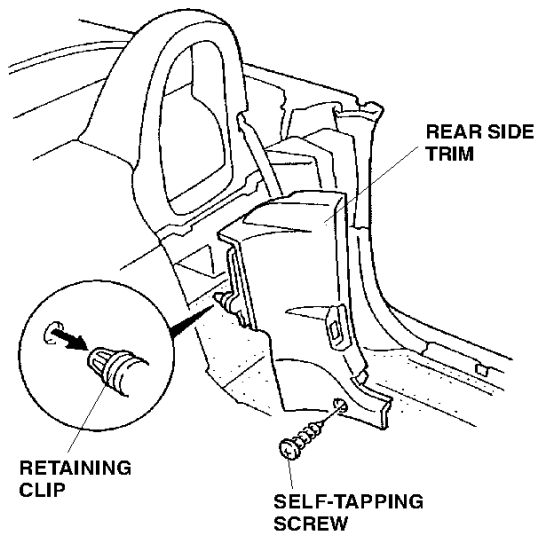


9. Loosen the nut lock and remove the shift knob.

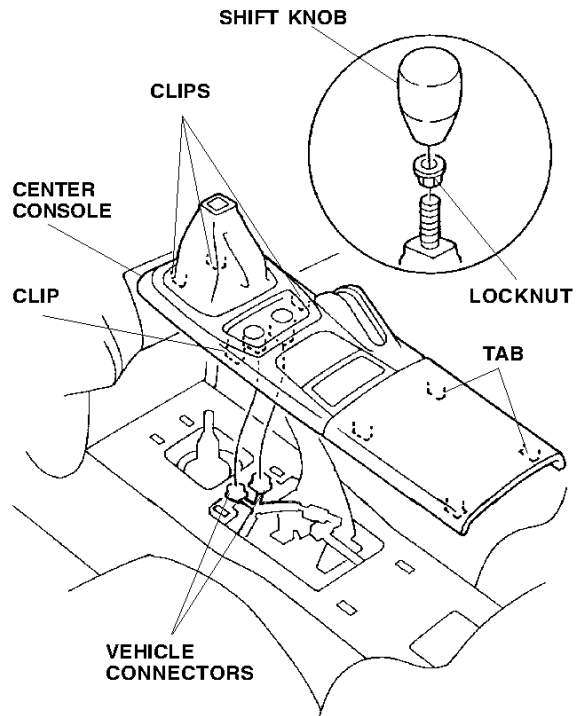


10. Remove the center console (gently lift up to remove the eight clips and two connectors).


11. Push the four grommets into the square holes in the bottom of the driver's seat cushion.

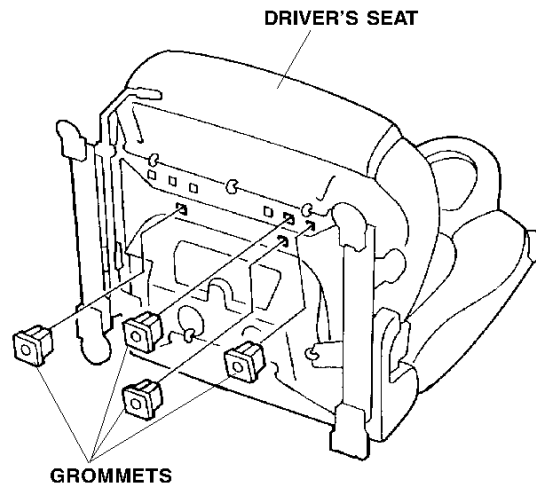

12. Install the control unit on the control unit bracket (two 4 x 30 mm screws).

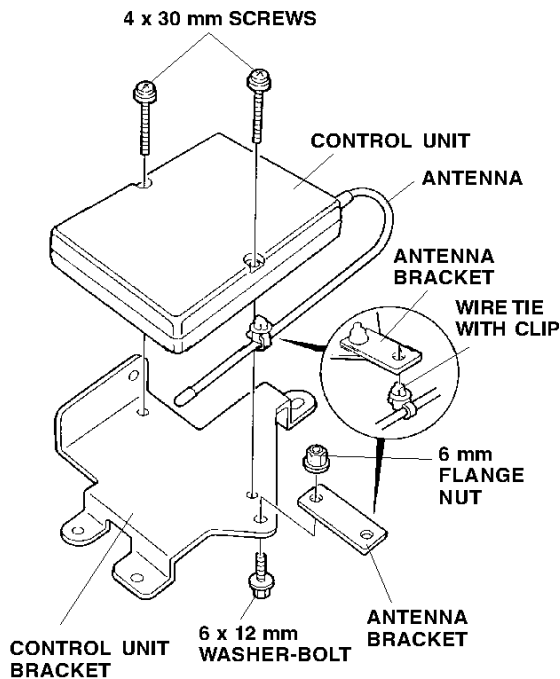


13. Install the antenna bracket on the control unit bracket (one 6 x 12 mm washer-bolt and one 6 mm flange nut).
14. Attach the wire tie with clip to the antenna, then push the clip into the hole in the antenna bracket.
15. Install the control unit bracket and the 4-pin relay onto the bottom of the driver's seat cushion (three self-tapping screws).

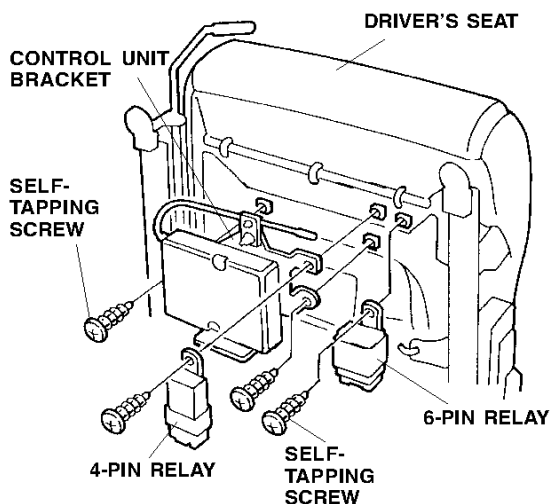


16. Install the 6-pin relay onto the bottom of the driver's seat cushion (one self-tapping screw).


17. Under the dash on the driver's side of the vehicle, measure and mark the bottom of the dashboard.

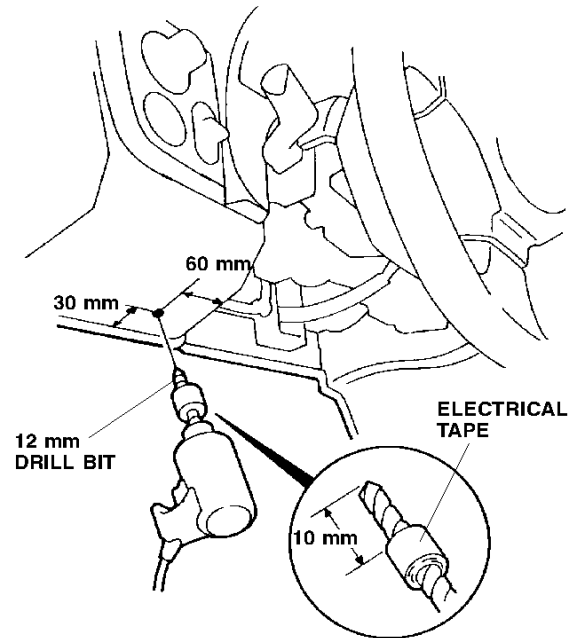


18. While wearing eye protection, lightly center-punch the mark, and drill a 12 mm hole:
- Wrap electrical tape around the end of the 5.5 mm and 12 mm drill bits about 10 mm from the tip.
  - First drill a pilot hole with a 5.5 mm bit, then finish with a 12 mm bit.
  - Remove all burrs.
19. Route the terminal ends of the disarm switch through the hole you just drilled, and secure it with the washer and the 12 mm nut from the kit.

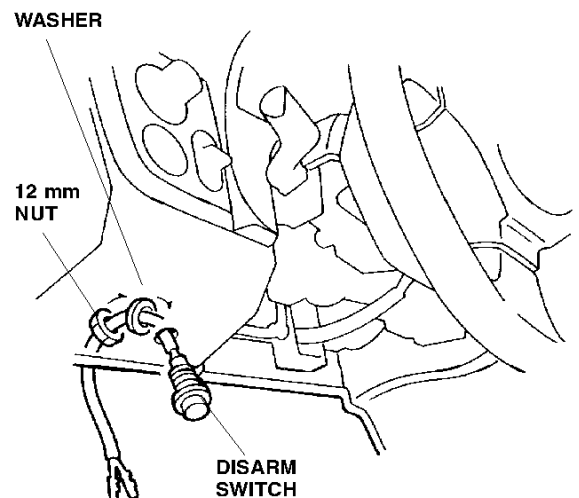

20. Get the 3-pin connector included in the kit. Firmly push the disarm switch terminals into the 3-pin connector until they click into position, then lower the lock.

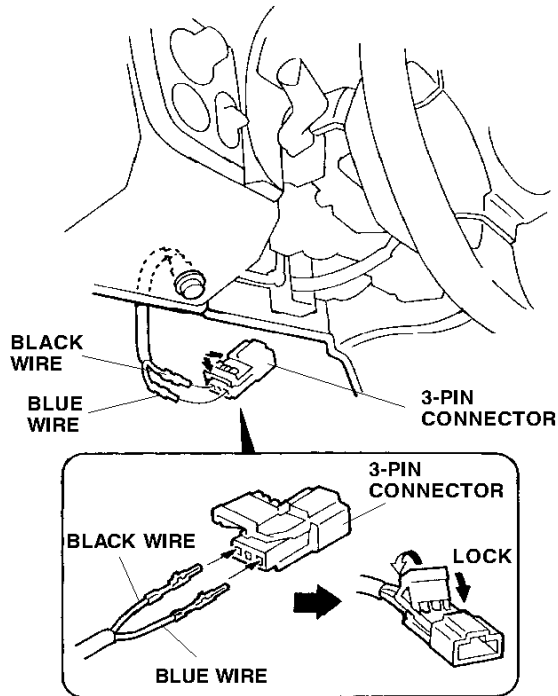


21. Get the center console. Measure and mark the console in the area shown.

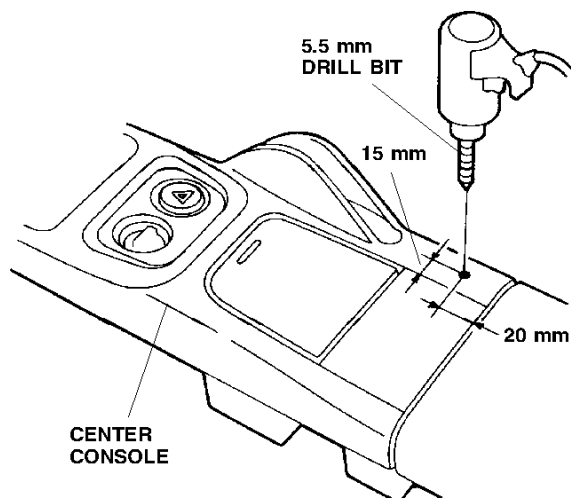


22. While wearing eye protection, lightly center-punch the mark; then drill a 5.5 mm hole through the center-punched mark. Remove all burrs.

23. Route the terminal ends of the LED through the hole you just drilled, and secure the LED with the push nut. Install the push nut securely.

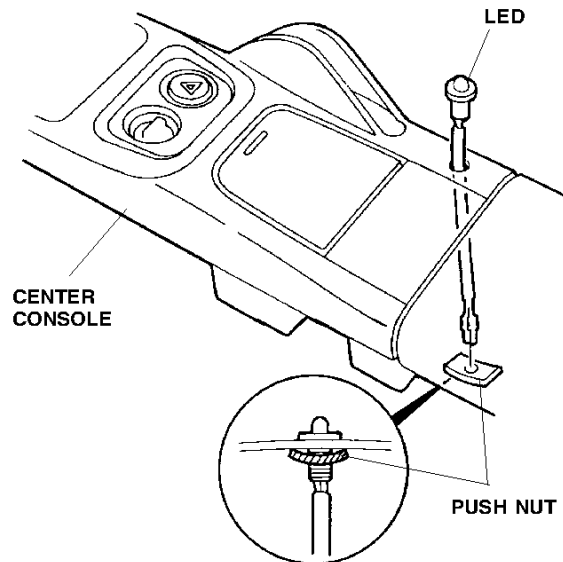


24. Get the 2-pin connector included in the kit. Firmly push the LED terminals into the 2-pin connector until they click into position, then lower the lock.

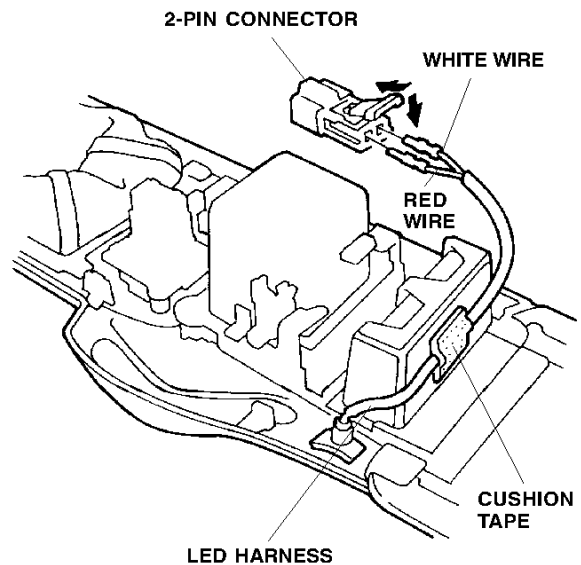


25. Secure the LED harness to the back of the center console with the cushion tape as shown.

26. On the driver's side, lift up the floor carpet, then route the 22-pin, 4-pin, and 6-pin connectors of the security system harness out through the cutout in the floor carpet.

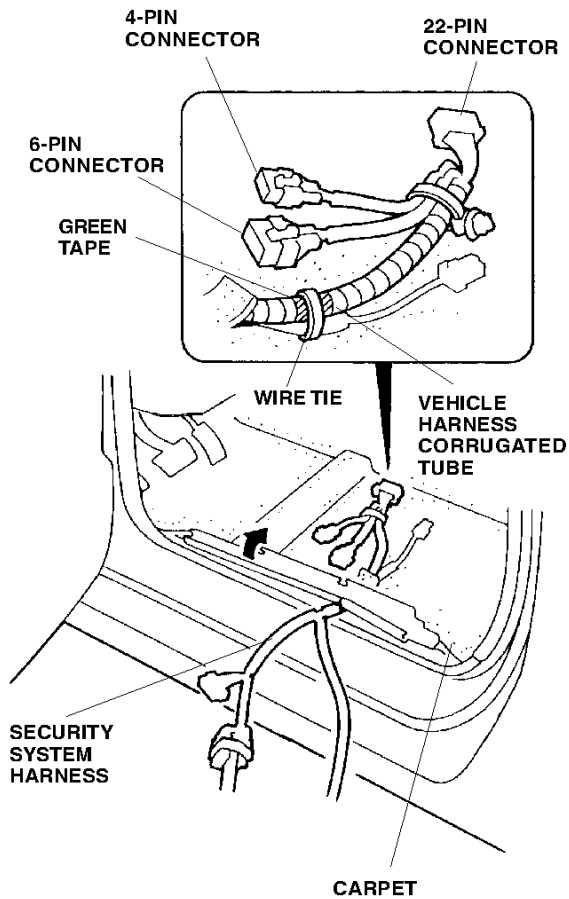

27. Align the green tape of the security system harness with the corrugated tube of the vehicle harness, then secure them with one wire tie.


28. Attach a piece of wire to the terminal end of the security system harness, and route the harness to the parking brake lever through the rear console.

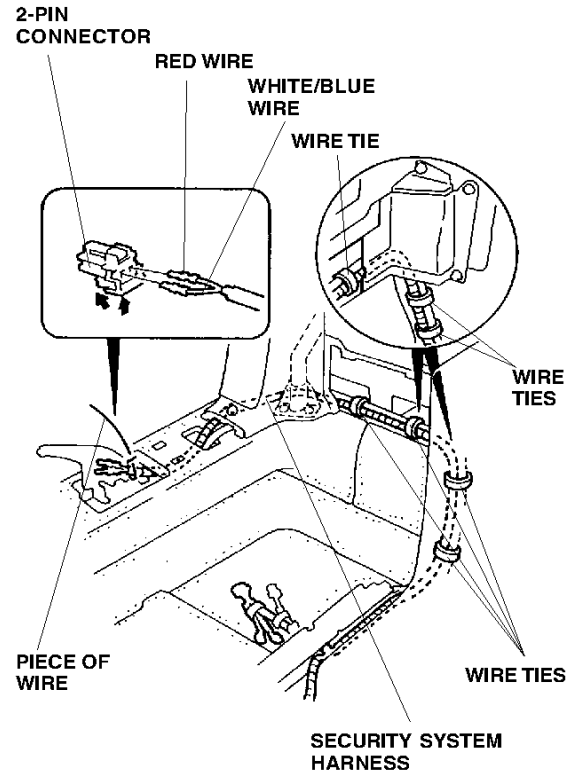


29. Get the 2-pin connector included in the kit. Firmly push the security system harness terminals into the 2-pin connector until they click into position.

30. Secure the security system harness to the vehicle harness with four wire ties in the areas shown.

31. Plug the 2-pin connector of the LED installed on the center console into the 2-pin connector of the security system harness.

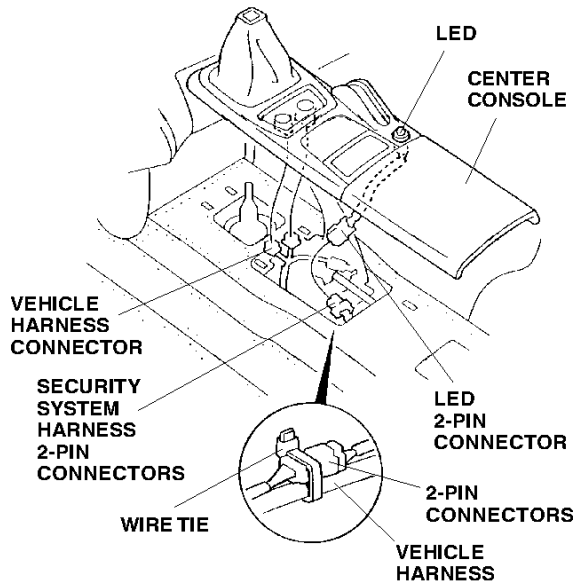


32. Secure the 2-pin connectors to the vehicle harness with one wire tie.
33. Plug in the remaining center console connectors, then reinstall the console. Make sure that the wire harnesses are not pinched.
34. Route the two 12-pin connectors of the security system harness forward and under the carpet.

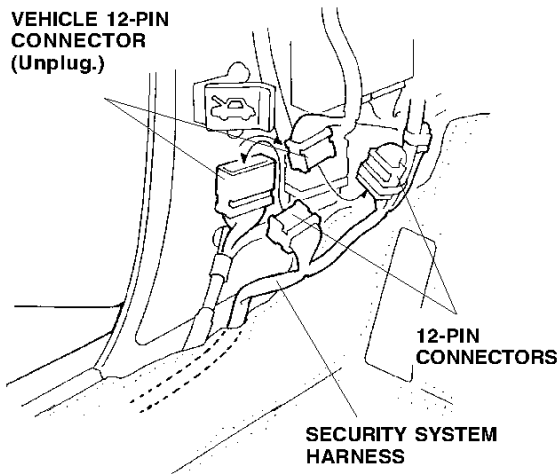


35. Next to the hood opener lever, locate the two 12-pin connectors of the vehicle harness. Unplug the connectors, and plug the 12-pin connectors of the security system harness between.

36. Attach the two fuse labels (option fuse 3A) to the fuse case on the security system harness.

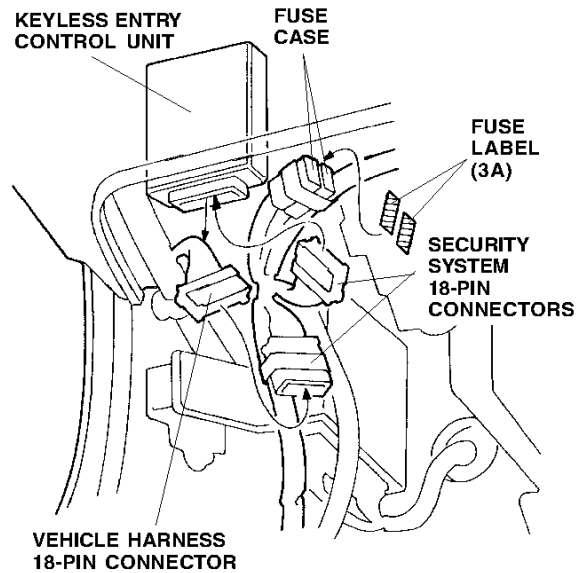


37. Unplug the vehicle 18-pin connector from the keyless entry control unit, and plug the 18-pin connectors of the security system harness in between.
38. Unplug the light switch 16-pin connector, and plug the 16-pin connector of the security system harness in between.

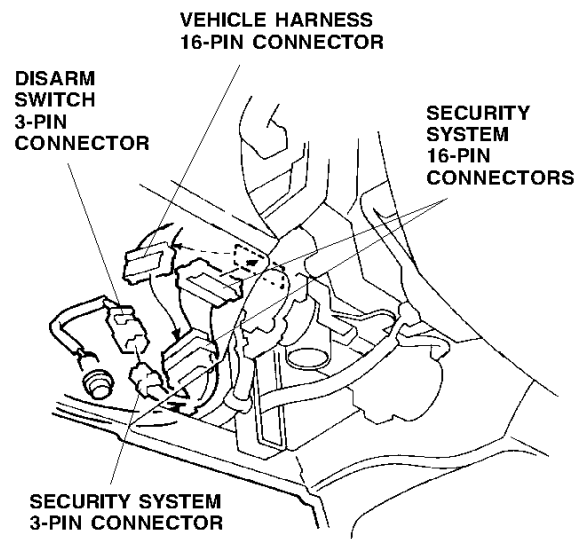


39. Plug the disarm switch 3-pin connector into the security system harness.



- 40. Secure the security system harness to the vehicle harness with five wire ties in the areas shown.

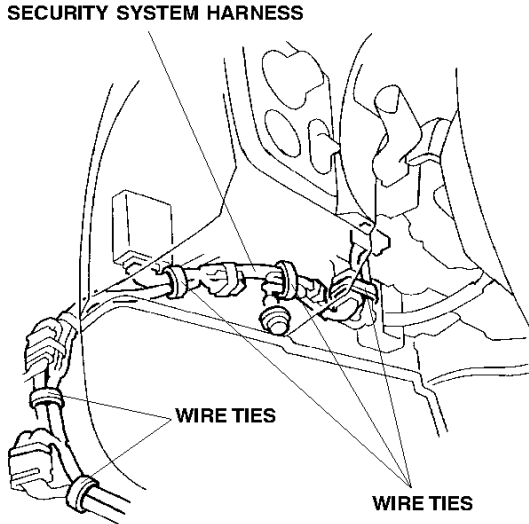


- 41. Along the door opening, secure the security system harness to the vehicle harness with four wire ties.

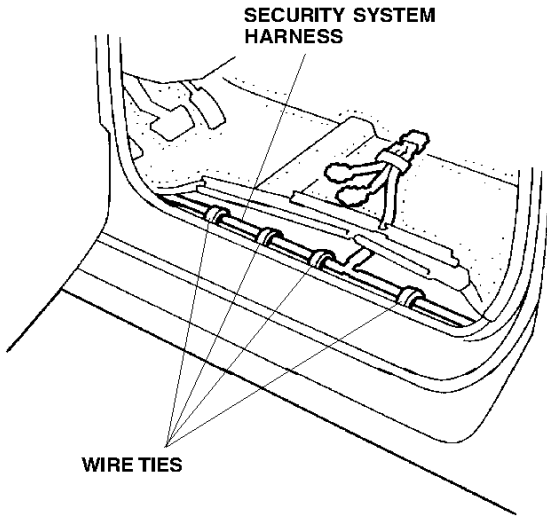

- 42. Place the driver's seat into position in the car.

- 43. Tilt the driver's seat-back forward, then reach under the front of the seat, and plug the 22-pin connector of the security system harness into the control unit. Plug the 4-pin and 6-pin connectors into the 4-pin and 6-pin relays.

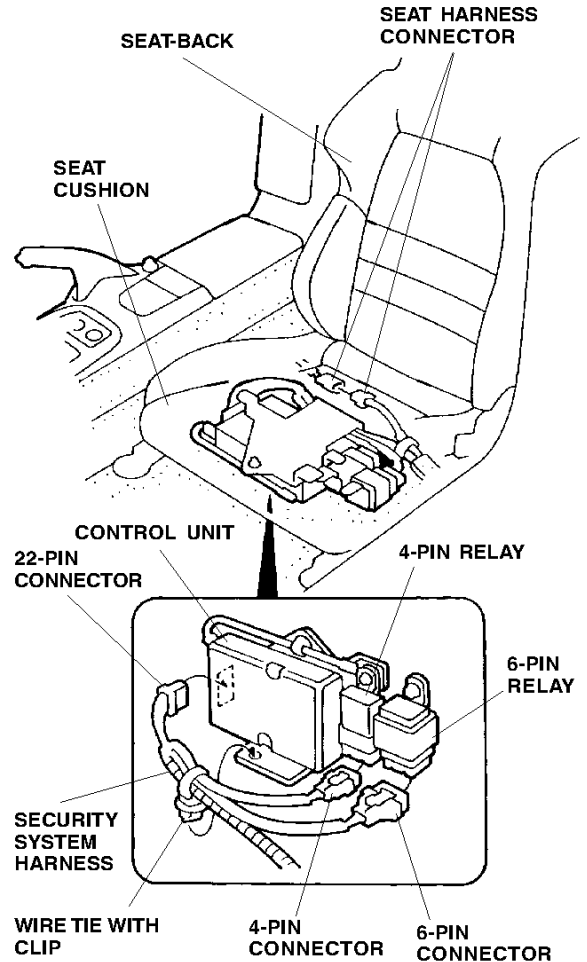

- 44. Push the wire tie with clip of the security system harness into the hole in the control unit bracket.
- 45. Plug in the seat harness connectors, then reinstall the driver's seat. Torque the rear seat bolts to 29 N•m (22 lb-ft), and torque the front seat bolts to 22 N•m (16 lb-ft).
- 46. Check that all wire harnesses are routed properly and all connectors are plugged in.
- 47. Reinstall all removed parts.
- 48. Reconnect the negative cable to the battery.
- 49. Reset the radio station presets.
- 50. Check the operation of the security system according to the Owner's Manual supplied.