
 <b>HONDA</b> <b>INSTALLATION</b> <b>INSTRUCTIONS</b>	Accessory	Application	Publications No.
	IN-DASH CD CHANGER P/N 08A06-3B1-300	2000 ACCORD 2- AND 4-DOOR (EXCEPT EX)	All 20599
			Issue Date AUG 1999

## PARTS LIST

In-dash CD changer

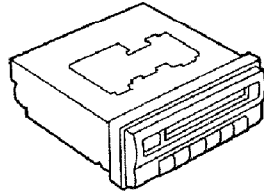

Owner's Manual




6 Washer-screws, 5 x 8 mm




Washer-screw, 4 x 8 mm




Wire tie (not used)

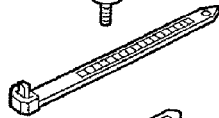

Harness clip

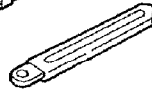

Adhesive strips (not used)

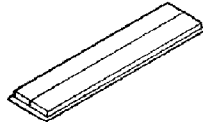

## TOOLS AND SUPPLIES REQUIRED

#2 Phillips screwdriver

Shop towel

Masking tape

Flat-tip screwdriver


Gloves

## INSTALLATION



**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your car. These procedures should not be attempted by "do-it-yourselfers."

1. Write down the frequencies for the radio preset buttons.
2. Disconnect the negative cable from the battery.

3. If equipped, remove the ashtray with cigarette lighter (two self-tapping screws, one connector and four retaining clips).

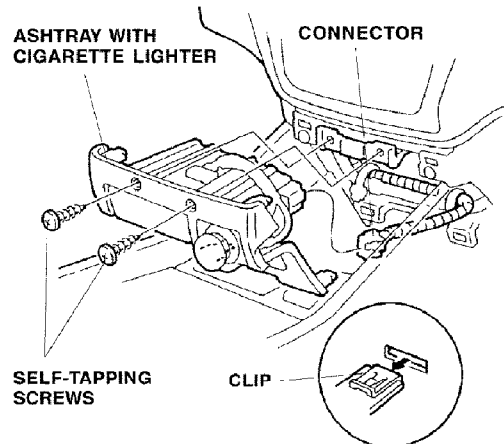


4. Attach a piece of masking tape onto the console panel below the clock.

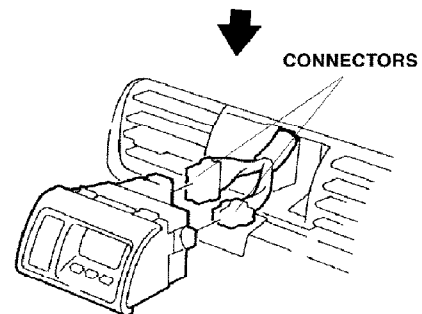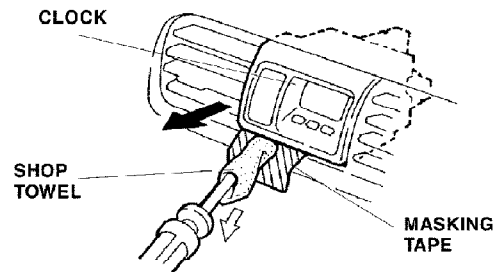


5. Using a flat-tip screwdriver wrapped with a shop towel, gently pry up on the clock to release the clips; then disconnect the connectors and remove the clock.


- Remove the console panel (three self-tapping screws, five retaining clips, two retaining tabs, and two connectors).

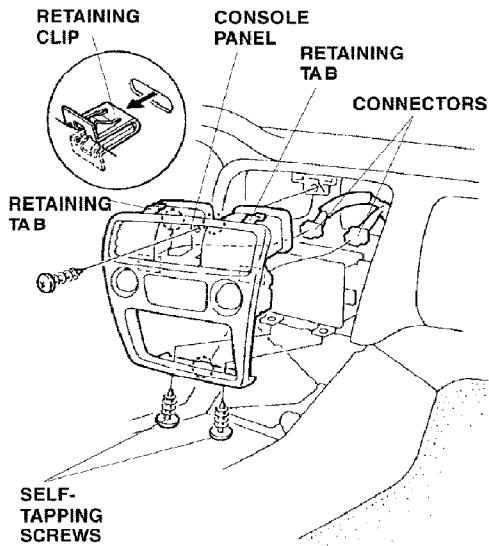


- Remove the radio/pocket assembly (four radio mounting bolts, and unplug the radio connector and the antenna lead).

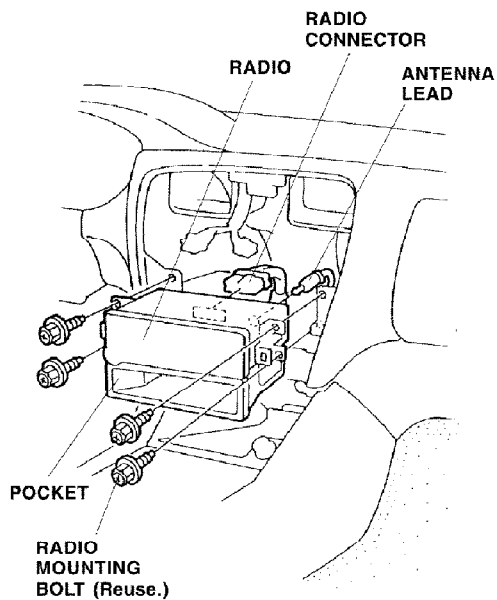


- Remove the left and right radio brackets from the radio/pocket assembly (four bolts and two self-tapping screws). Discard the pocket and the two self-tapping screws.

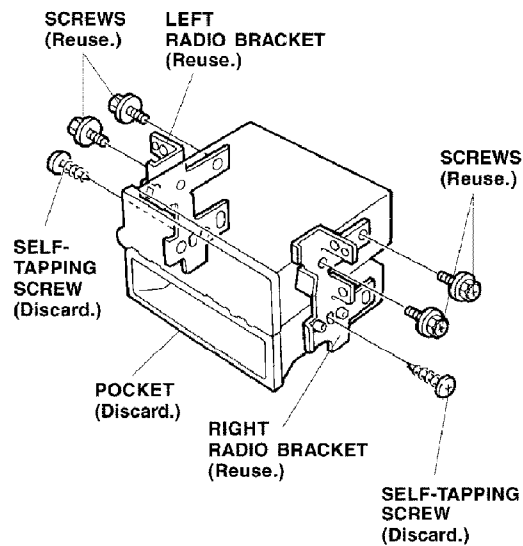


- Unpack the in-dash CD changer. While wearing gloves, lift up and remove the shipping cover and label. Discard the shipping cover and label.

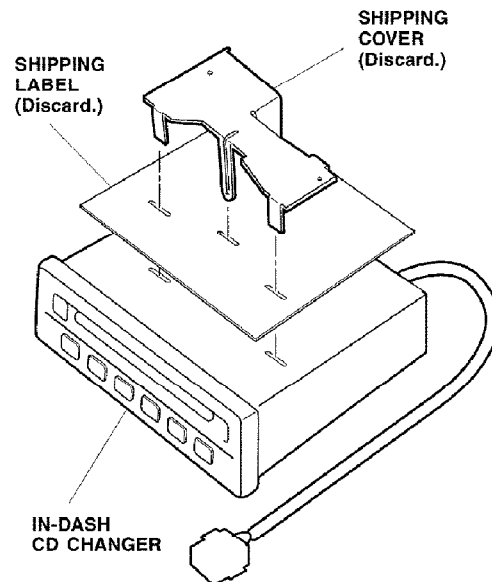


- Attach the harness clip to the back of the in-dash CD changer with one 4 x 8 mm washer-screw.

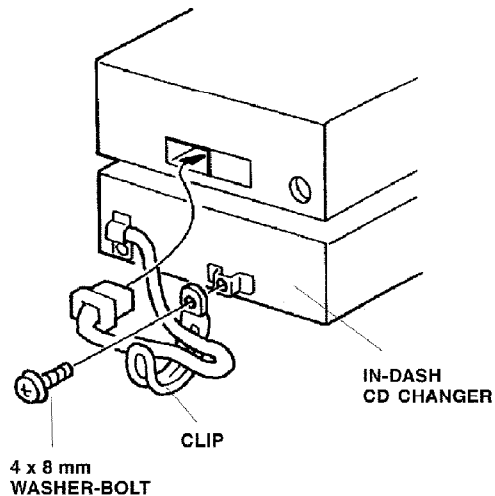

- Fold the bus cable in half, and secure it with the harness clip.
- Position the radio on the in-dash CD changer, then assemble the in-dash CD changer and the radio with the brackets and the four screws you removed in step 8 and the four 5 x 8 mm washer-screws provided. Plug the bus cable connector into the back of the radio.

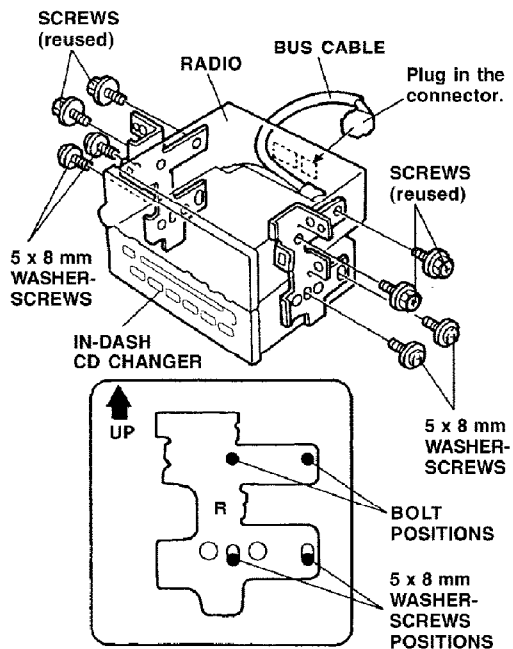

- Install the radio/in-dash CD changer assembly with the four radio mounting bolts removed in step 7.

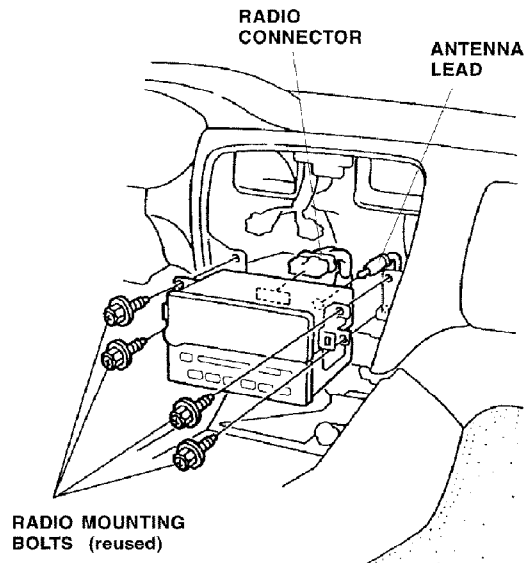

- Plug in the radio connector and the antenna lead.
- Reinstall all removed parts.
- Check that all wire harnesses are routed properly and all connectors are plugged in.
- Reconnect the negative cable to the battery.
- Reset the radio station presets and the clock.
- Check that the radio and the in-dash CD changer operate properly as described in the respective owner's manuals.