


 <b>INSTALLATION INSTRUCTIONS</b>	Accessory	Application	Publications No.
	<b>ARMREST PAD (PASSENGER'S SIDE)</b> P/N 08U90-S10-160	<b>2000 CR-V</b>	<b>All 20629</b>
			Issue Date <b>OCT 1999</b>

## PARTS LIST

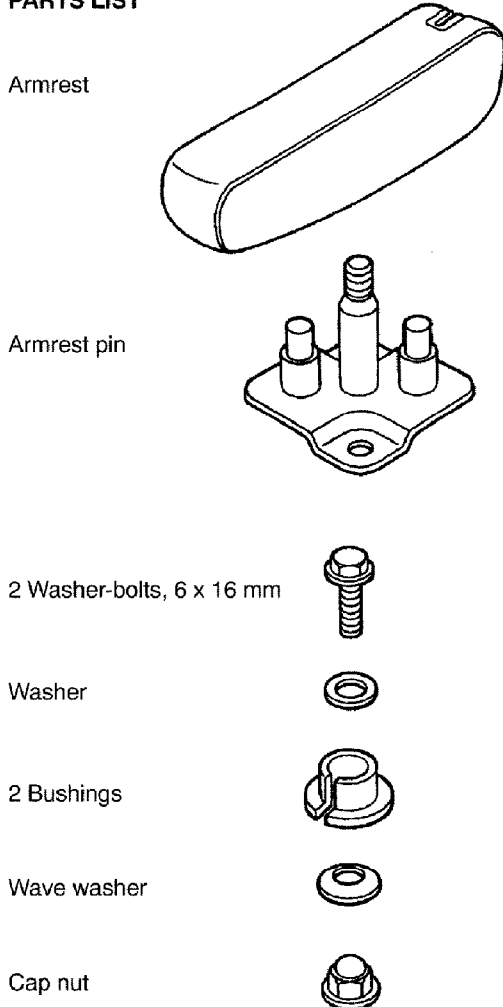


## TOOLS AND SUPPLIES REQUIRED

Tape measure  
 Utility knife  
 Ratchet  
 10 mm and 17 mm Sockets  
 Felt-tip pen  
 Torque wrench

## INSTALLATION


NOTE: This armrest is installed only on the left side of the passenger's seat.

1. Locate the armrest bracket inside the passenger's seat upper seat-back:
  - Using a tape measure and a felt-tip pen, measure 185 mm from the top of the seat frame side cover, and make a mark on the upper seat-back cushion.

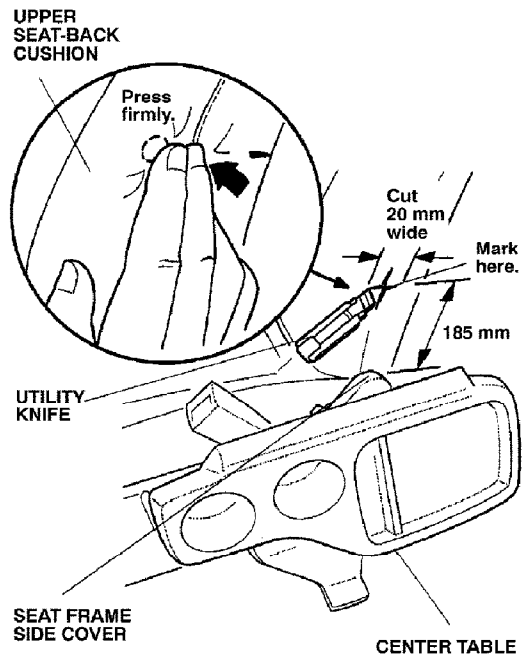


- While firmly pressing on the side of the upper seat-back cushion with the tip of your finger at the mark, verify the location of the armrest bracket.
- Using a utility knife, cut an "X" in the upper seat-back cushion approximately 20 mm long in both directions across the mark to gain access to the armrest bracket. Cut through the urethane pad along with the seat-back cover.


- Bend back the seat-back cover and the urethane pad to insert the armrest pin into the hole of the armrest bracket.

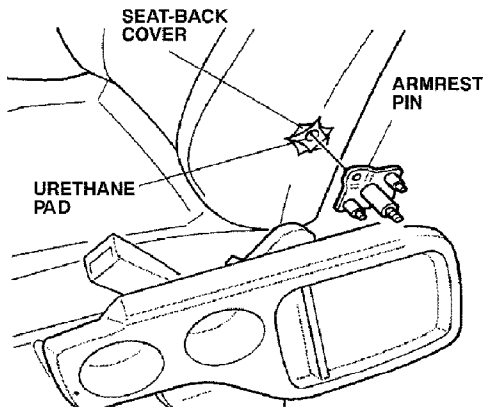


- Using a felt-tip pen, mark the seat-back cover all the way around the outer edge of the armrest pin.

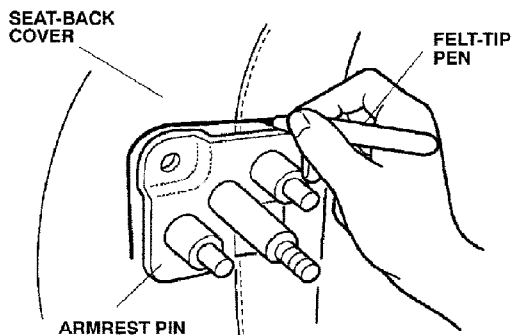


- Remove the armrest pin, and use a utility knife to cut out the seat-back cover 5 mm to the inside of the marked area. Be sure to round the corners. Cut out the urethane pad along with the seat-back cover.

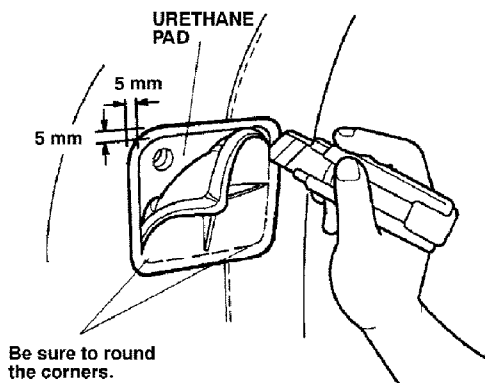

- Reposition the armrest pin on the armrest bracket with the seat cushion material over the edges of the armrest pin, and install the two 6 mm washer-bolts. Torque the 6 mm washer-bolts to 10 N·m (7 lb-ft).

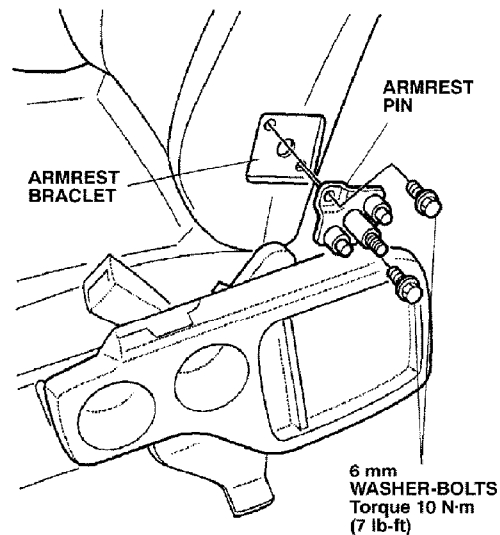

- Zip open the armrest cover, and push up the armrest cover to expose the opening.

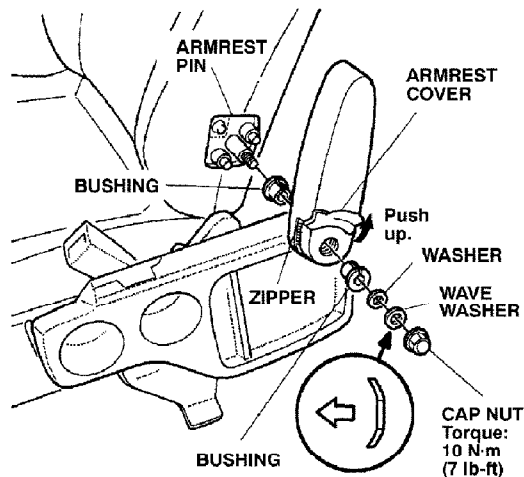

- Slide one bushing onto the armrest pin; position the armrest on the pin, then install the other bushing, the flat washer, the wave washer (in the direction shown), and the cap nut. Torque the cap nut to 35 N·m (25 lb-ft).
- Pull the armrest cover down into position, and zip it closed.
- Check operation of the armrest by moving it up and down.