


Remote Control Transmitter

Controls and Functions

- The doors cannot be locked or unlocked with the remote control transmitter when the key is in the ignition switch.
- The doors cannot be locked if any one of the doors is open.
- The glass hatch cannot be unlocked with the remote control transmitter when the key is in the ignition switch.
- The panic mode will not work if the ignition switch is set at the "ON" (II) position.

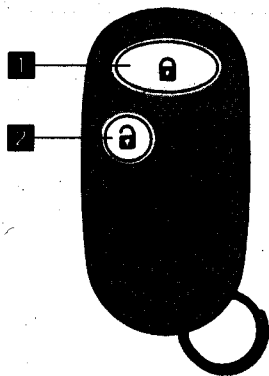

1



LOCK Button

When used alone, this button locks the doors. The horn will sound once if the doors are relocked within 5 seconds.

2



UNLOCK Button


When this button is pressed once, only the driver's door unlocks. When this button is pressed a second time within 30 seconds, all the other doors unlock.

When a door is unlocked, the interior light illuminates if the interior light switch is set at the door activated (center) position.

Note:

When you unlock the doors with the remote control transmitter, open a door within 30 seconds. If none of the doors are opened within 30 seconds, the doors will automatically relock.

Remote Control Transmitter

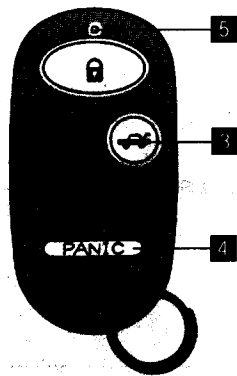

3



Glass Hatch Release Button

When this button is pressed and held for more than 1 second, the glass hatch releases.

4

PANIC


PANIC Button

When this button is pressed and held for more than 1 second, the system is set to the panic mode.

The horn will sound for 30 seconds.

To stop the panic mode, press the lock, unlock, glass hatch release or panic button, or turn the ignition switch to the "ON" (II) position.

5

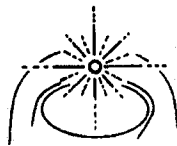

Signal Indicator LED


The LED lights when a remote control button is pushed and the remote control is transmitting a control signal.





The LED indicates the remote control's battery condition. If the brightness of the LED dims, the battery should be replaced.

Remote Control Programming


How to Program a Remote Control Transmitter

- Steps 2 through 12 must each be completed within 5 seconds. Step 13, must be completed within 10 seconds for each remote.
- Up to three remotes can be stored in the system's memory.
- All remotes to be programmed must be on hand.
- A non-programmed remote will work for this procedure.
- Turn the ignition key to the "OFF" position to complete the programming procedure.

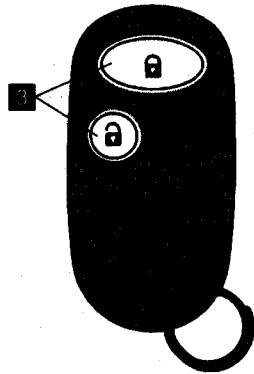


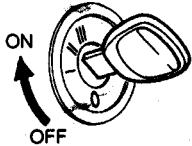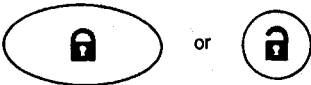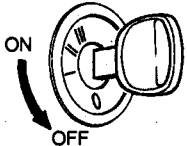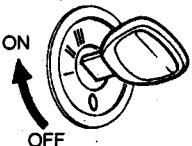1	Disarm the security system.
2 	Turn the ignition key to the "ON" (II) position.
3 	Press the "LOCK" or "UNLOCK" button on the remote control transmitter.
4 	Turn the ignition key to the "OFF" (0, I) position.
5 	Turn the ignition key to the "ON" (II) position.

Remote Control Programming

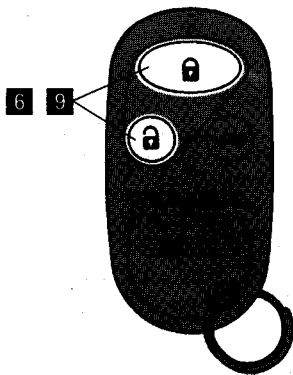


6

 


Press the "LOCK" or "UNLOCK" button on the remote control transmitter.

7

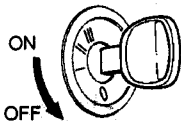


Turn the ignition key to the "OFF" (0, I) position.

8

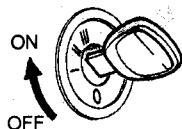

Turn the ignition key to the "ON" (II) position.

 9




Press the "LOCK" or "UNLOCK" button on the remote control transmitter.

10



Turn the ignition key to the "OFF" (0, I) position.


11

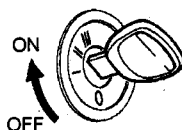

Turn the ignition key to the "ON" (II) position.

Remote Control Programming


12

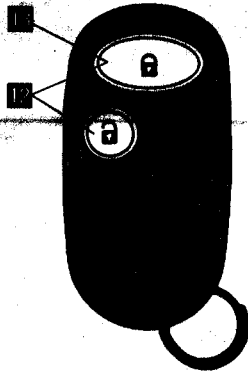

Press the "LOCK" or "UNLOCK" button on the remote control transmitter.

- The power door locks will cycle to indicate that the system is in programming mode.
- To terminate the programming mode at this point, either turn the ignition key to the "OFF" position or leave the remote's buttons untouched for over 10 seconds.

13

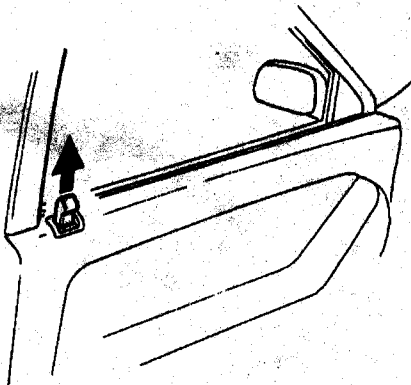

Press the "LOCK" button on each remote (one at a time) that is to be stored in memory.

- The power door locks will cycle to confirm each entry.
- This programming step within 10 seconds for each remote or else the programming mode will terminate.

Note:

Only 3 remotes can be stored in the system's memory.