




INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
IN-DASH CD CHANGER/ CASSETTE PLAYER	ELEMENT (LX)	Issue Date OCT 2003


PARTS LIST

**Cassette Player (sold separately):
P/N 08A03-5B1-050**

Cassette player

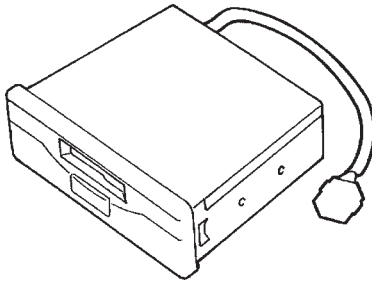


Owner's Manual

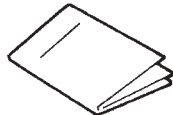


7 Washer-screws, 5 x 8 mm
(2 not used)



Wire tie (not used)

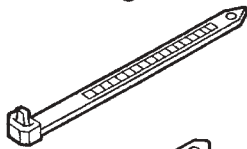


Harness clip

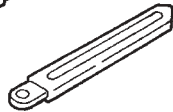


**In-Dash CD Changer (sold separately):
P/N 08A06-3B1-300**

In-Dash CD changer

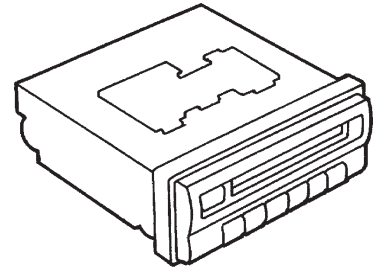

Owner's manual

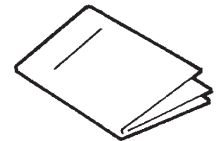


6 Washer-screws, 5 x 8 mm
(2 not used)




Washer-screw, 4 x 6 mm




Wire tie (not used)

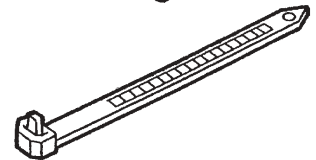

Harness clip

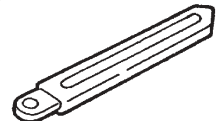

Adhesive strips
(1 not used)

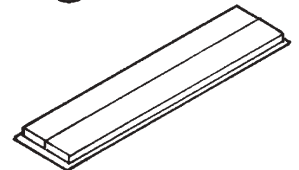

TOOLS AND SUPPLIES REQUIRED

- Phillips screwdriver
- Small flat-tip screwdriver
- Isopropyl alcohol
- Shop towel
- 10 mm Combination wrench


INSTALLATION

Customer information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.

Removing the Parts


3. Wrap the shop towel to the top of the flat-tip screwdriver, and insert it to grooves in the audio panel. Pull the audio panel out toward you to release the five clips and remove the audio panel. Take care not to damage the clips.

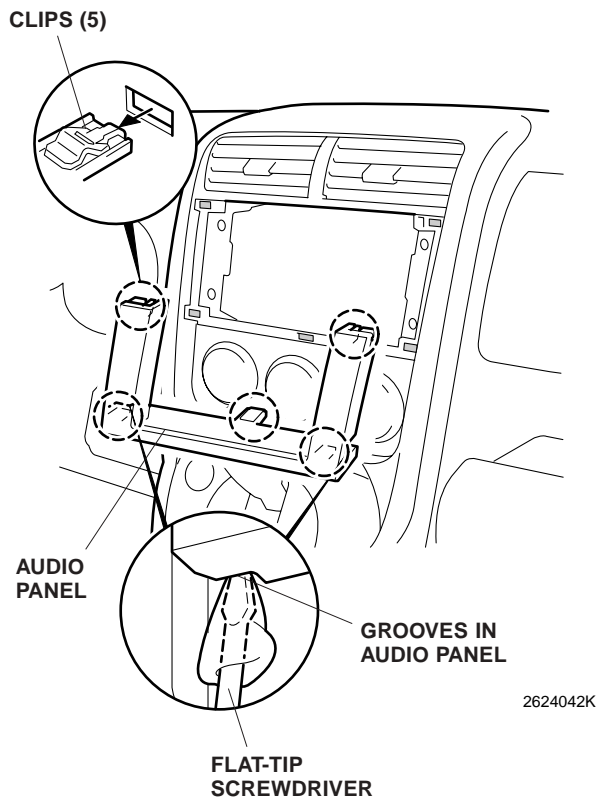

4. Remove the four washer-screws fastening the audio unit to the instrument panel and pull the audio unit out. Unplug the vehicle connector and antenna lead from the rear of the audio unit and remove the audio unit.

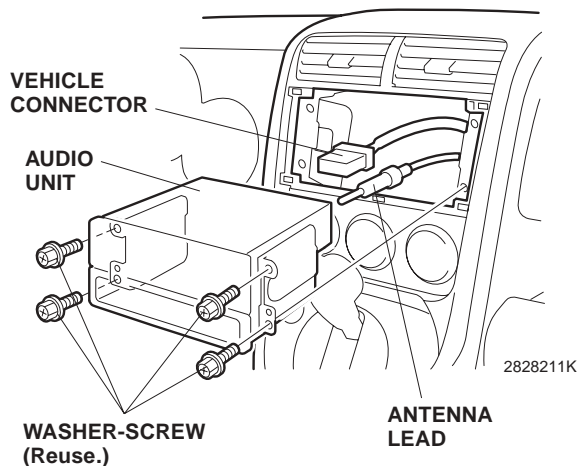


5. Remove the four screws and two self-tapping screws fastening the right and left brackets to the audio unit and pocket, and separate the pocket from the audio unit. Save the pocket, screws and brackets for your customer.

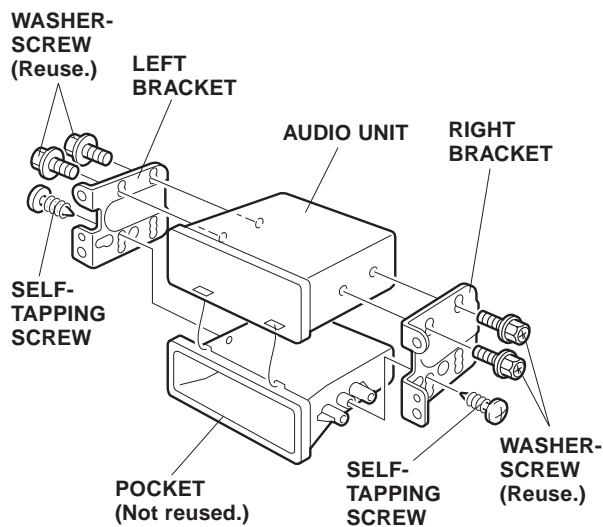

6. Install the left and right audio bracket.

With Cassette Player:


- Set the audio unit on the Cassette player and attach the left and right audio brackets using the four washer-screws removed in step 5 to the audio unit.
- Attach the left and right audio brackets using the four 5 x 8 mm washer-screws included in the Cassette player to the Cassette player.

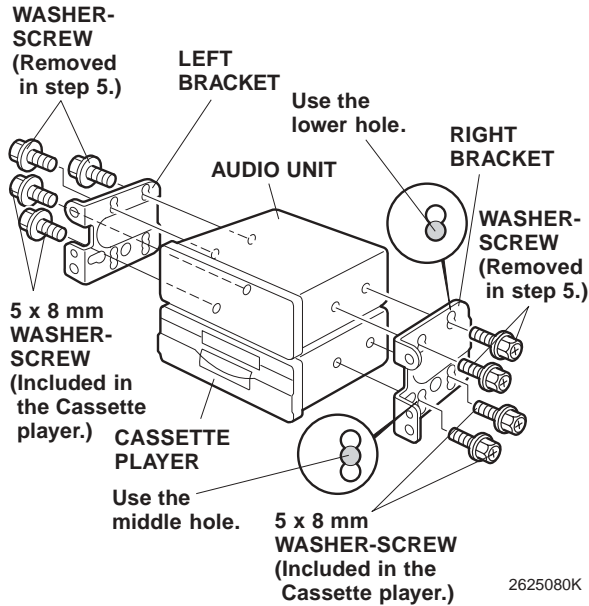


2625080K

With In-Dash CD Changer:

- Attach one adhesive strip to the bottom of the In-Dash CD changer.

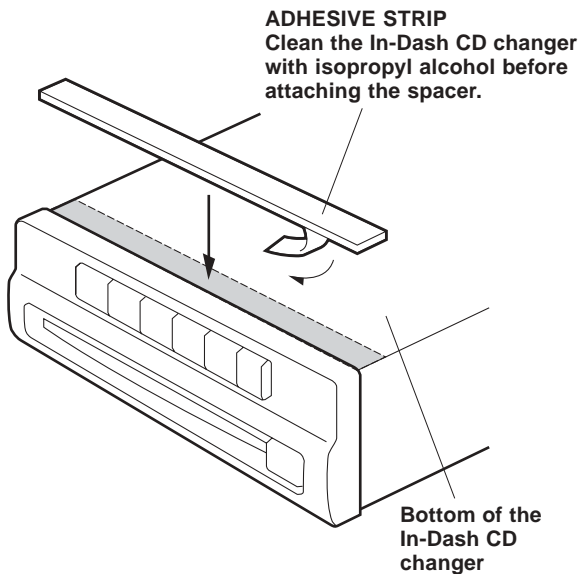


- Set the audio unit on the In-Dash CD changer and attach the left and right audio brackets using the four washer-screws removed in step 5 to the audio unit.
- Attach the left and right audio brackets using the four 5 x 8 mm washer-screws included in the In-Dash CD changer to the In-Dash CD changer.

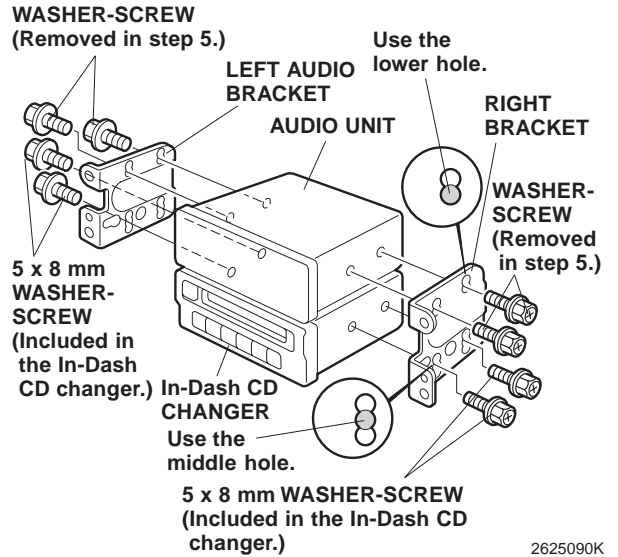


2625090K

7. Attach the harness clip to the back of the player or In-Dash CD changer using the 5 x 8 mm washer-screw or 4 x 6 mm washer-screw. Plug the BUS cable connector into the audio unit.
8. Bundle up the excess BUS cable and secure it to the player or In-Dash CD changer with the harness clip.


With Cassette Player

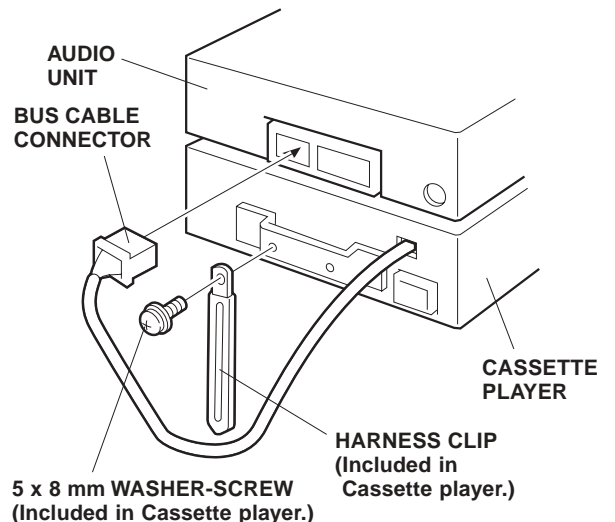


With Cassette Player:

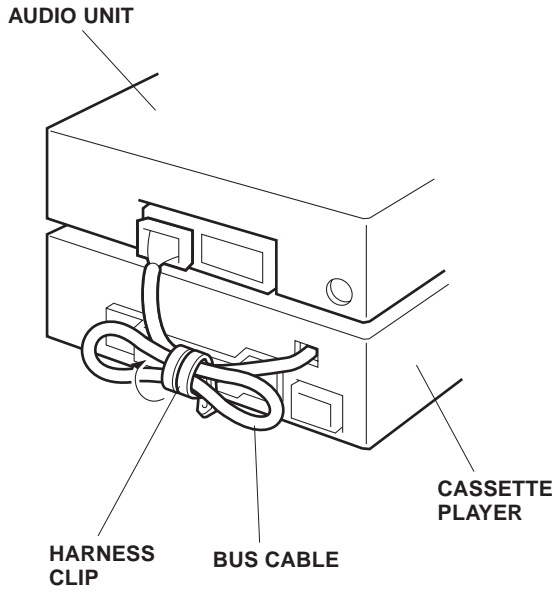


With In-Dash CD Changer:

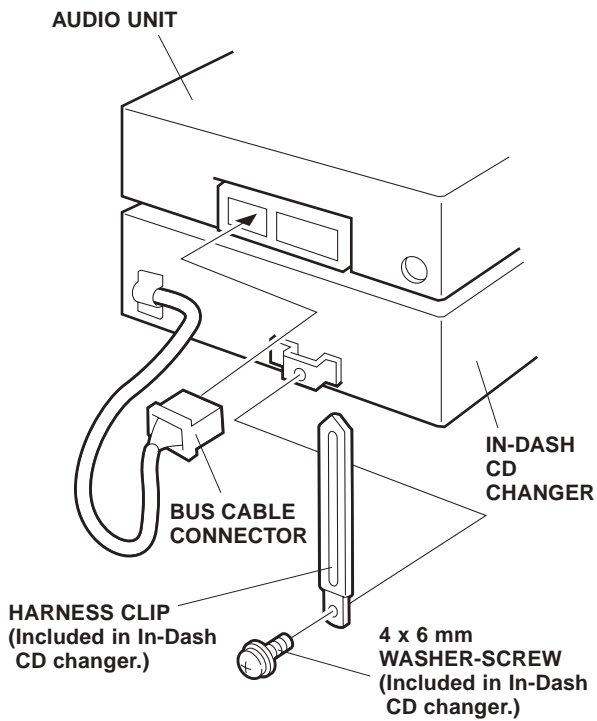

With In-Dash CD Changer:

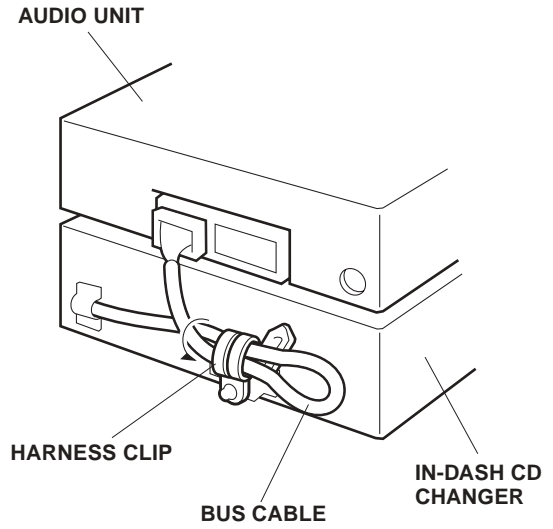

9. Plug in the vehicle connector and the antenna lead, in to back of the audio unit, then reinstall the audio unit using the four washer-screws removed in the step 4.

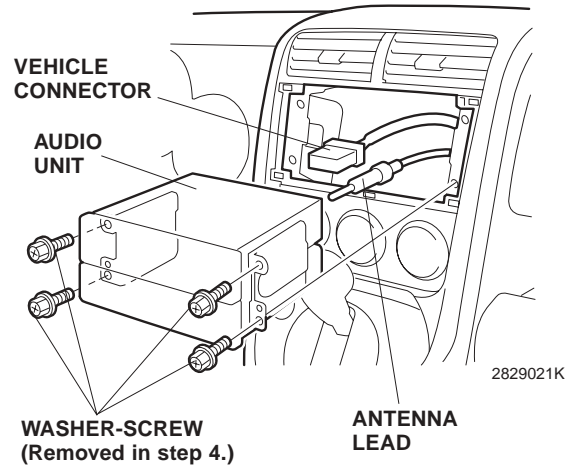

10. Reconnect the negative cable to the battery.
11. Check the operation of the In-Dash CD changer/Cassette player according to the Owner's Manual provided.
12. Reinstall the all removed parts.
13. Put the In-Dash CD changer/Cassette player Owner's Manual in the glove box.
14. Enter the customer's radio anti-theft code, and reset the radio station presets.
15. Reset the clock.

NOTE: Whenever the battery is disconnected, the driver's window AUTO function is disabled.

16. Start the engine. Push down on the driver's window switch until the window is fully open.
17. Pull up on the driver's window switch to close the window completely, then hold the switch for a second or two more.
18. Test the AUTO window function.