


## PARTS LIST

**CD Player**  
P/N 08A51-ED1100

CD Player

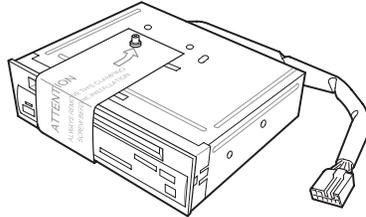

Owner's Manual



4 Screws



## TOOLS REQUIRED

#2 Phillips screwdriver

Ratchet


8 mm Socket

## INSTALLATION


**Customer Information:** The information in this Accessory Installation Instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Write down the customer's radio station presets; the radio memory will be erased when you disconnect the battery.
2. Disconnect the negative cable from the battery.


3. Remove the ashtray. On A/T models, move the shift lever to the "L" position.

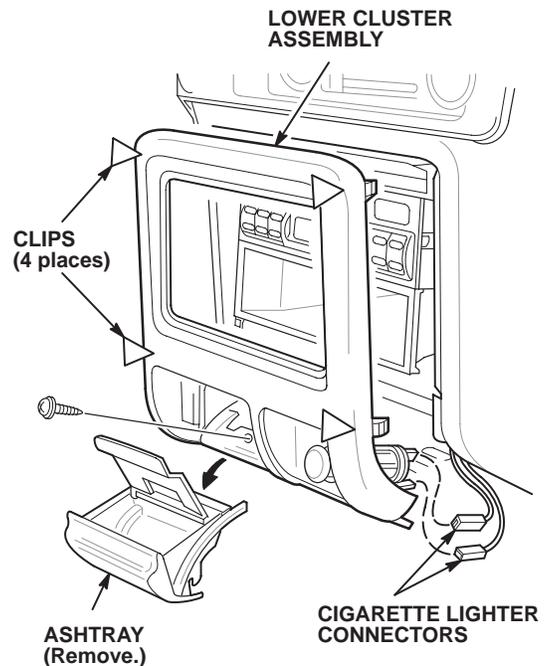


4. Remove the lower cluster assembly (one screw, and gently pull to release the four retaining clips; then unplug the cigarette lighter connectors).
5. Remove and retain the four screws securing the audio unit. Unplug the 16-pin connector and the antenna lead, and remove the audio unit.

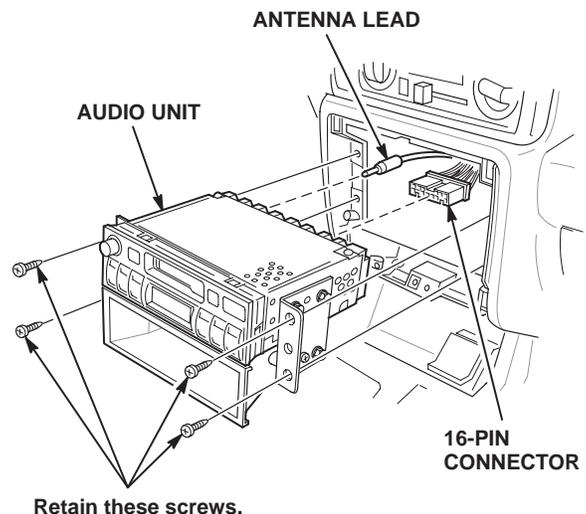


- Remove the screws and the pocket from the audio unit. Discard the pocket and pocket screws.

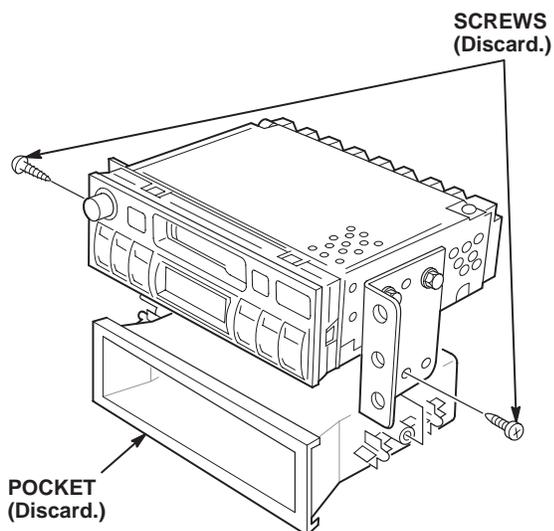


- Remove and discard the shipping screw and wrapper from the CD player.

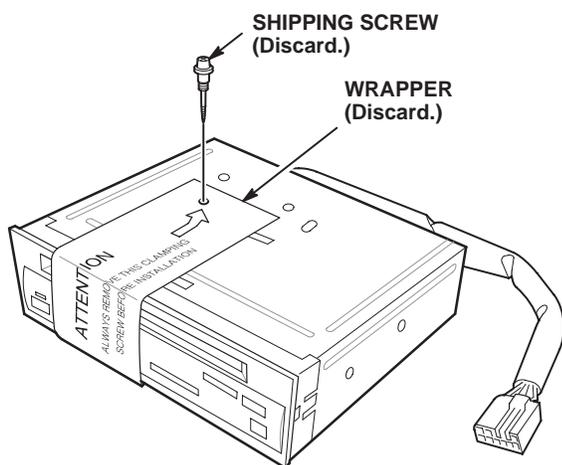

- Place the audio unit on top of the CD player. Slide the right and left brackets over the CD player, and install the four screws supplied with the CD player.

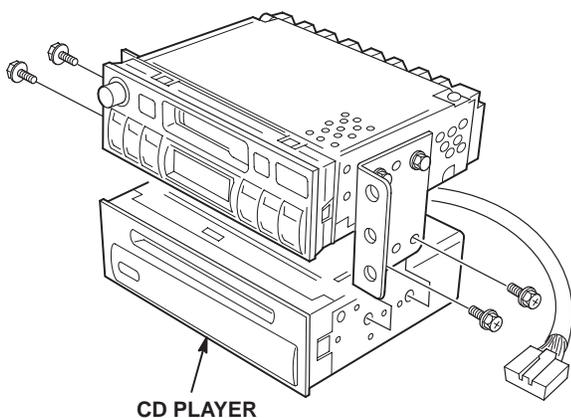

- Plug the 12-pin connector from the CD player into the back of the audio unit.

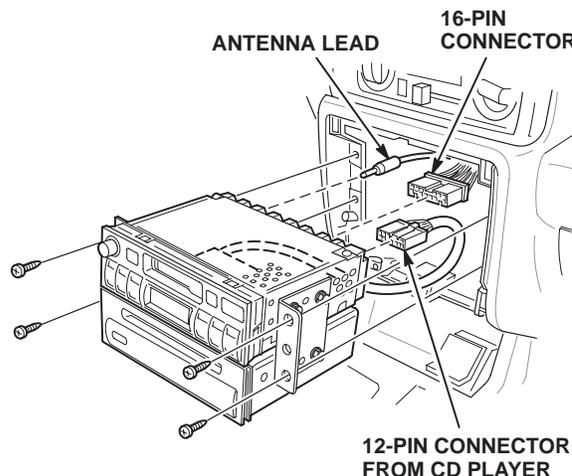

- Plug the 16-pin connector and the antenna lead into the audio unit, then reinstall the audio unit.
- Reinstall the lower cluster assembly.
- Reconnect the negative cable to the battery.
- Check that the CD player operates according to the owner's manual supplied with the CD player.
- Reset the clock and the radio station presets.
- Put the CD player owner's manual in the glove box for your customer.