




INSTALLATION INSTRUCTIONS


Accessory	Application	Publications No.
CASSETTE/MP3 PLAYER (EX)	2006 PILOT	All 30488
		Issue Date SEP 2005

Player Attachment Kit (sold separately) : P/N 08B06-S9V-100A


BUS cable

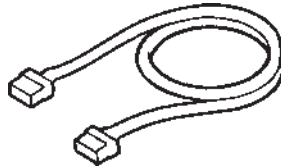

3 Wire ties

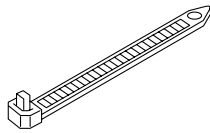


3 EPT sealer

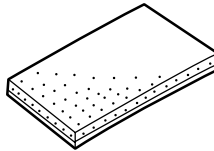


DIN Bezel Kit (sold separately) : P/N 08B23-S9V-100C


Left player bracket

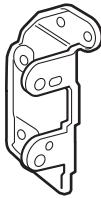

Right player bracket

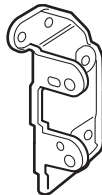


DIN bezel

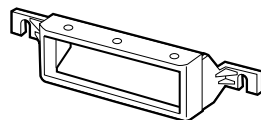

Cassette Player (sold separately) : P/N 08A03-5E1-001


Cassette player

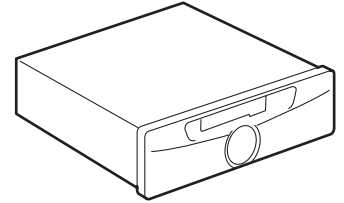

4 Washer-screws, 5 x 8 mm




Owner's manual

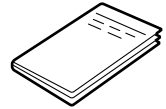

MP3 Player (sold separately) : P/N 08A06-4E1-201


MP3 player

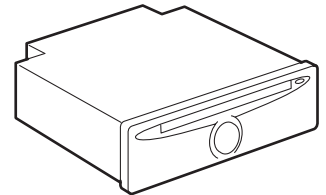

4 Washer-bolts, 5 x 8 mm





Owner's manual

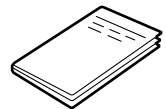

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Flat-tip screwdriver
10 mm Combination wrench
Ratchet
10 mm Socket

ILLUSTRATION OF THE COMPONENTS ON THE CAR

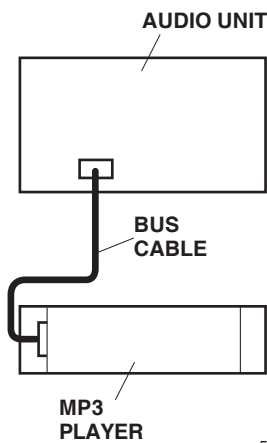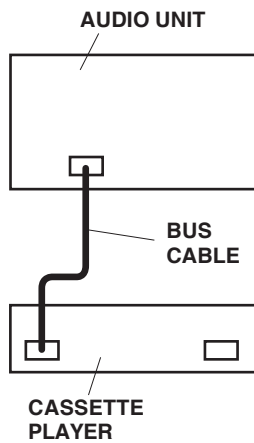


5804580Y

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers”.

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.


3. Remove the meter panel (two self-tapping screws and two clips).

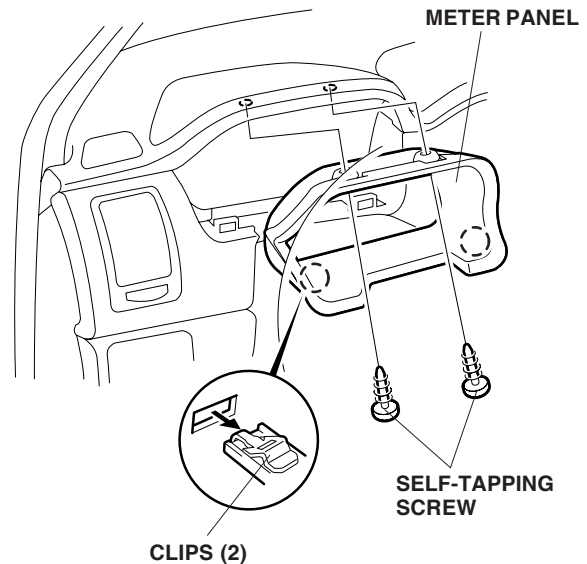


4. Remove the meter sub panel (three clips).

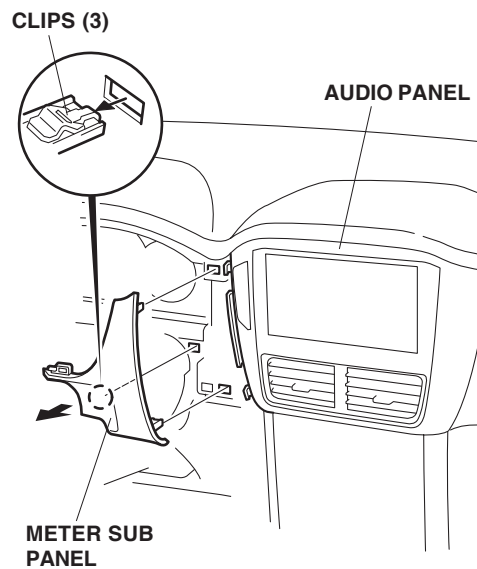


- Gently pull out on the left side of the audio panel to release the two clips, then pull out to release the remaining three clips. Unplug the vehicle connectors and remove the audio panel.

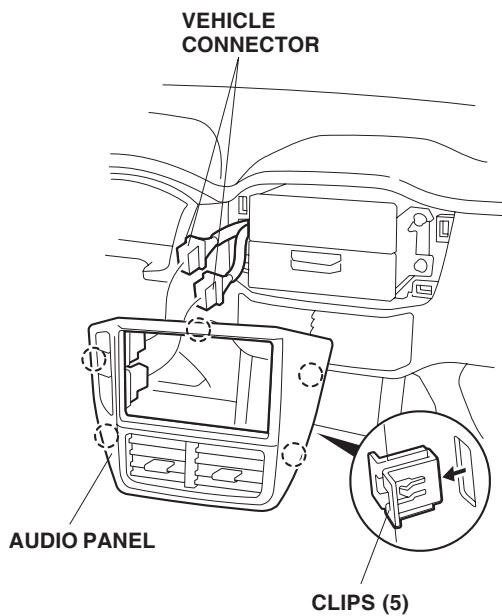


- Remove the audio unit (four screws, pull the audio unit out toward you, unplug the vehicle connectors and antenna lead).

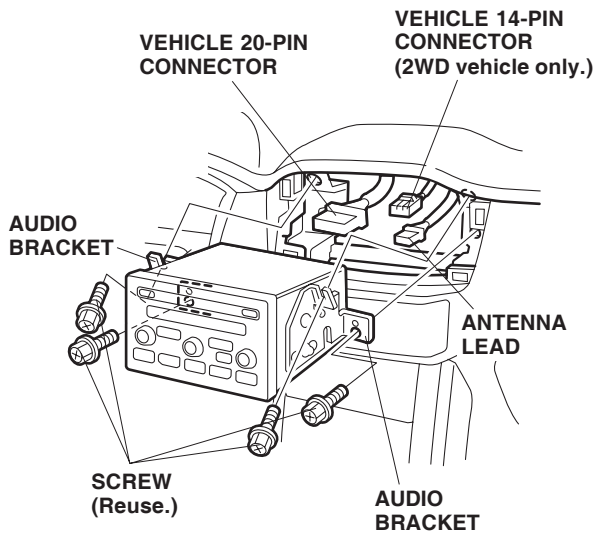

- Remove the driver's and passenger's center console trim pieces (three clips each). Take care not to damage the clips.

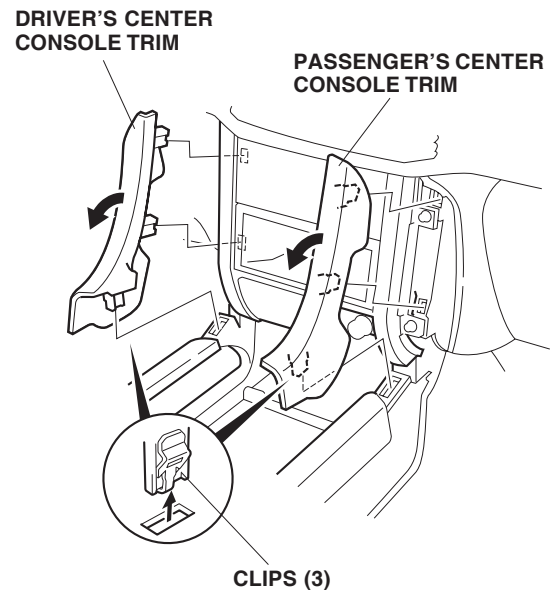


- Remove four self-tapping screws that fasten the center panel.

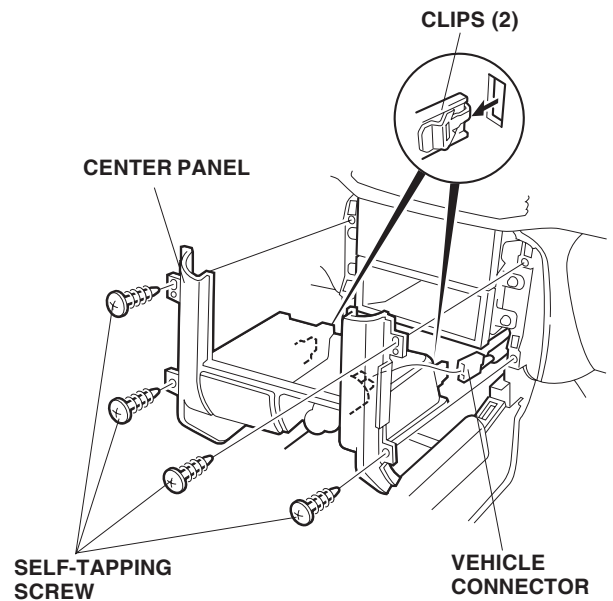


- Pull the center panel out toward you to release the two clips. Unplug the vehicle connector from the accessory socket, and remove the center panel.


10. Remove four screws that fasten the left and right vehicle brackets. Pull the heater control unit and pocket out toward you, and unplug the vehicle connectors.

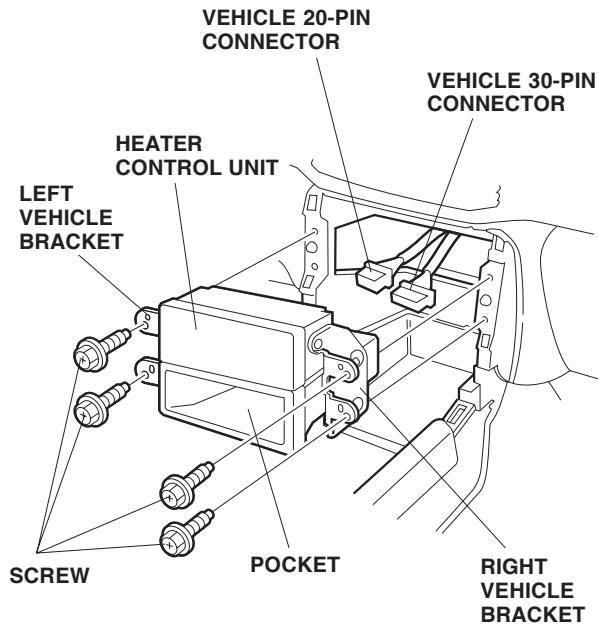

11. Remove the left and right vehicle brackets (six self-tapping screws), and separate the heater control unit from pocket. Set the pocket aside, it will not be reused.

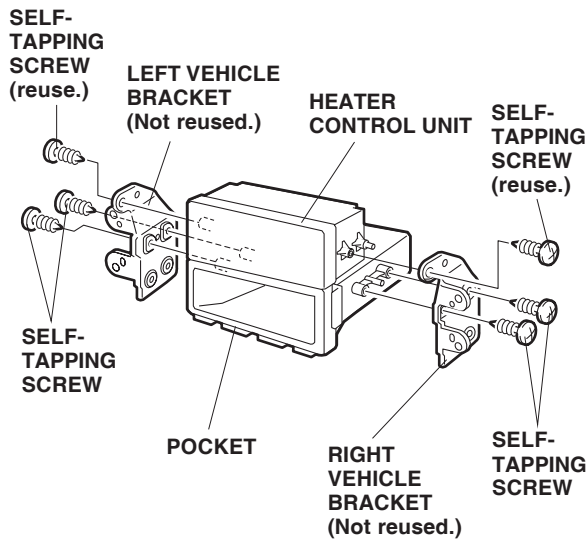


12. Install the DIN bezel to the player. Set the heater control unit on the player, and attach the left and right player brackets to the player and the heater control unit using the two self-tapping screws removed in step 11 and four 5 x 8 mm washer-screws included with the player.

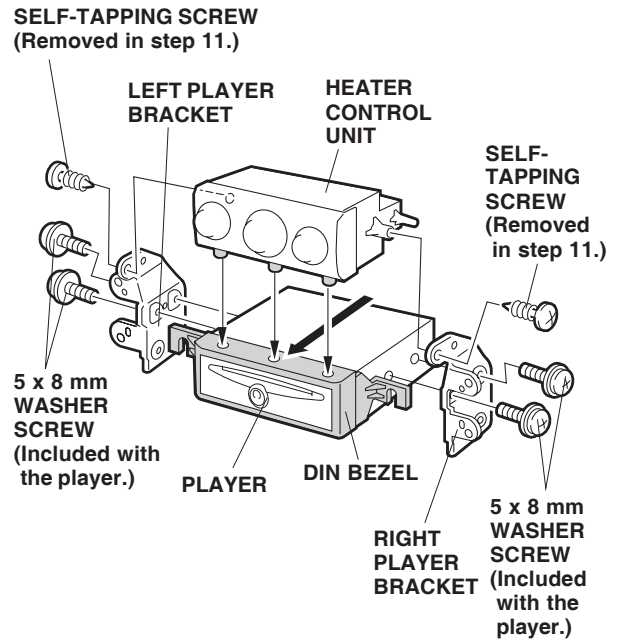


Installing the Player


13. Route the bus cable from the audio panel opening to the heater control unit opening. Using one wire tie, secure the bus cable to the vehicle harness.

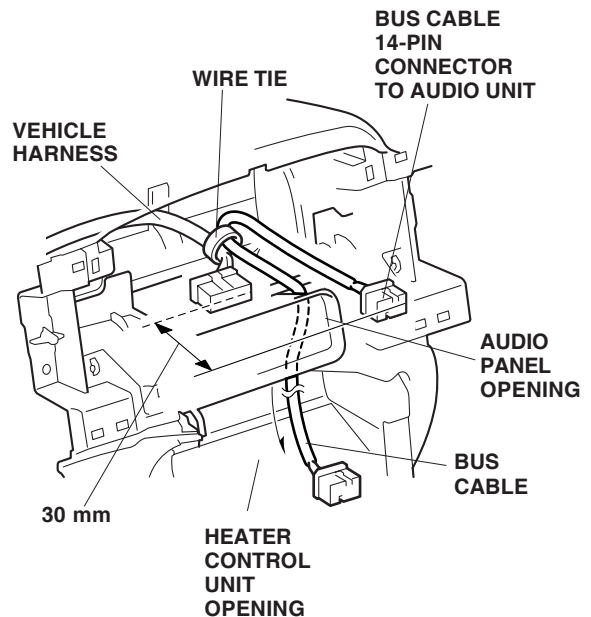


14. Connect the bus cable 14-pin connector to the audio unit.

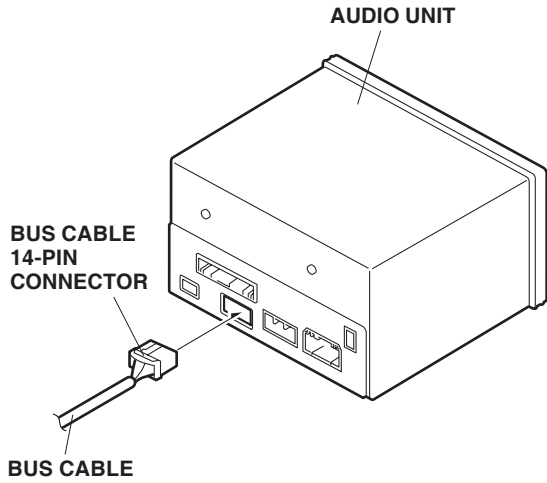

15. Connect the two vehicle connectors and the antenna connector to the audio unit. Insert the audio unit into the audio panel opening and secure it with the four screws that you removed in step 6.

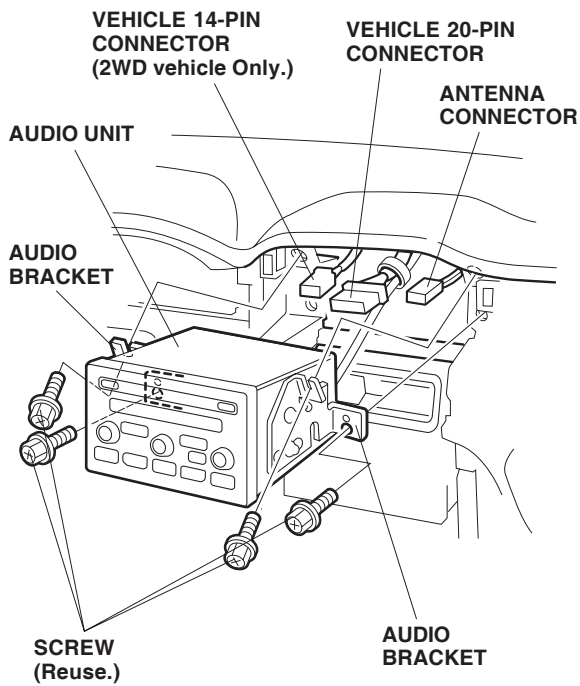


16. At the heater control unit opening, attach two EPT sealers to the bus cable at the location shown.

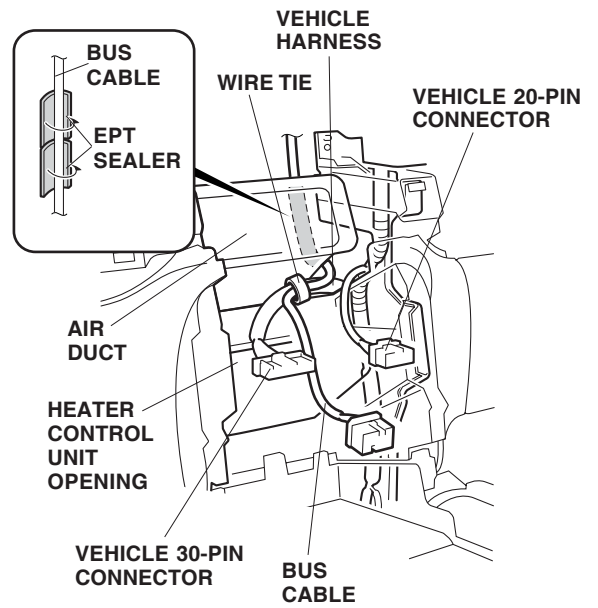


17. Secure the bus cable to the vehicle harness using one wire tie.

18. Connect the bus cable 14-pin connector to the player.


Cassette player

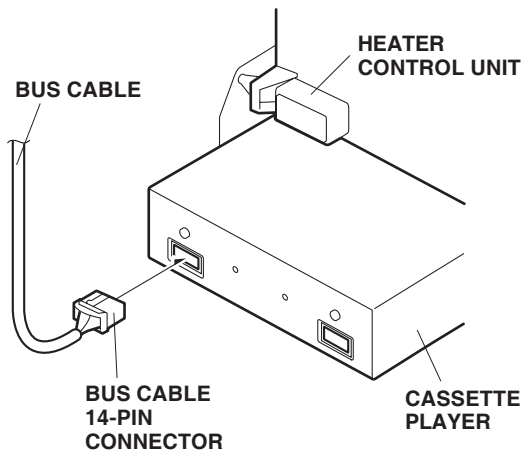

MP3 player

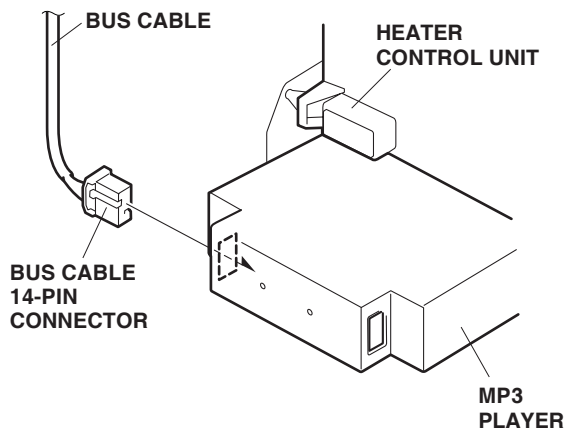

19. Remove the two washer-screws from the dashboard.

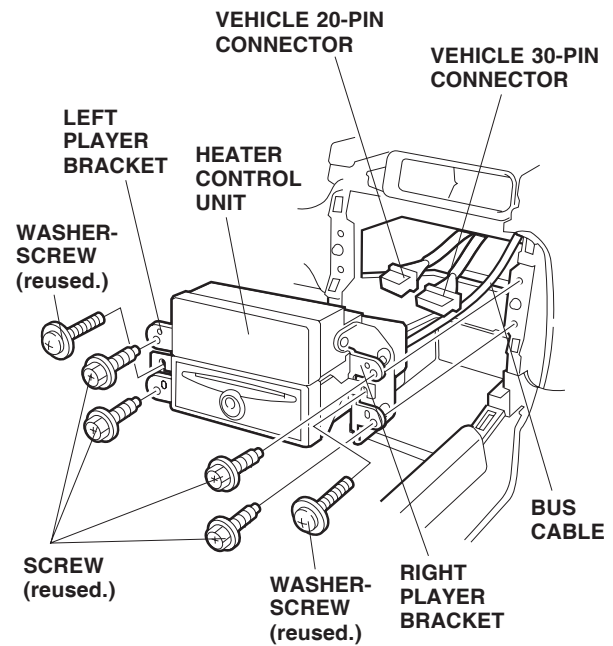

20. Connect the vehicle connectors to the heater control unit, and reinstall the heater control unit using the four screws you removed in step 10.
21. Check that all wire harnesses are routed properly and all connectors are plugged in.
22. Reconnect the negative cable to the battery.
23. Enter the customer's radio anti-theft code, and reset the radio station presets.
24. Set the clock.
25. Check the operation of the player according to the owner's manual supplied with the player.
26. Put the player Owner's Manual in the glove box.
27. Reinstall all removed parts.
- NOTE : Whenever the battery is disconnected, the driver's AUTO function is disabled.
28. Start the engine. Push down on the driver's window switch until the window is fully open.
29. Pull up on the driver's window switch to close the window completely, then hold the switch for 2 seconds or more.
30. Test the AUTO window function.