




INSTALLATION INSTRUCTIONS


Accessory	Application	Publications No.
CROSSBARS P/N 08L04-S9V-100A	PILOT (EX)	All 23626
		Issue Date MAY 2002

PARTS LIST


Front cross bar (long)

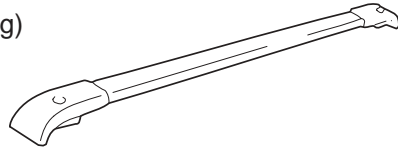


Rear cross bar (short)

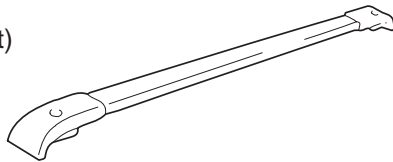

4 Holders

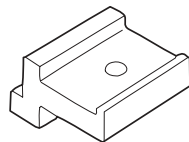

4 Torx bolts

 

4 Lock washers



4 Washers



TOOLS REQUIRED

Small flat-tip screwdriver

T-30 Torx bit

T-15 Torx bit

Important:


The small torx screws on the underside of one end of each crossbar will break if overtightened. They are designed to not hold the end piece tightly in place to allow for vehicle flex.

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- Wipe the roof rails before installing the cross bars.
 - Be extremely careful not to damage the body paint.
1. Insert a small flat-tip screwdriver into the hole on the inside of the roof rail base and release retaining tab, then remove the front cover.

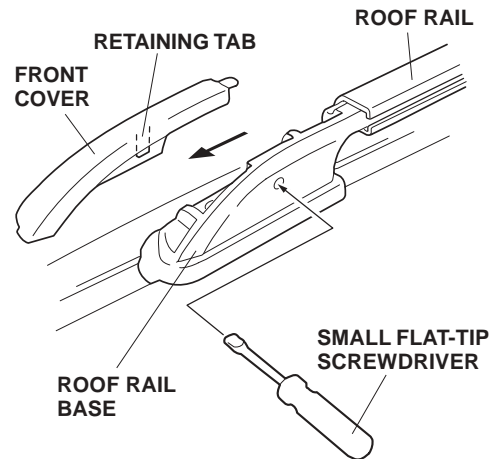


2. Remove the roof rail base from the roof (two Torx nuts and one bolt).

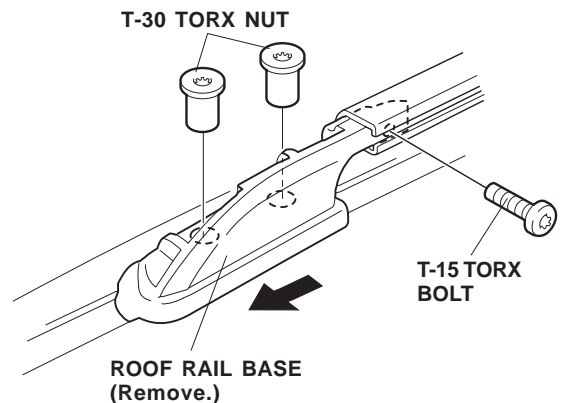

3. Insert the two holders in the groove of the roof rail.

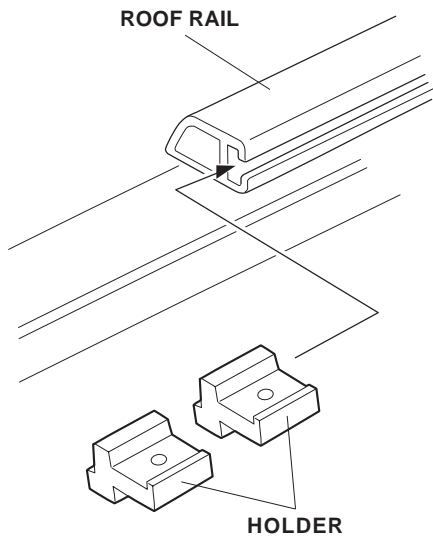

4. Repeat steps 1 through 3 on the other roof rail.
5. Slide each holder back, and align the hole in the holder with mark on the inside of the roof rail.

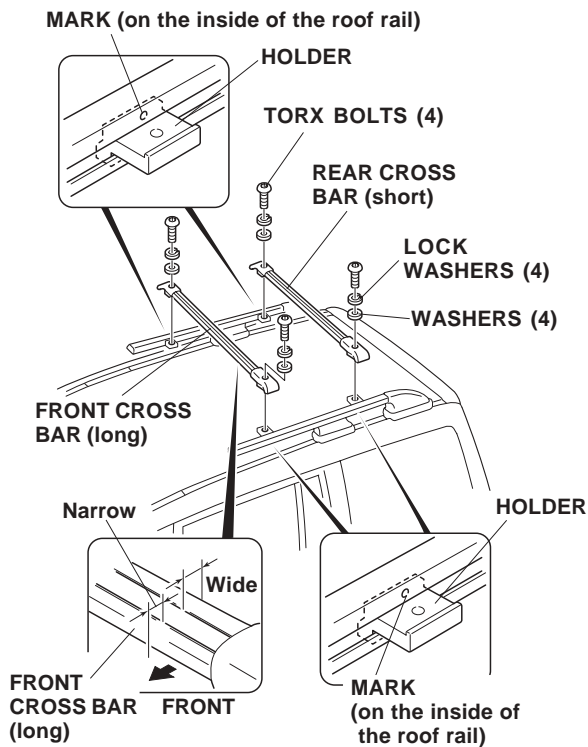

6. Position the cross bars on the holders, and install the Torx bolts with lock washers and washers. Torque the bolts to 10 N·m (7 lb-ft).
7. Reinstall the roof rail bases and the front covers.

USE AND CARE

- Check the roof rack cross bar mounting bolts frequently, and retighten them if necessary.
- Distribute the weight of the cargo evenly, and do not exceed the maximum weight capacity of 165 lbs (75 kg).

