

ACURA
INSTALLATION
INSTRUCTIONS

Accessory SELECT KNOB A/T	Application MDX	Publications No. BII 32738-33961 Issue Date OCT 2006
---	-------------------------------	---

PARTS LIST

Select knob



2 Screws



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver


Stubby Phillips screwdriver

Pliers


Torque screwdriver (T/N CDI 401SM)

INSTALLATION


1. With the parking brake on, remove the lid with a flat-tip screwdriver covered with a shop towel. Insert the key into the opening, and move the select knob to the "MD" range.

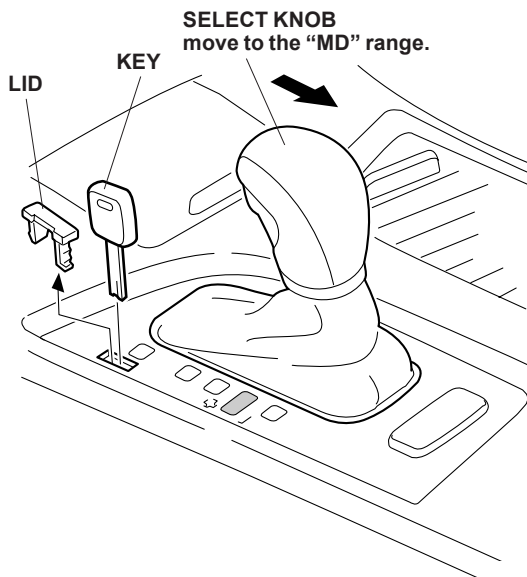


2. Using pliers, lower the shift boot by squeezing in on the two retaining tabs in the positions shown.

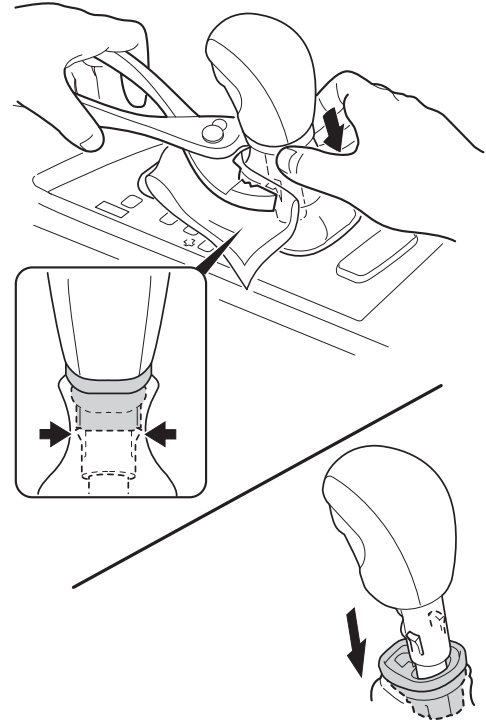


3. Remove the two screws from the select knob, and remove the select knob by pulling it up.

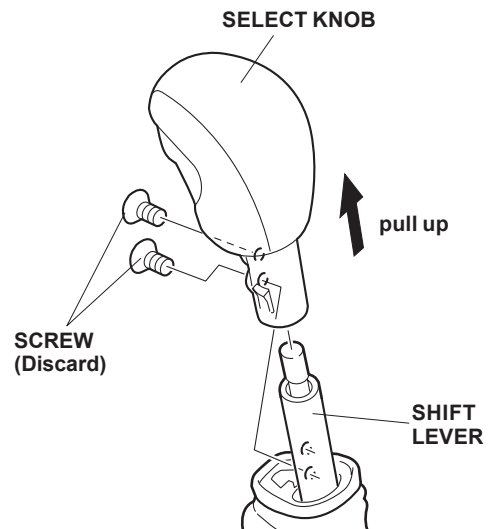

4. Install the new select knob using the two new screws. Using a torque screwdriver, torque the screws to 2.0 N•m (18 lb-in). Do not over tighten the screws.

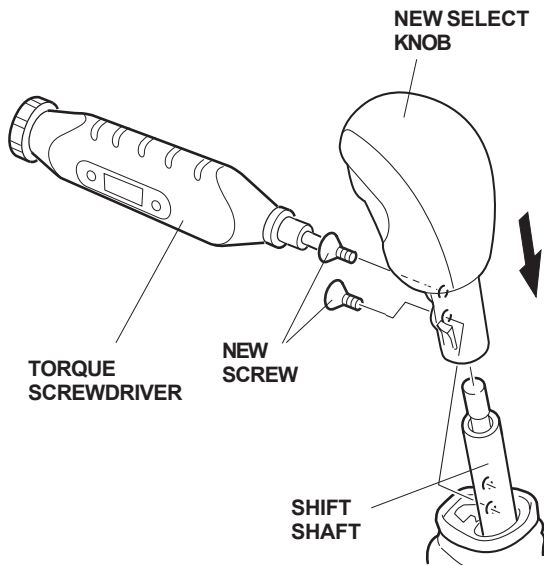

5. Pull the shift boot up into the normal position.

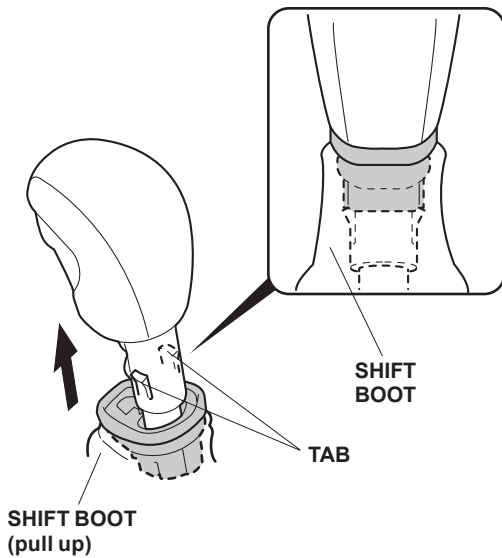

6. Install the lid.

USE AND CARE

- Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the select knob.
- Rinse the knob completely with water, then dry it with a shop towel.
- Never use organic solvents such as benzene, thinner, or gasoline to clean the select knob.