



<b>H HONDA</b> <b>INSTALLATION</b> <b>INSTRUCTIONS</b>	Accessory	Application	Publications No.
	<b>CARGO NET</b> P/N 08L96-S82-100	<b>2000 ACCORD</b> <b>2-DOOR</b>	<b>All 20523</b>
			Issue Date <b>JULY 1999</b>

## PARTS LIST


Cargo net

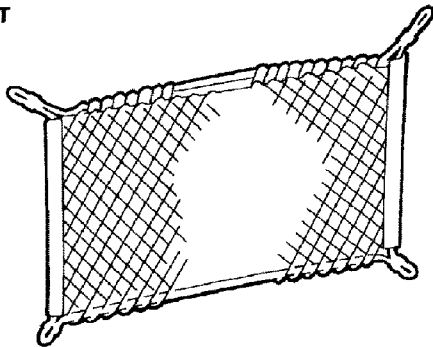

6 Self-tapping hooks



2 Screw hooks



## TOOLS REQUIRED


Flat-tip screwdriver

## INSTALLATION


### NOTE:

In these instructions, the illustrations show the left hooks being installed. The same procedure applies to installing the right hooks.




1. Open the trunk and remove the eight clips from the trunk lining (four on the left side, and four on the right side). Save the clips for your customer so they can be reinstalled if the cargo net is removed.

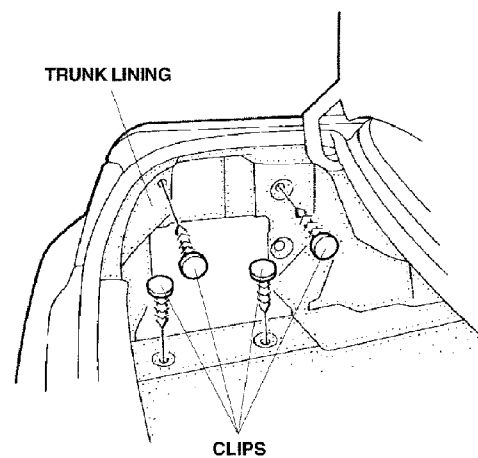

2. Install the six self-tapping hooks and two screw hooks into the clip holes in the trunk lining. Note the screw hook location.

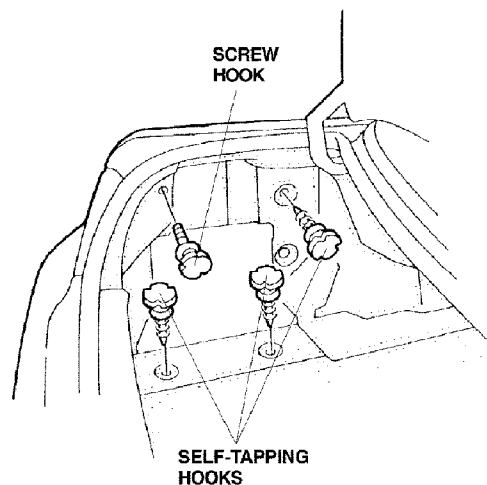

3. Attach the cargo net to the hooks according to the illustration that best serves your needs.

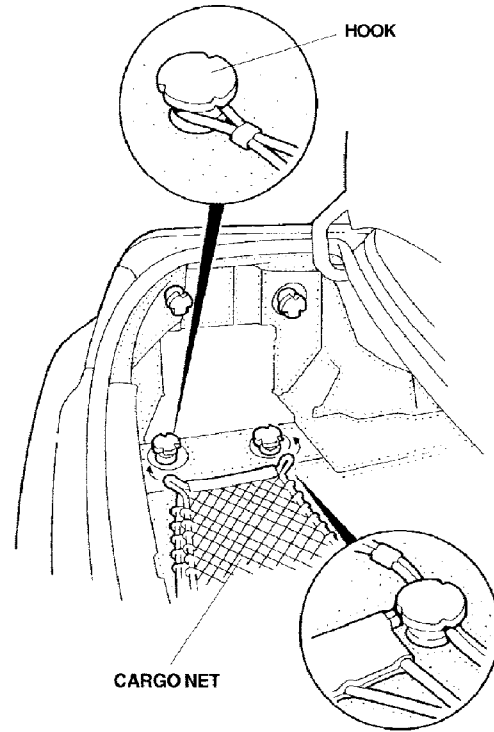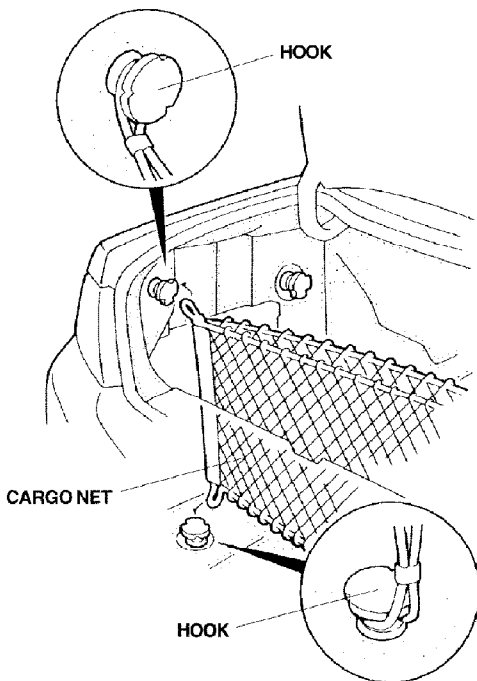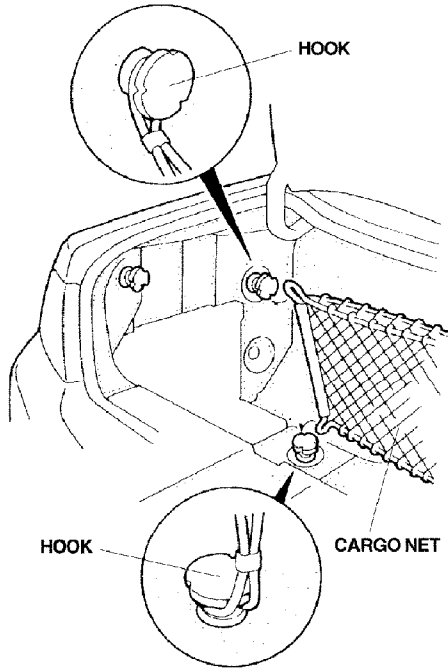

4. Put a copy of these instructions and the clips removed in step 1 in the glove box for your customer.