 HONDA INSTALLATION INSTRUCTIONS	Accessory FENDERWELL TRIM 2-DOOR: P/N 08P21-S82-101 4-DOOR: P/N 08P21-S84-101	Application 2000 ACCORD 2- AND 4-DOOR	Publications No. A11 20506
			Issue Date JULY 1999

PARTS LIST

Left front fenderwell trim




Right front fenderwell trim



Left rear fenderwell trim



Right rear fenderwell trim

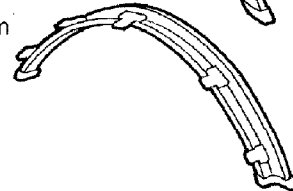

TOOLS REQUIRED

Flat-tip screwdriver
Pliers
Shop towel


INSTALLATION

NOTE:

- In these instructions, the illustrations show the right fenderwell trims being installed. The same procedure applies to installing the left fenderwell trims.
- The fenderwell trims are identified by a label attached to the inside surface.

Installing the Front Fenderwell Trims

1. Remove the four expansion clips securing the inner fender.


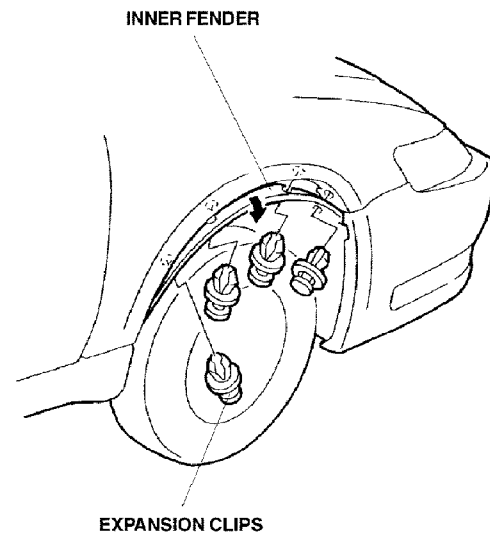


2. Clean the area to be covered, and wax it with a high-quality paste wax.

PUB No. Title
AI AII21613 2001 ACCORD FENDERWELL TRIM

Issue
08/25/01

3. Pull down the inner fender, and position the fenderwell trim between the inner fender and the fender flange. Align the fenderwell trim with the front bumper as indicated by the arrow.

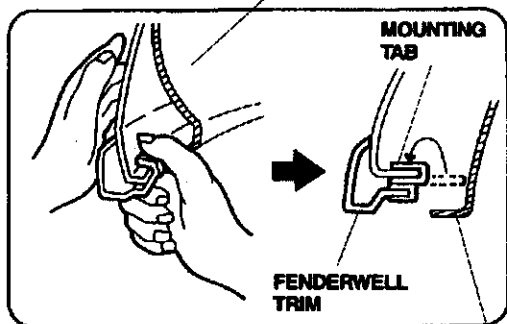
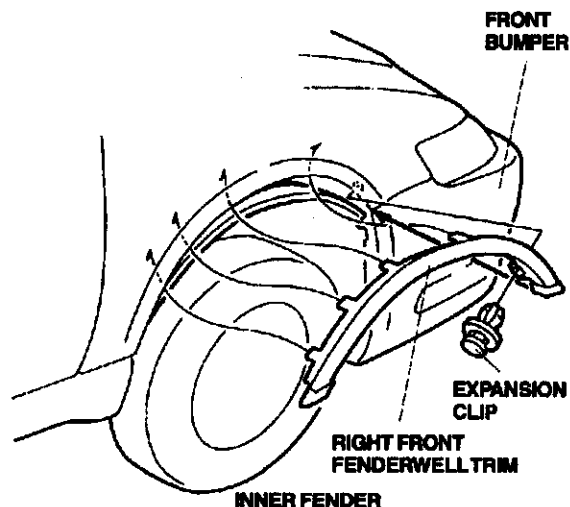


INNER FENDER


4. While holding the fenderwell trim firmly against the fender, squeeze the four mounting tabs around the fender flange as shown. If necessary, use pliers over a shop towel to bend the mounting tabs around the fender flange.
5. Attach the front of the fenderwell trim and the inner fender to the front fender with one expansion clip removed in step 1.
6. Reinstall the three remaining expansion clips to secure the inner fender.
7. Repeat steps 1 through 6 to install the left front fenderwell trim.

Installing the Rear Fenderwell Trims

8. Position the fenderwell trim on the fender flange, and align the rear end with the rear bumper. Hold the fenderwell trim firmly against the fender, and bend the five mounting tabs around the fender flange.

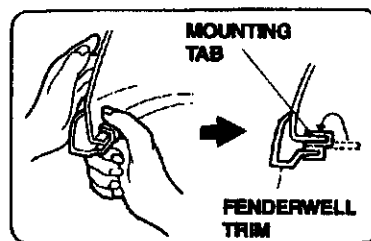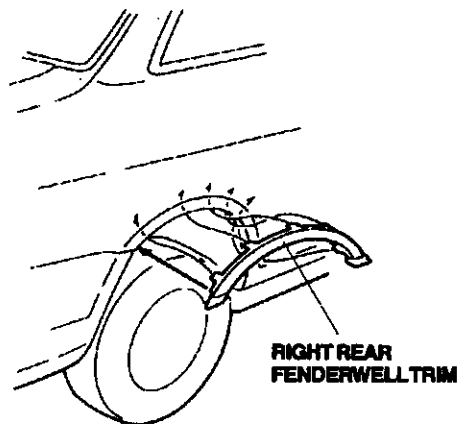

9. Drive the inner protector over the fender flange and fenderwell trim using a rubber mallet.

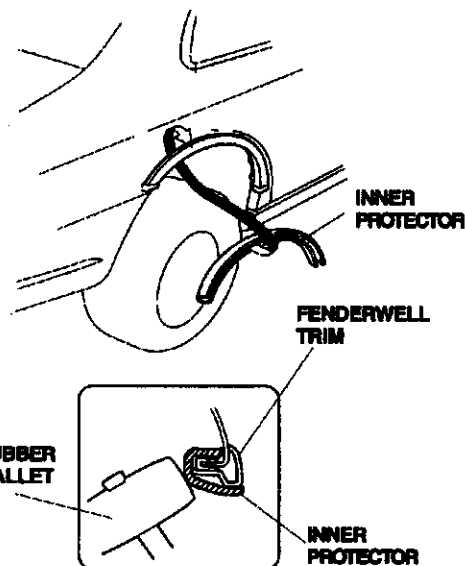

10. Repeat steps 8 and 9 to install the left rear fenderwell trim.