



# INSTALLATION INSTRUCTIONS


Accessory  
**REAR BUMPER PROTECTOR METAL PANELS**  
P/N 08P01-TP6-100

Application  
**2010 ACCORD CROSSTOUR**


Publications No.  
**All 41965**  
Issue Date  
**NOV 2009**

## PARTS LIST


Center panel

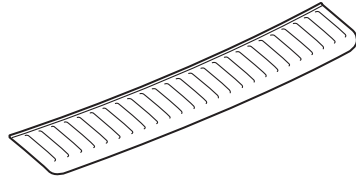


Right panel



Left panel



Alcohol swab

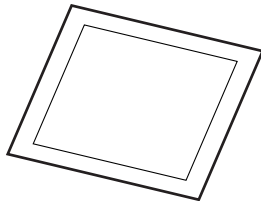

## TOOLS AND SUPPLIES REQUIRED


Masking tape

Marker

Tape measure

Rubber roller (T/N EQSE54D)

## Illustration of the Rear Bumper Protector Metal Panels Installed on the Vehicle

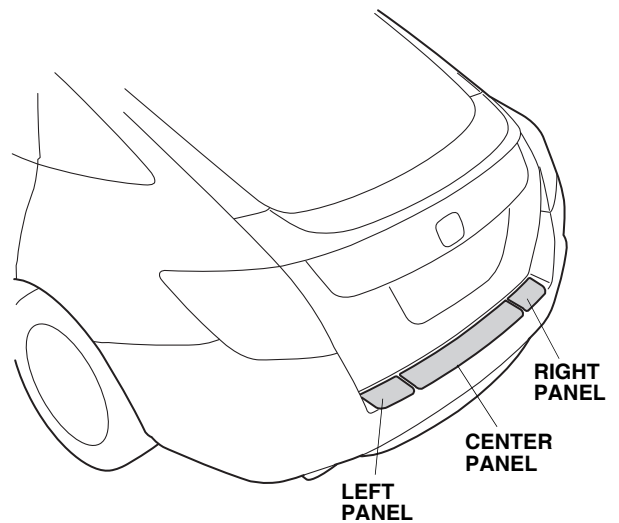


## INSTALLATION

### NOTE:


- Do not damage the body paint finish.
- This kit should be installed only if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customer.

## Installing the Rear Bumper Protector Metal Panels


1. Open the rear hatch using the alcohol swab, thoroughly clean the rear bumper where the rear bumper protector metal panels will attach.

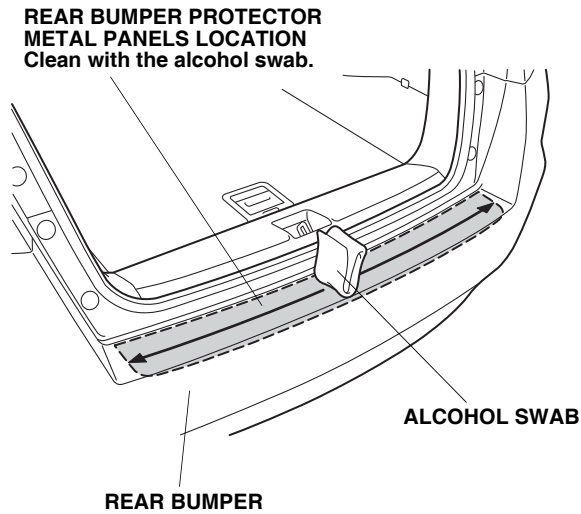

2. Attach a piece of masking tape to the center of the tailgate anchor and weatherstrip as shown. Mark the center of the tape.

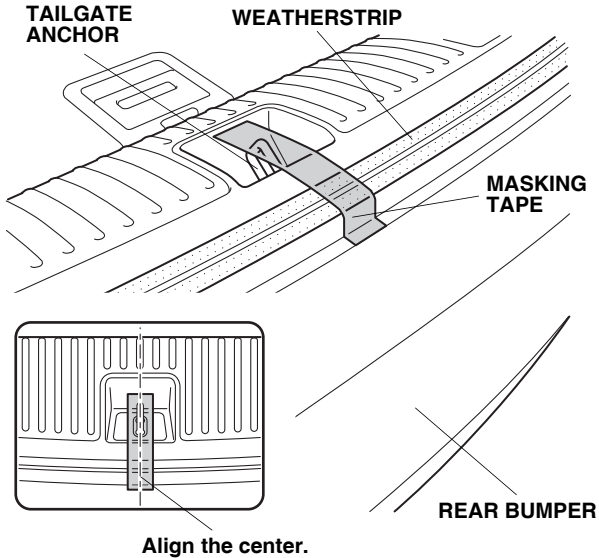


3. Position the center panel on the rear bumper, and align it with the center mark on the masking tape as shown.

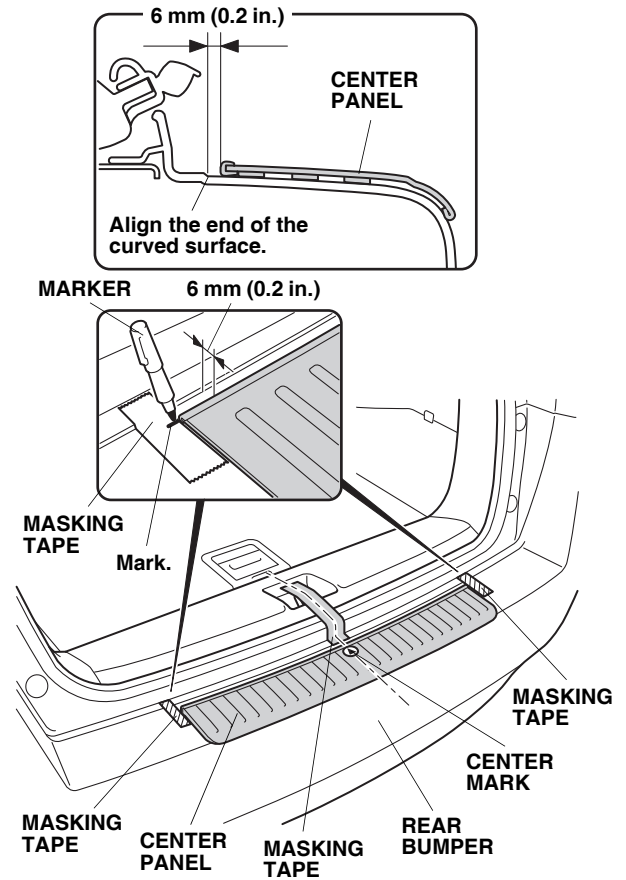


4. Attach a piece of masking tape to the rear bumper at each end of the center panel as shown. Using a marker, mark each end piece masking tape 6 mm (0.2 in.) at the position shown. Remove the center panel, and the center piece of the masking tape.


5. Peel back all of the adhesive backings as shown and tape them to the front of the center panel using pieces of masking tape.

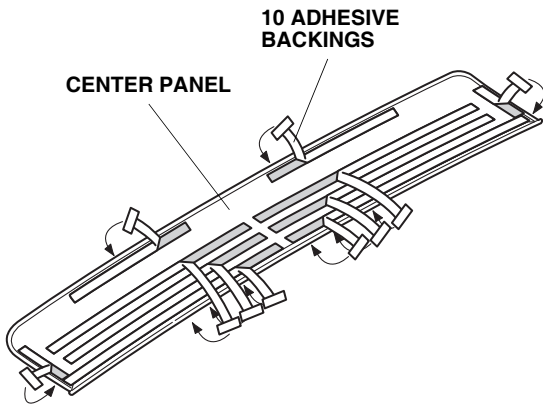


6. Temporarily place the center panel on the rear bumper between the two pieces of masking tape and at the marks you made.

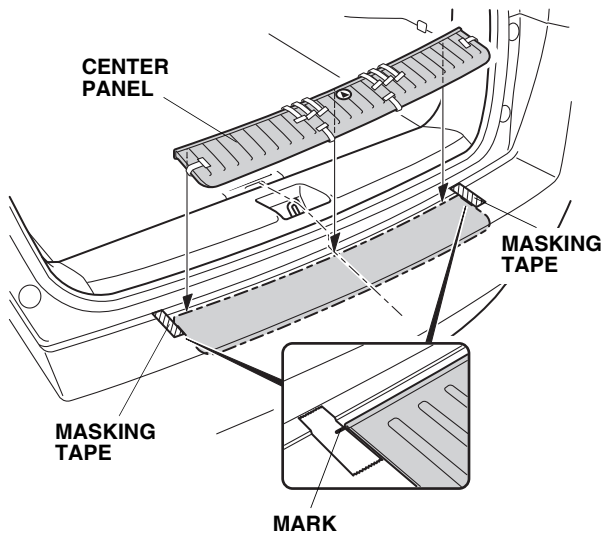


7. While pressing the center panel firmly with the palm of your hand, slowly and carefully remove the adhesive backings in the order shown.

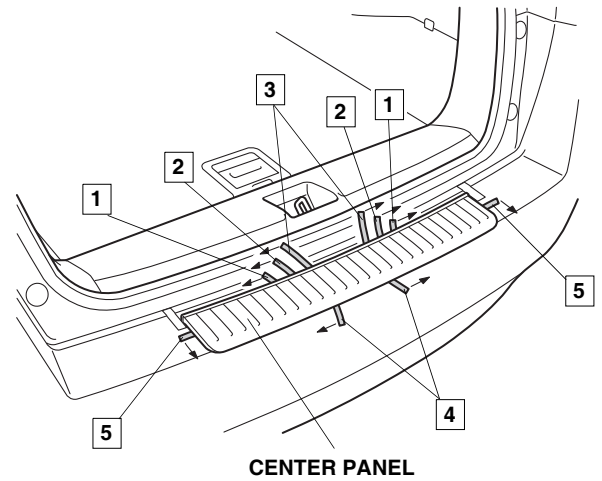


8. Remove the masking tapes. Using the rubber roller, apply pressure to the center panel as shown. Apply firm pressure especially at the ends.

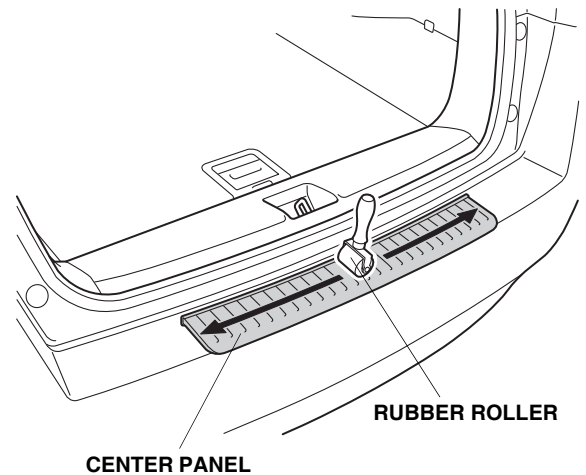


- Position the left panel on the rear bumper and align it with the center panel and the measurement shown. Attach a piece of masking tape to the rear bumper at the edge of the left panel. Using a marker, mark the masking tape at the measurement shown. Remove the left panel.

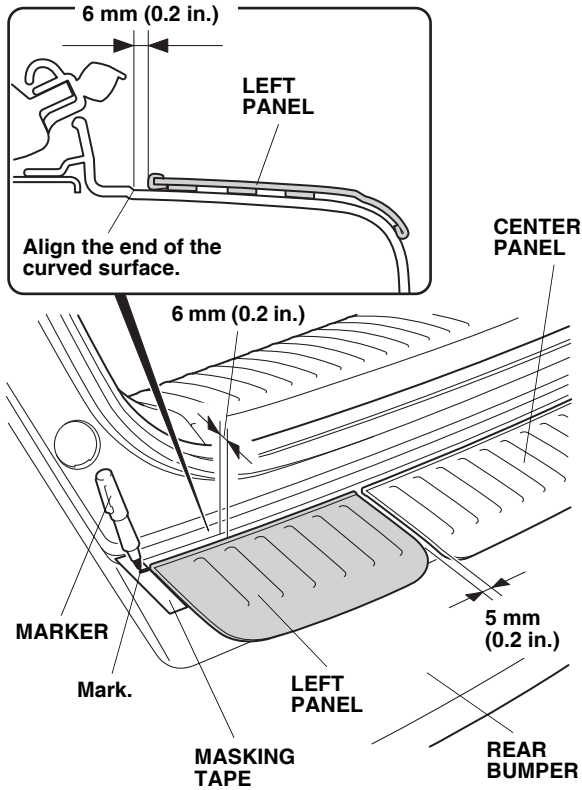


- Peel back all of the adhesive backings, and tape them to the front of the left panel using pieces of masking tape.

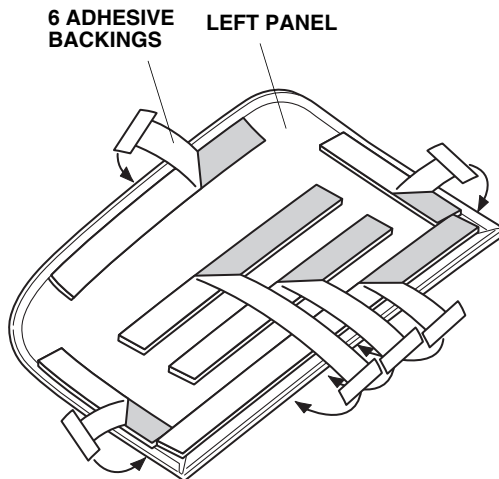


- Temporarily place the left panel on the rear bumper and align it with the masking tape and the mark you made.

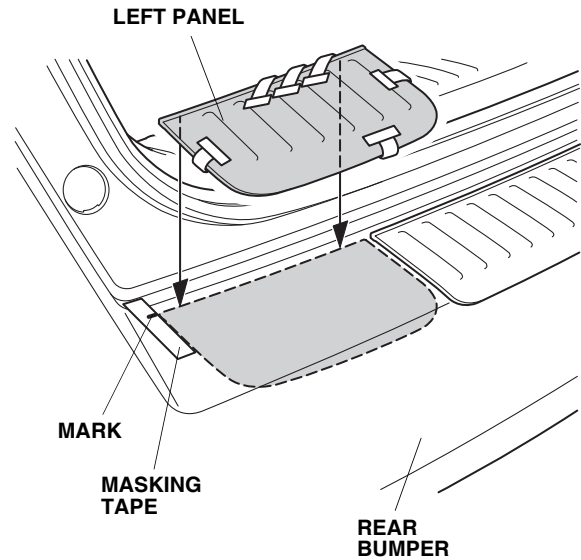

- While pressing the left panel firmly with the palm of your hand, slowly and carefully remove the adhesive backings in the order shown.

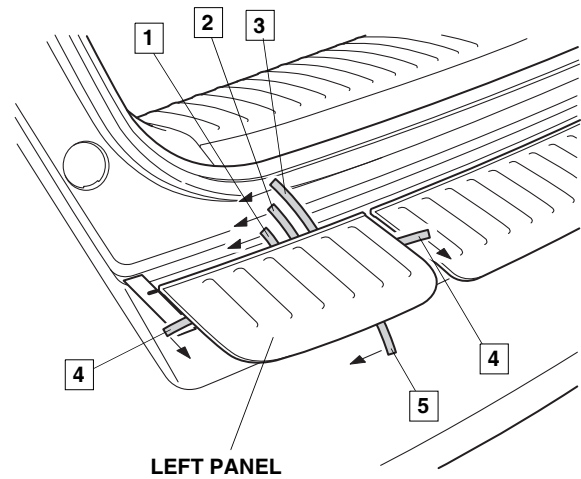

- Using the rubber roller, apply pressure to the left panel as shown. Apply firm pressure especially at the ends.

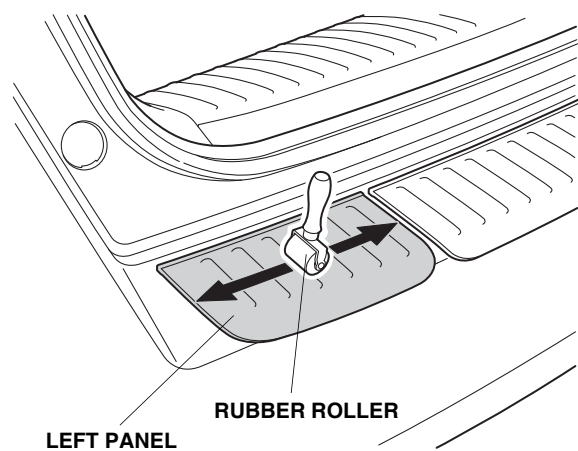

- Repeat the steps 9 thru 13 to install the right panel.