

 <b>HONDA</b> <b>INSTALLATION</b> <b>INSTRUCTIONS</b>	Accessory <b>HALF NOSE MASK</b> P/N 08P35-S5D-100F	Application <b>2001 CIVIC</b> <b>2- AND 4-DOOR</b>	Publications No. <b>All 21904</b>
			Issue Date <b>SEP 2000</b>

**PARTS LIST**


Mask  
(hood section)

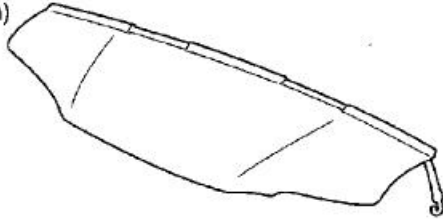

Right side mask  
(fender section)

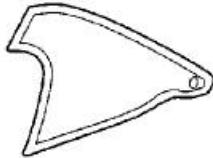

Left side mask  
(fender section)

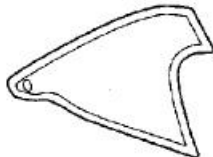

2 Snap-screws



2 Washers



2 Fenderwell nuts



**TOOLS REQUIRED**

Stubby #2 Phillips screwdriver

Flat-tip screwdriver


**INSTALLATION**

**NOTE:**

- Make sure the vehicle and the nose mask are clean and completely dry before installation. If moisture under the mask is allowed to dry, it may cloud the paint. If the mask gets wet, remove it and allow it to air-dry completely.
- Make sure any repainted surfaces are cured.
- Make sure the hood and nose of the vehicle have been waxed with a high-quality paste wax.
- Make sure to install the nose mask securely. If the nose mask starts to flap or comes loose while driving, safely pull off the highway, stop the vehicle, and secure or remove the mask.

**Installing the Hood Section**

1. Open the hood. Fit the corners of the mask around the hood. Adjust the mask so that it fits smoothly over the edges.

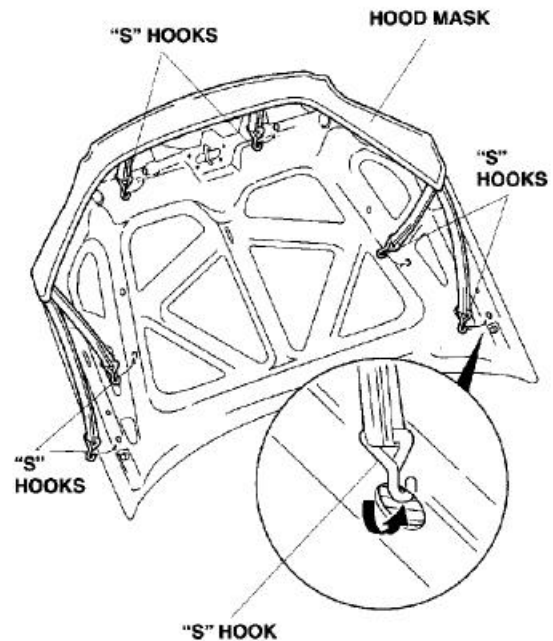


2. Secure the mask by hooking the six "S" hooks to the hood.

PUB No. Title  
AI AII21904 2001 CIVIC HALF NOSE MASK

Issued  
09/12/00


### Installing the Fender Section

3. Turn the steering wheel all the way clockwise.
4. Pry out the plastic pin, and remove the expansion clip that fastens the inner fender; remove and retain the clip, then clean the area around the hole.

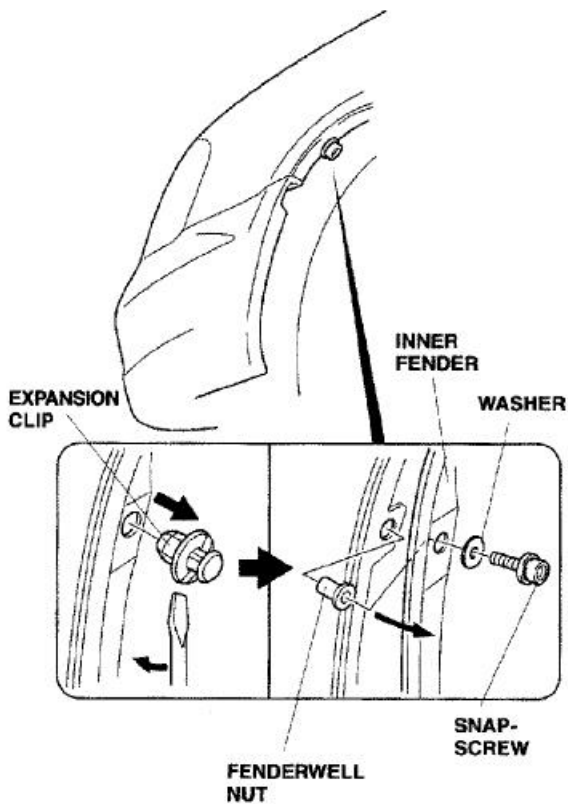

5. Pull the inner fender away, and press one fenderwell nut (supplied) into the hole in the fender flange.
6. With its washer in place, securely tighten one snap-screw into the fenderwell nut.
7. Turn the steering wheel all the way counter-clockwise, and repeat steps 4 through 6 on the right side.

8. Slip the pocket of the mask's fender section onto the front corner of the fender, then attach the "S" hook to the top inside edge of the fender.

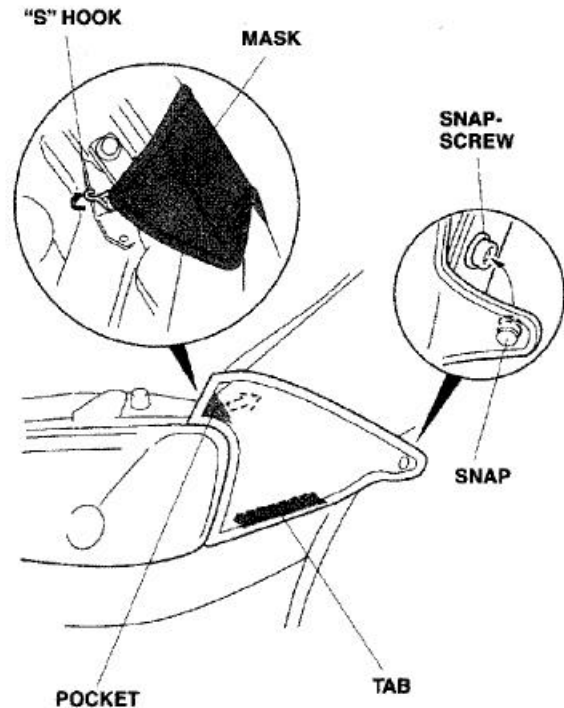

9. Pull the mask back toward the wheelwell, smooth out any wrinkles, and then snap the mask onto the snap-screw.
10. Insert the tab between the bumper and the fender.
11. Repeat steps 8 through 10 on the other side
12. Put these instructions and the expansion clips removed in step 4 in the glove box.

### CLEANING THE NOSE MASK

Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the vinyl and the flannel backing. Rinse the mask completely with clean water, and hang it to dry out of direct sunlight. Make sure the mask is completely dry before you reinstall it.