



## INSTALLATION INSTRUCTIONS

Accessory  
DOOR EDGE GUARDS

Application  
2000 CIVIC  
2/3/4-DOOR

Publications No.  
All 20436  
Issue Date  
AUG 1999

### PARTS LIST

Right front door edge guard




Left front door edge guard




Right rear door edge guard



Left rear door edge guard

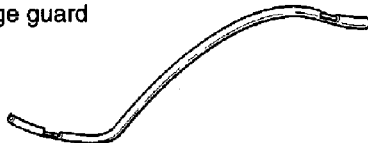

Hem sealant cutting tool



### TOOLS AND SUPPLIES REQUIRED


10 mm Wrench  
Rubber mallet  
Touch-up paint

### INSTALLATION


1. Make sure that the area to be covered is clean and has been waxed with a high-quality paste wax.
2. Identify each door edge guard by holding it up to the door and matching its contour with the door edge.

### Installing the Front Door Edge Guards

3. Loosen the 10 mm nut securing the body side molding to the door.

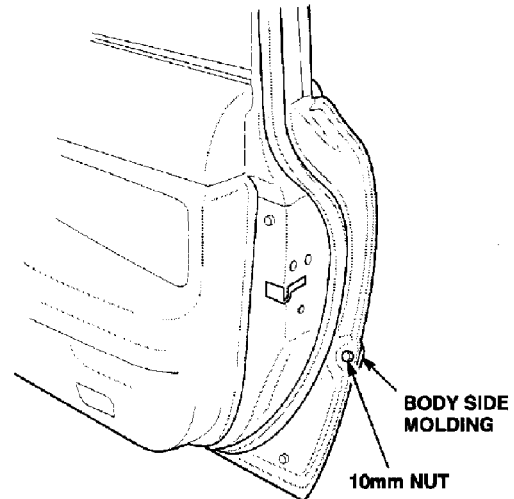


4. Hold the guard against the inside edge of the door, and mark the sealant at the top and bottom of the ending points of the door edge guard.

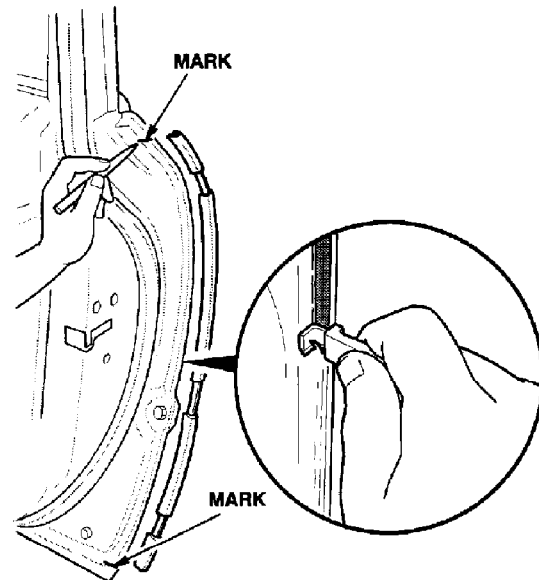

5. Position the hem sealant cutting tool against the door edge as shown, and trim the hem flange sealant from mark to mark.

6. Apply touch-up paint to the door, and let it dry.
7. Position the door edge guard on the door edge and tap it into position with a series of light taps using a rubber mallet.

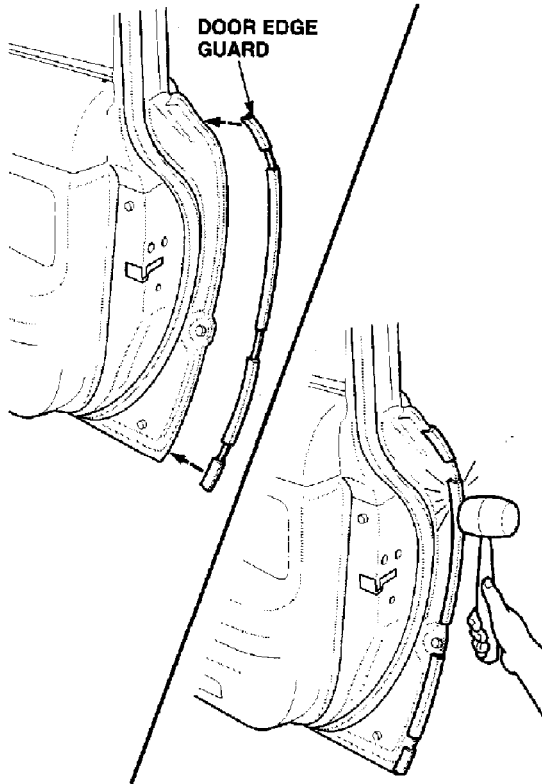

8. Retighten the 10 mm nut.
9. Repeat steps 3 through 8 to install the other door edge guard.

## Installing the Rear Door Edge Guards (If Applicable)

10. Repeat steps 4 through 7 to install both rear door edge guards. Start tapping at the wheelwell bend.