



H HONDA INSTALLATION INSTRUCTIONS	Accessory	Application	Publications No.
	FENDERWELL TRIM 2/4-Door P/N 08P21-S04-100 3-Door P/N 08P21-S03-100	2000 CIVIC 2/3/4-DOOR	AI1 20438 Issue Date AUG 1999

PARTS LIST


Left front fenderwell trim

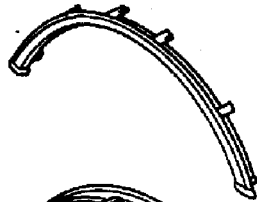


Right front fenderwell trim

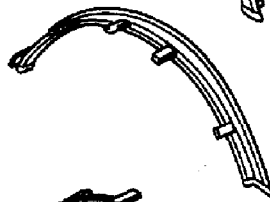

Left rear fenderwell trim

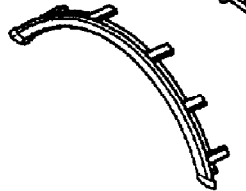

Right rear fenderwell trim

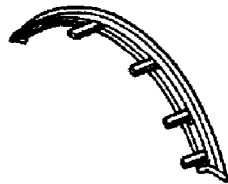

TOOLS REQUIRED

Stubby Phillips screwdriver

Rubber mallet

Pliers

Shop towel


INSTALLATION

NOTE:


- These installation instructions show the right fenderwell trims being installed. The same procedure applies to installing the left fenderwell trims.
- The fenderwell trims are identified by a label attached to the inside surface.
- Make sure that the area to be covered has been cleaned and then waxed with a high-quality paste wax.

Installing the Front Fenderwell Trim


1. Turn the steering wheel all the way clockwise.

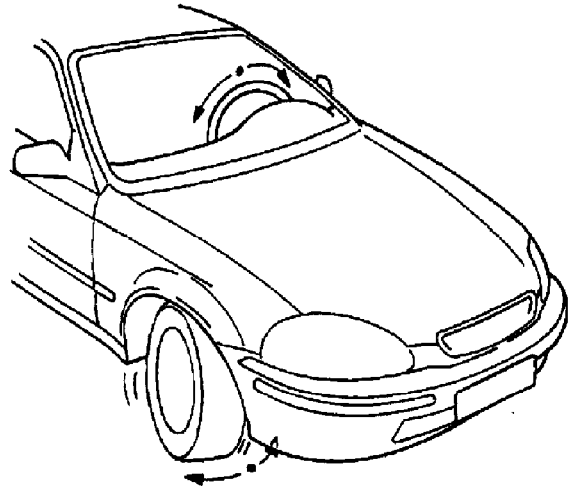

2. Remove the inner fender by carefully removing the three expansion clips and the one self-tapping screw.

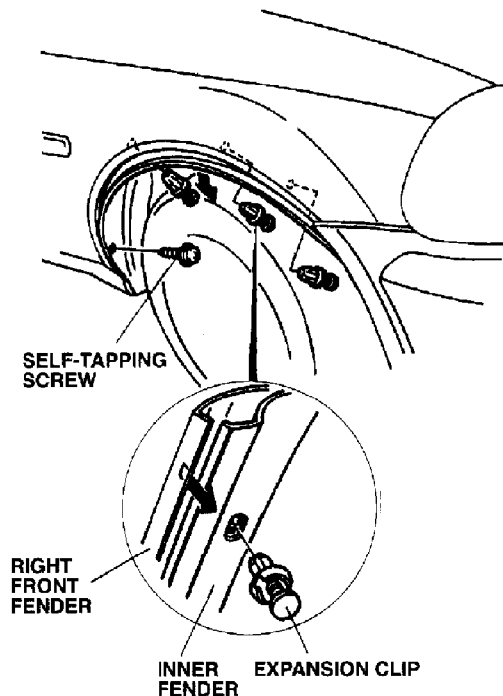


3. Pull on the inner fender, and position the fenderwell trim between the inner fender and the fender flange. Align the front edge of the fenderwell trim with the gap between the fender and the front bumper.

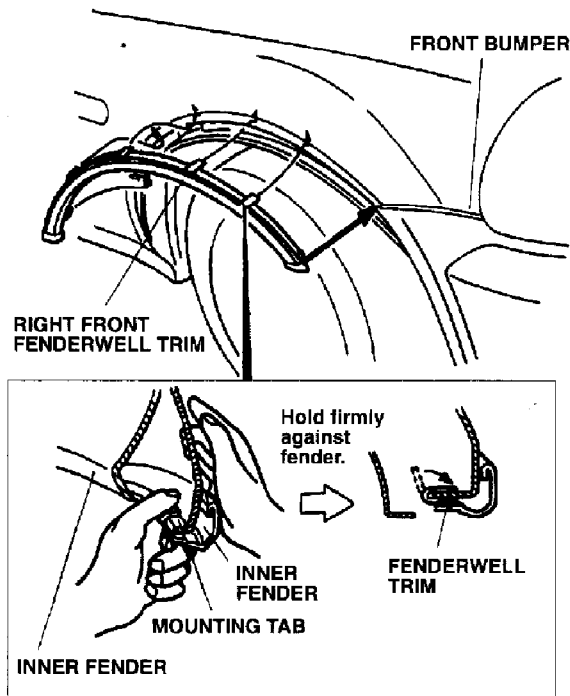


4. While holding the fenderwell trim firmly against the fender, squeeze the mounting tabs around the fender flange, using a pair of pliers padded with a shop towel.
5. Carefully reinstall the self-tapping screw and the expansion clips removed in step 2.
6. Turn the steering wheel all the way counterclockwise, and repeat steps 2 through 5 to install the left front fenderwell trim.

Installing the Rear Fenderwell Trim

7. Remove the inner protector from the fender flange. Position the fenderwell trim on the fender flange, and align the rear end with the rear bumper.

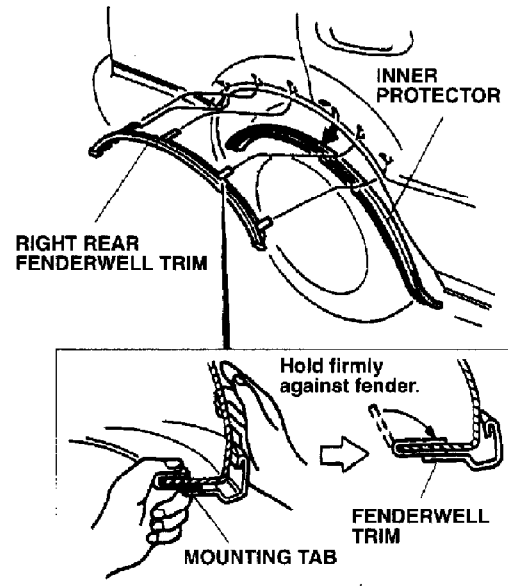

8. While holding the fenderwell trim firmly against the fender, squeeze the mounting tabs around the fender flange, using a pair of pliers padded with a shop towel.
9. Drive the inner protector over the fender flange and fenderwell trim using a rubber mallet.

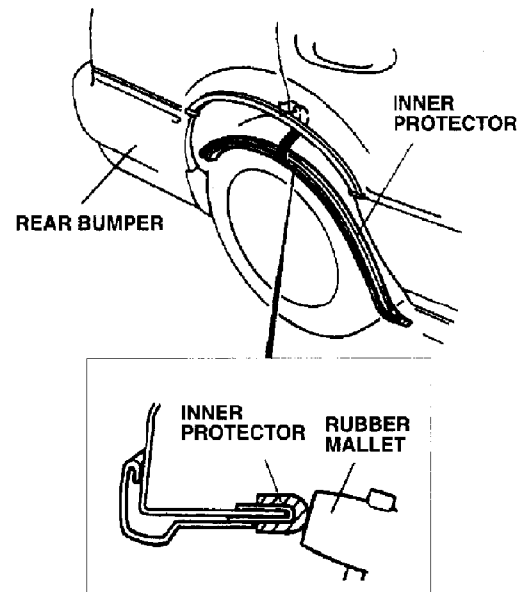

10. Repeat steps 7 through 9 to install the left rear fenderwell trim.