



# INSTALLATION INSTRUCTIONS

Accessory

**CARGO MAT**  
P/N 08P11-S9A-101

Application

**CR-V**

Publications No.


**All 27165**

Issue Date

**SEP 2004**


## PARTS LIST

Cargo mat

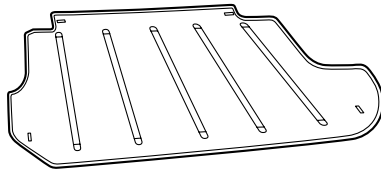

## INSTALLATION

1. Open the tailgate and place the cargo mat onto the cargo floor.

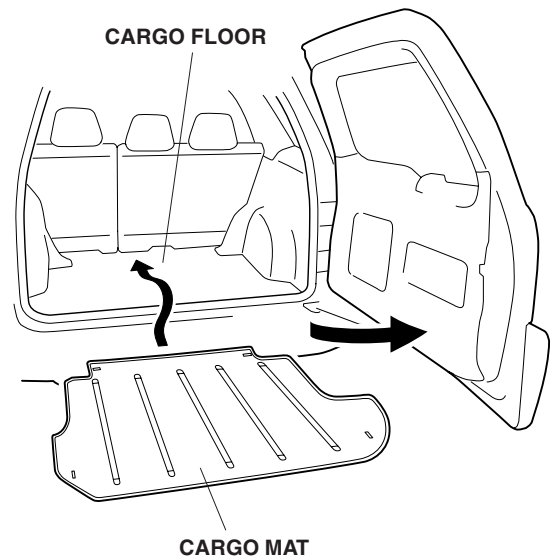

2. Route the cargo hook through the four slits in the cargo mat.

