



INSTALLATION INSTRUCTIONS

Accessory
HOOD AIR DEFLECTOR
P/N 08P47-SWA-100A


Application
2010 CR-V

Publications No.
All 42388
Issue Date
AUG 2009

Put this instruction in the glove box with the vehicle owner's manual.

PARTS LIST

Hood air deflector



2 Brackets A



2 Brackets B



Left bracket C (marked "C-L")



Right bracket C (marked "C-R")



4 Clips



2 Screws, 6 x 11 mm



4 Truss screws, 5 x 9 mm




4 Grommet nuts



2 Collars



3 Alcohol swabs




4 Protection tapes



Template



Hood label



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Shop towel

Felt-tip pen


Scale

Masking tape

Isopropyl alcohol

Hair dryer

Illustration of the Hood Air Deflector Installed on the Vehicle

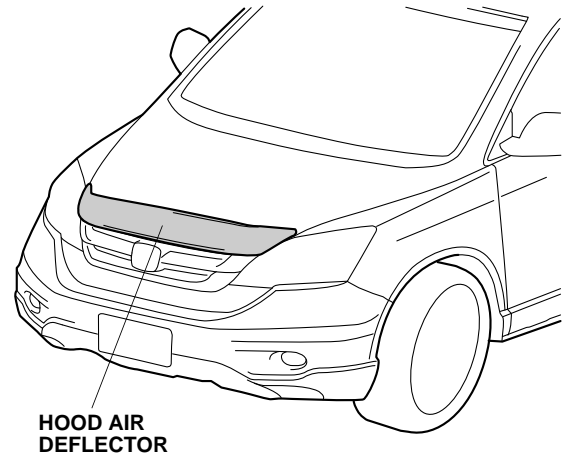


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE:

- Do not damage the body paint finish when installing the hood air deflector.
- This kit should be installed only if the ambient air temperature is above 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customer.


1. Open the hood. Fold back the seal on the hood and locate 4 square holes in the hood. Install a grommet nut into each of the four square holes.

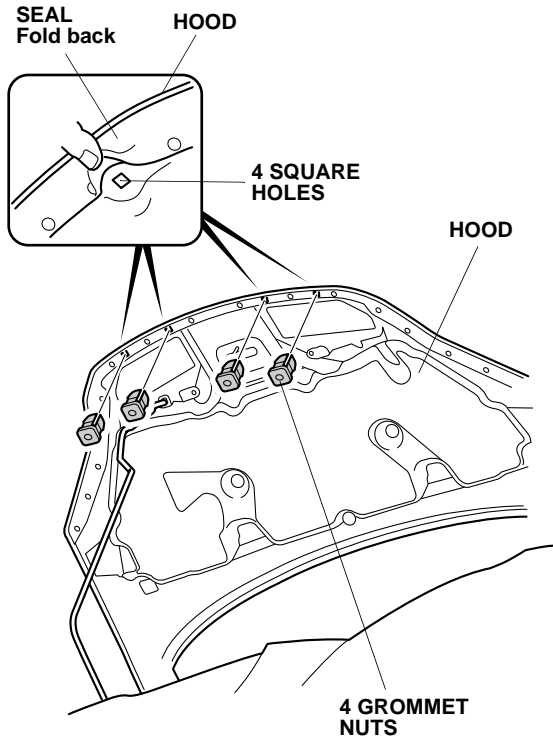

2. Align two brackets A and two brackets B to the holes on the four grommet nuts.

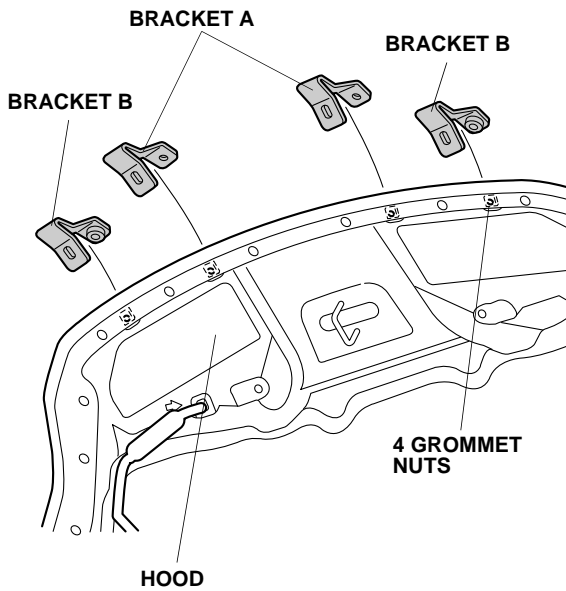


3. Close the hood. Attach pieces of masking tape to the hood under two brackets A and two brackets B as shown.

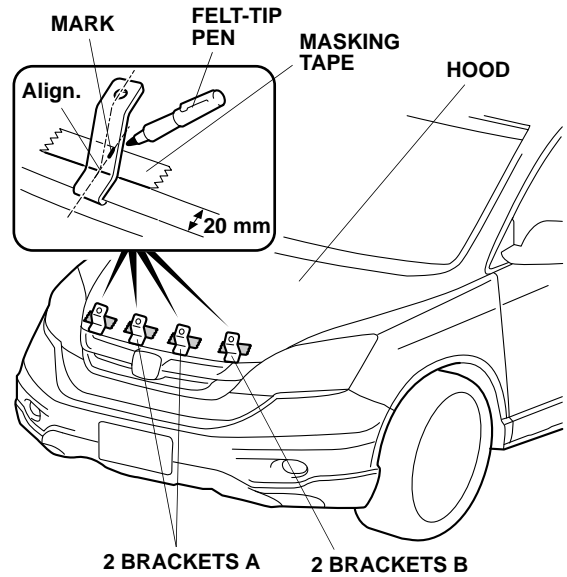


4. Use a felt-tip pen to mark the center of two brackets A and two brackets B on the masking tape.
5. Open the hood. Remove two brackets A and two brackets B.

6. Using one alcohol swab, clean the areas where the protection tapes will attach.

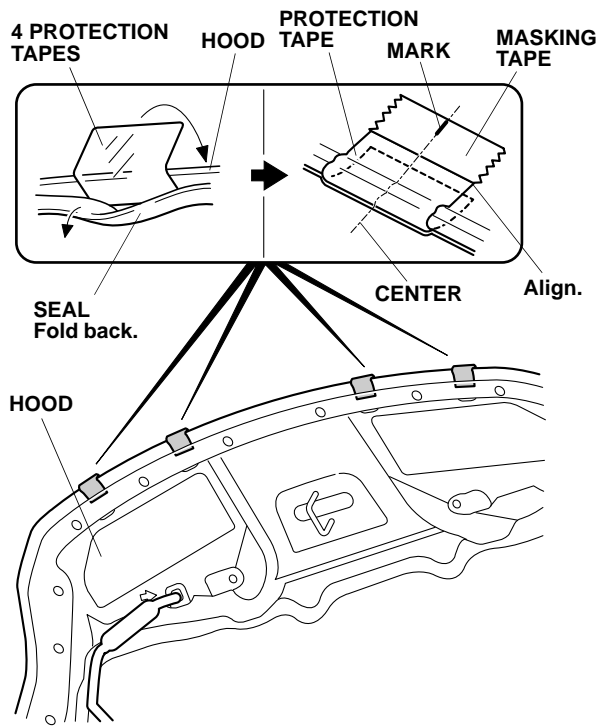


7. Fold back the hood seal. Align the centers of the four protection tapes to the marks made in step 4, and attach them to the hood as shown.
8. Remove the masking tape.

9. Install two brackets A and two brackets B to the four grommet nuts with four 5 x 9 mm truss screws. Push each bracket against the hood while installing the screw.

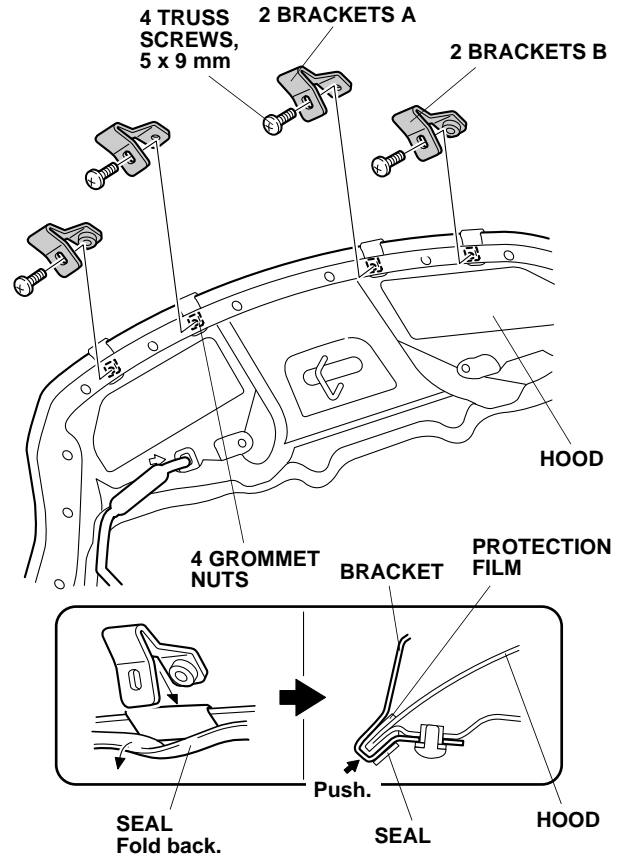


- Using one alcohol swab, clean the area where the left bracket C will attach.

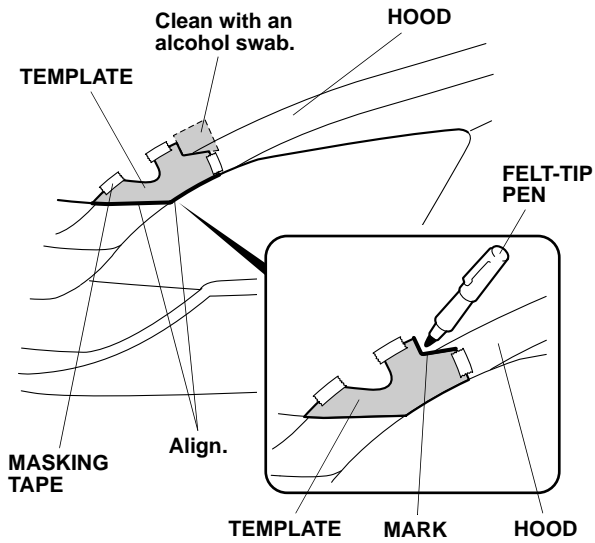


- Align the template on the hood in the area shown, and tape it in place with masking tape.
- Using a felt-tip pen, mark along the template as shown. Remove the template.

- Remove the adhesive backing from the left bracket C. Align and attach the left bracket C to the mark made on the hood in step 12.

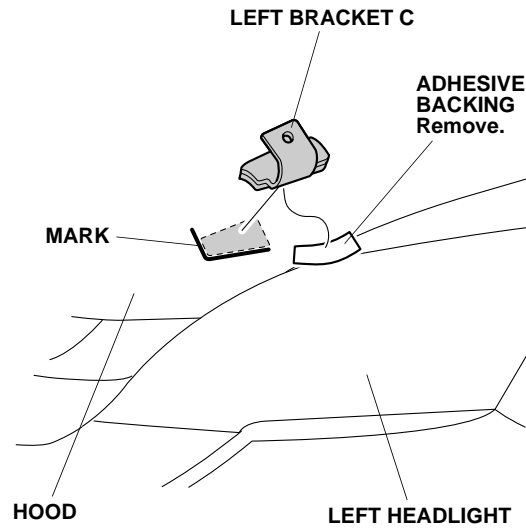


- Erase the marks made on the hood.
- Flip the template over and repeat steps 10 through 14 on the right side of the vehicle.

16. Install the hood air deflector to two brackets A, two brackets B, left bracket C and right bracket C with two 6 x 11 mm truss screws, two collars and four clips.

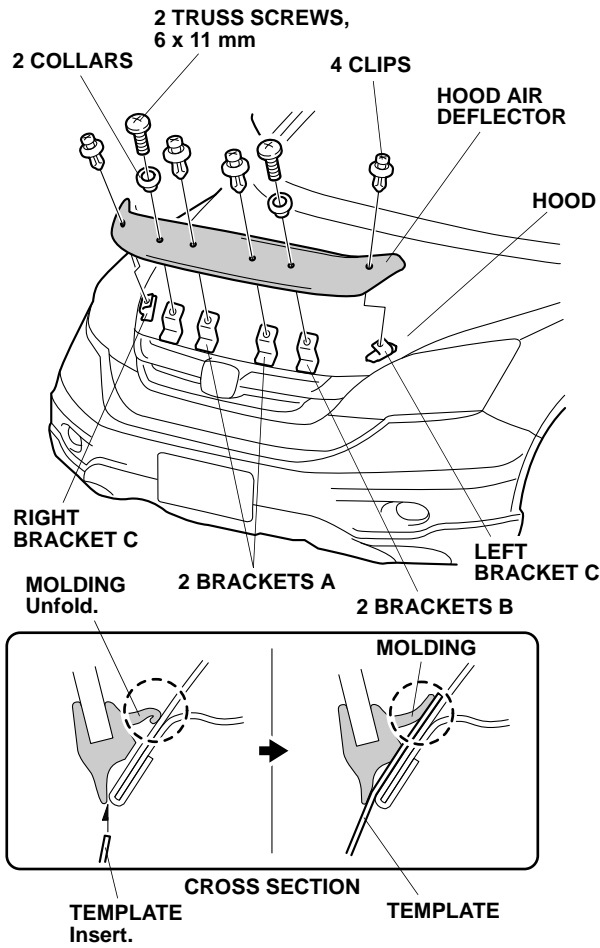

17. Using the large end of a template, insert it between the hood and hood air deflector to unfold the molding as shown.

18. Open the hood. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the advice label will attach.

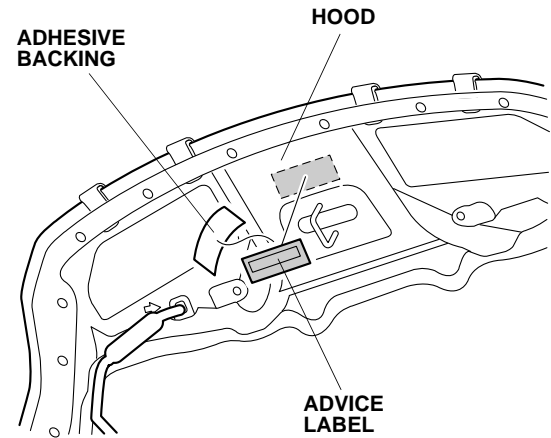

19. Remove the adhesive backing from the advice label and attach it to the hood as shown.