




INSTALLATION INSTRUCTIONS


Accessory	Application	Publications No.
REAR SPLASH GUARDS P/N 08P09-S9V-100	PILOT	All 23622
		Issue Date
		MAY 2002

PARTS LIST

Left rear splash guard

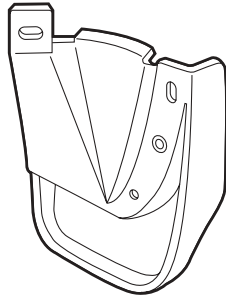

Right rear splash guard

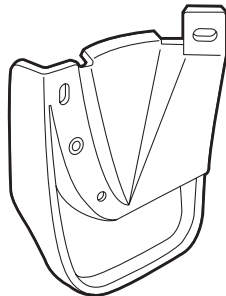

4 Self-tapping screws
(2 not used)



2 Clip nuts



TOOLS REQUIRED


Stubby Phillips screwdriver

Phillips screwdriver


INSTALLATION

NOTE: These installation instructions show the left rear splash guard being installed; the same procedure applies to installing the right rear splash guard.

1. Remove and retain the two self-tapping screws from the rear bumper and the inner fender.

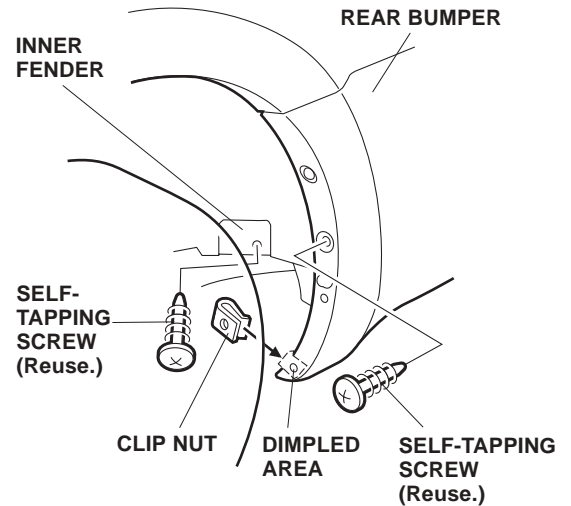

2. Slide the clip nut over the dimpled area of the rear bumper.
3. Position the left rear splash guard on the inner fender and rear bumper, and install three self-tapping screws. Reuse the two screws you removed, and use one screw from the kit.

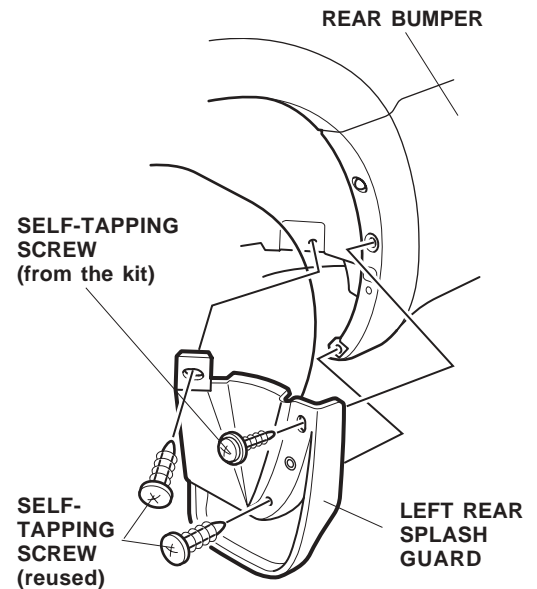

4. Repeat steps 1 through 3 to install the right splash guard.