



INSTALLATION INSTRUCTIONS

Accessory

**WOOD-GRAIN TRIM
PANEL - RES
P/N 08Z03-S9V-100B**

Application

PILOT

Publications No.

All 23638

Issue Date

MAY 2002

PARTS LIST

Wood-grain RES trim



SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel

Masking tape


INSTALLATION

NOTE: This wood RES trim should be installed only if the outside air temperature is 60°F (15°C) or above.

1. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the wood-grain RES trim will attach.
2. Attach a strip of masking tape to the end of each outer adhesive backing, and remove 2 to 3 inches of the adhesive backing. Fold the ends back, and tape them to the front of the trim. If necessary, remove and discard the inner adhesive backings.
3. Position the trim on the existing panel. While applying light pressure on the trim, carefully remove the adhesive backings.

4. After installing the trim, use the palm of your hand to hold pressure against the trim for 30 seconds.

TRIM ATTACHING SURFACE
Clean with isopropyl alcohol.

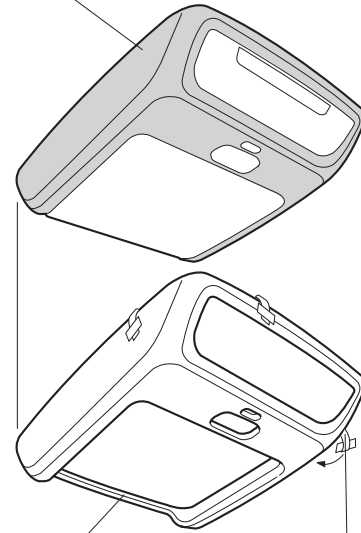

**WOOD-GRAIN
RES TRIM**

**OUTER ADHESIVE
BACKING**
Remove 2 to 3 inches
from the end, and tape it
to the front of the trim.

USE AND CARE

Use a sponge or soft cloth dampened with mild detergent and water solution. After cleaning, wipe with a clean, soft cloth. Do not use cleaners or polishers containing compounds to clean the wood-grain RES trim as they may damage the surface.