




INSTALLATION INSTRUCTIONS


| | | |
|--|--|---|
| <p>Accessory</p> <p>FENDERWELL TRIM P/N 08P21-SDA-100</p> | <p>Application</p> <p>ACCORD 4-DOOR</p> | <p>Publications No.</p> <p>All 30262</p> |
| | | <p>Issue Date</p> <p>SEP 2005</p> |

PARTS LIST


Left front fenderwell trim

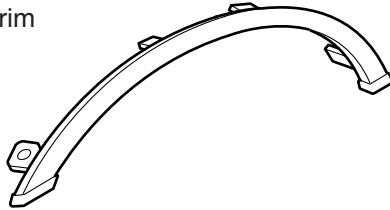


Right front fenderwell trim

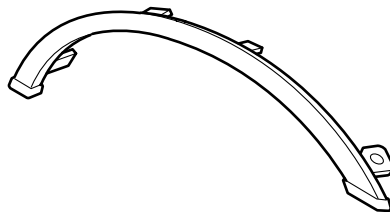


Left rear fenderwell trim

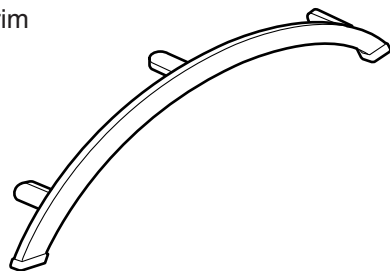

Right rear fenderwell trim

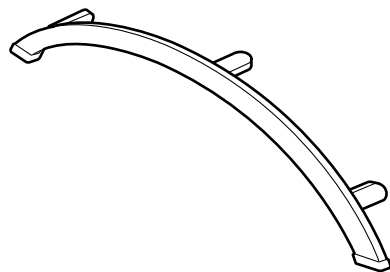

2 Inner protectors

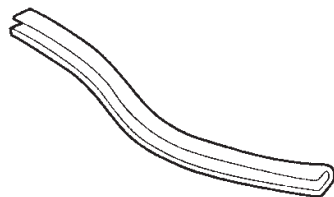

TOOLS AND SUPPLIES REQUIRED

- Flat-tip screwdriver
- Pliers
- Rubber mallet
- Shop towel
- Liquid dishwashing soap and water


INSTALLATION

NOTE:


- These instructions show the left fenderwell trims being installed. The same procedure applies to installing the right fenderwell trims.
- The fenderwell trim is identified by a label attached to the inside surface.
- Clean the area to be covered, and wax it with a high-quality paste wax.
- This part cannot be installed with the half or full nose mask.

Installing the Front Fenderwell Trim

1. Remove the four expansion clips and one self-tapping screw securing the inner fender.

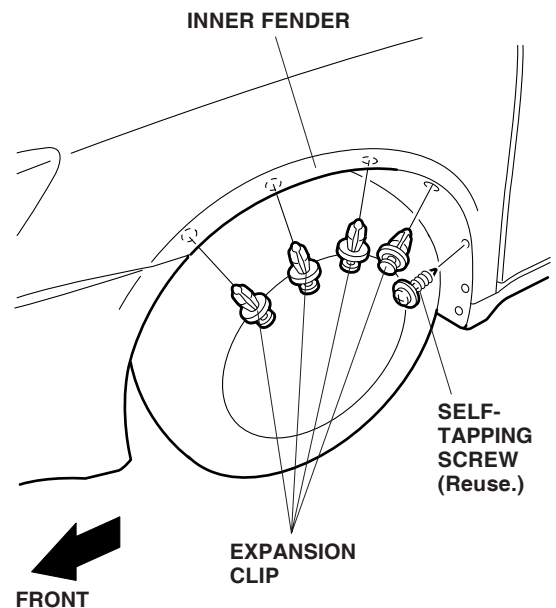


2. Pull the inner fender down, and position the left front fenderwell trim between the inner fender and the fender flange. Align the fenderwell trim with the front bumper as indicated by the arrow.

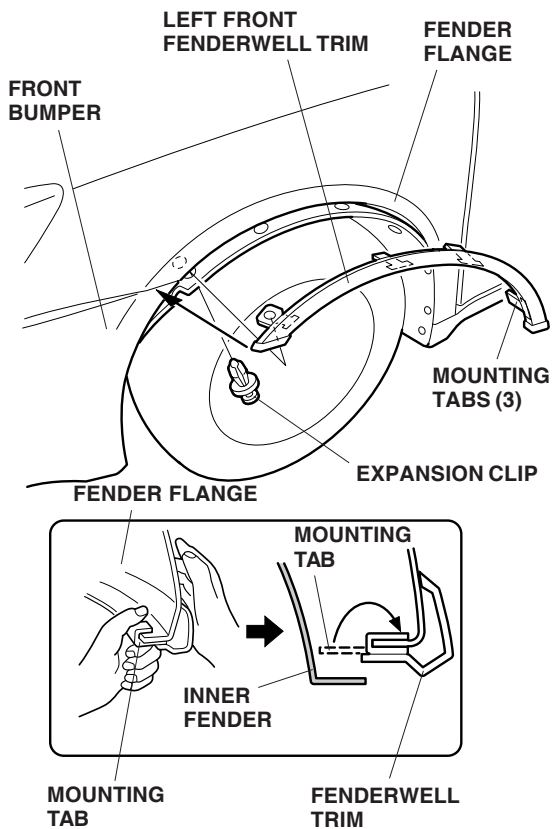


3. While holding the fenderwell trim firmly against the fender, squeeze the three mounting tabs around the fender flange as shown. If necessary, use pliers over a shop towel to bend the mounting tabs around the fender flange.
4. Attach the front of the fenderwell trim and the inner fender to the front fender with one of the expansion clips removed in step 1.
5. Reinstall the remaining three expansion clips and one self-tapping screw to secure the inner fender.
6. Repeat steps 1 thru 5 to install the right front fenderwell trim.

Installing the Rear Fenderwell Trim

7. Position the left rear fenderwell trim on the fender flange, and align the rear end of the fenderwell trim with the rear bumper. Hold the fenderwell trim firmly against the fender, and bend the three mounting tabs around the fender flange.

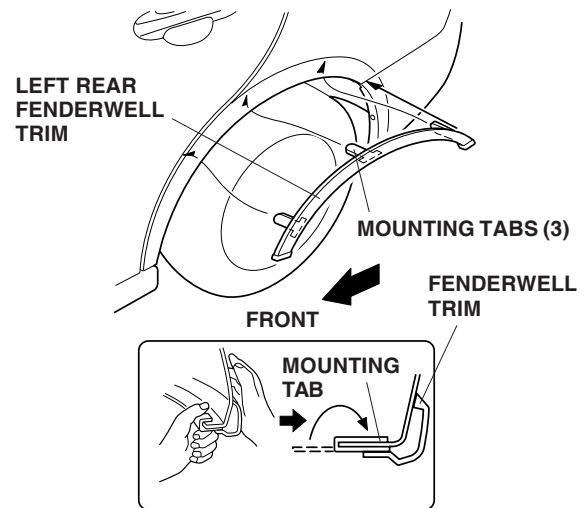

8. Fill the cavity of the inner protector with dishwashing soap and water solution as a lubricant. Starting at the rear of the fenderwell trim drive the inner protector over the fender flange and fenderwell trim using a rubber mallet. Note the direction of the inner protector.

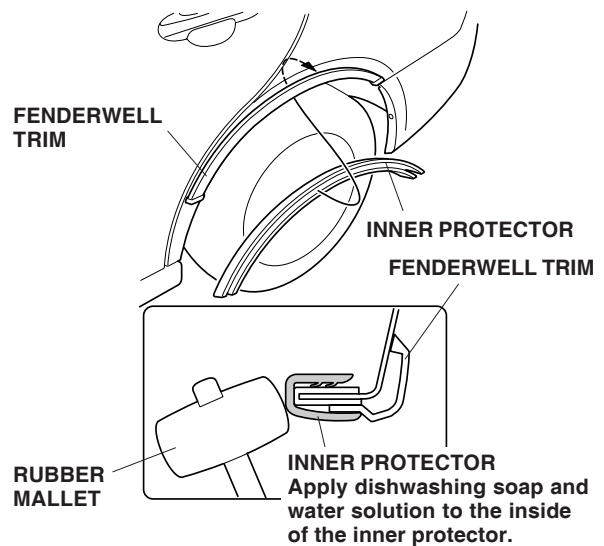

9. Repeat steps 7 and 8 to install the right rear fenderwell trim.