




INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
CARGO NET P/N 08L96-S82-100	2001 ACCORD 2-DOOR	All 21643


Issue Date
AUG 2000

PARTS LIST


Cargo net

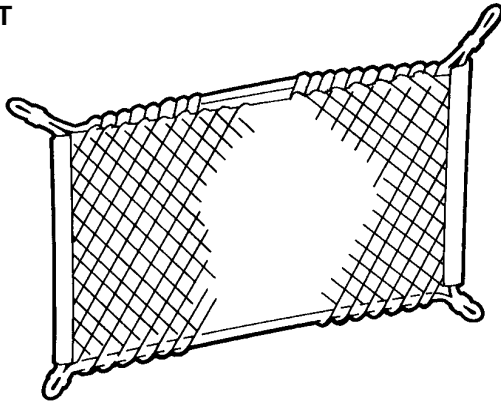

6 Self-tapping hooks

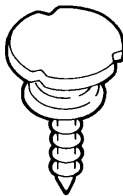

2 Screw hooks

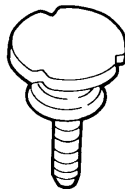

TOOLS REQUIRED


Flat-tip screwdriver

INSTALLATION


NOTE:

These instructions show the left hooks being installed; the same procedure applies to installing the right hooks.



1. Open the trunk and remove the eight clips from the trunk lining (four on the left side, and four on the right side). Save the clips for your customer so they can be reinstalled if the cargo net is removed.

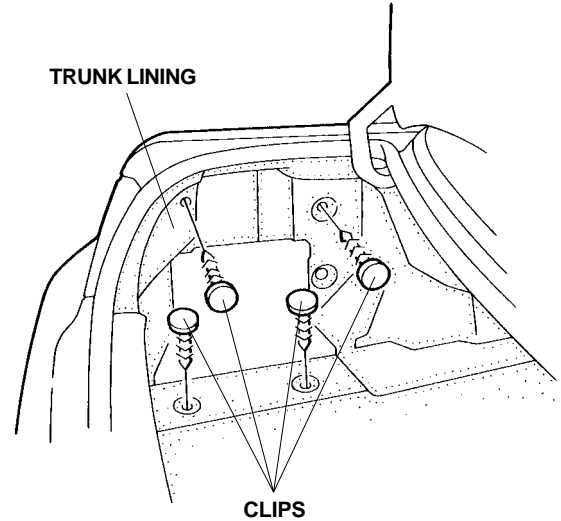

2. Install the six self-tapping hooks and two screw hooks into the clip holes in the trunk lining. Note the screw hook location.

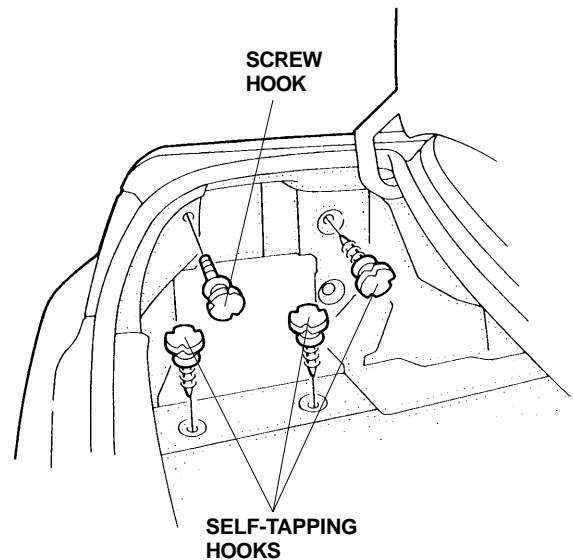

3. Attach the cargo net to the hooks according to the illustration that best serves your needs.

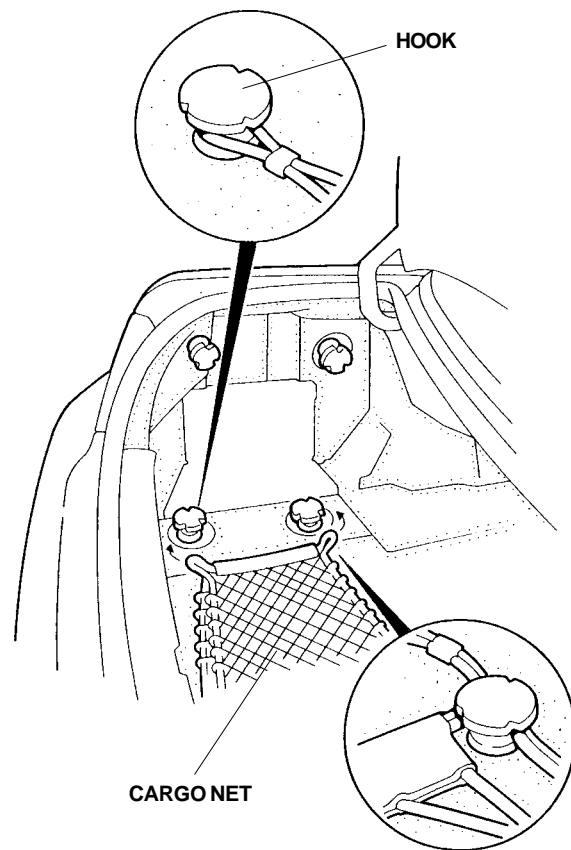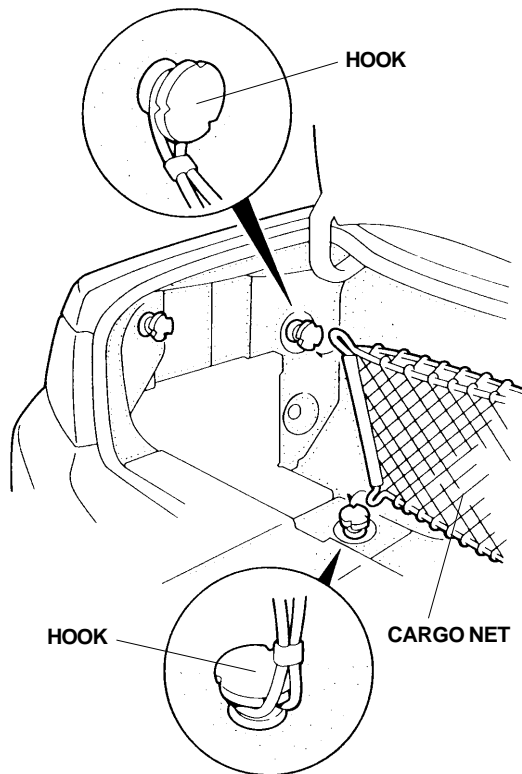

4. Put a copy of these instructions and the clips removed in step 1 in the glove box for your customer.

