



INSTALLATION INSTRUCTIONS

Accessory
SPLASH GUARDS

Application
2011 ODYSSEY

Publications No.
All 43933


Issue Date
SEP 2010

PARTS LIST


P/N: 08P00-TK8-100A (Touring)

P/N: 08P00-TK8-100 (LX, EX, EX-L)


Left front splash guard

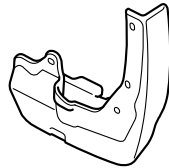


Right front splash guard

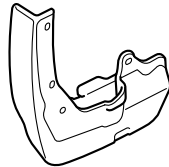

Left rear splash guard

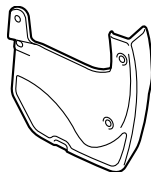

Right rear splash guard

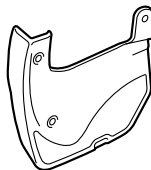

4 Self-tapping screws, 5 x 25 mm



Note: The self-tapping screws are inside small plastic bags taped to the inside 2 of the splash guards.

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver


Stubby phillips screwdriver

Pushpin

Ratchet

10 mm Socket

Illustration of the Splash Guards Installed on the Vehicle

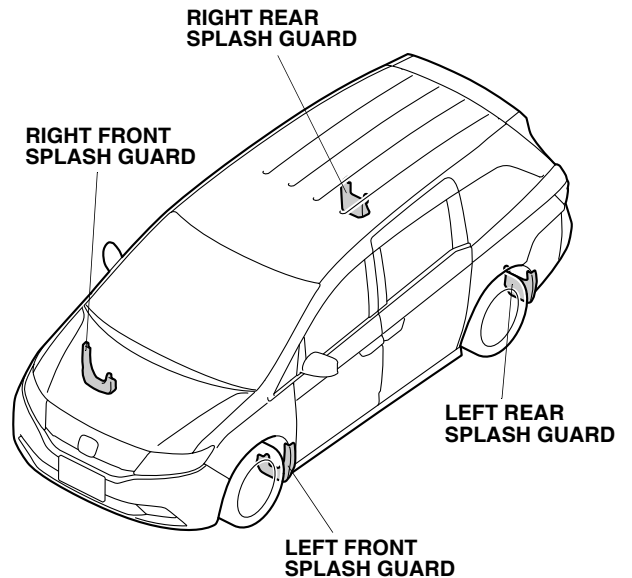


INSTALLATION

NOTE:

- Do not damage the body paint finish.
- Clean and wax the areas to be covered with a high quality paste wax.

Installing the Rear Splash Guards


1. Remove one bolt and three screws from the left rear inner fender and rear bumper.

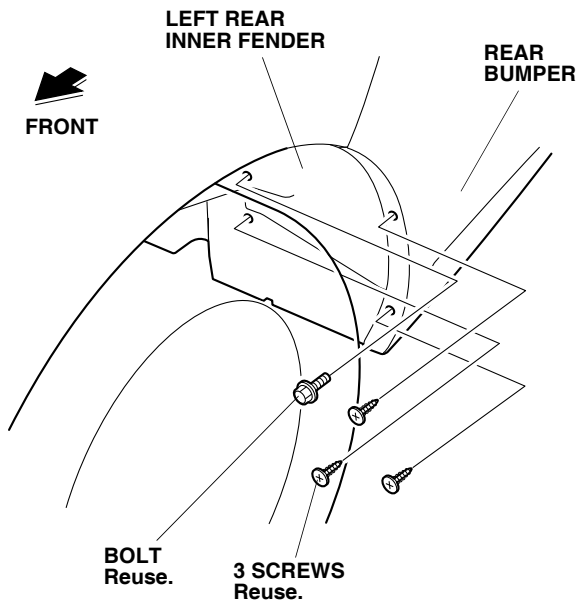


2. Secure the left rear splash guard to the left rear inner fender and rear bumper with one 5 x 25 mm self-tapping screw (provided), one bolt (from step 1), and two screws (from step 1). While holding the splash guard firmly against the fenderwell, tighten the self-tapping screws, and bolt in this order

1 → 2 → 3 → 4.

NOTE: Make sure that there is no gap between the splash guard and the body. If a gap exists, loosen the screws and repeat the above procedure.

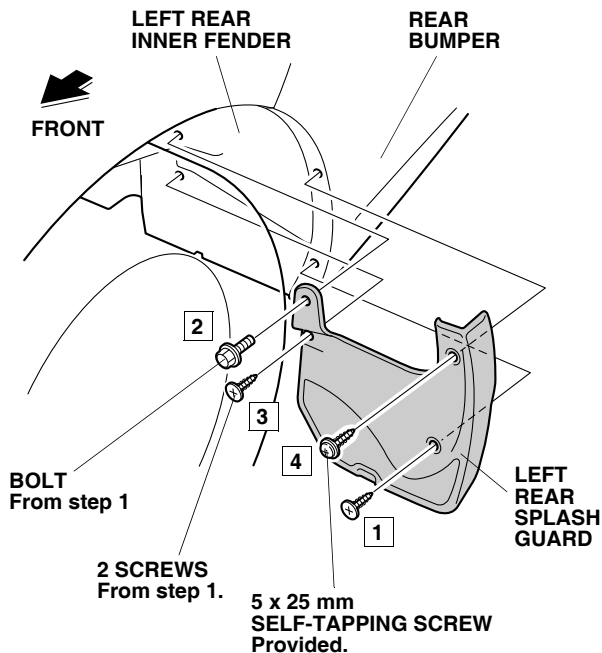


3. Remove one bolt and two screws from the right rear inner fender and rear bumper.

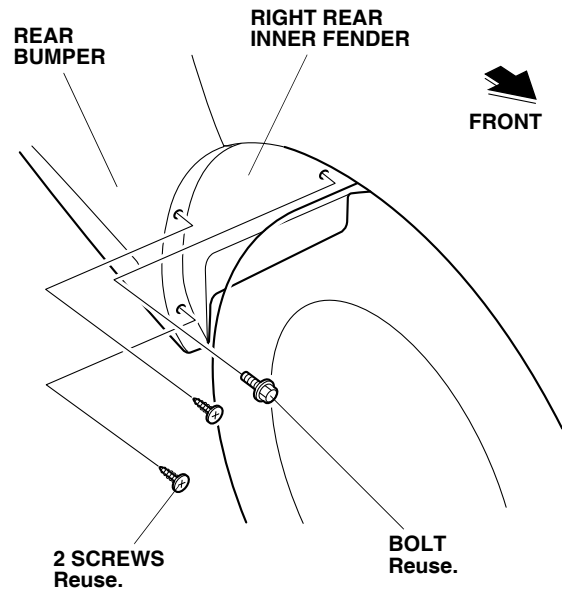


4. Secure the right rear splash guard to the right rear inner fender and rear bumper with one hook, one 5 x 25 mm self-tapping screw (provided), one bolt (from step 3), and one screw (from step 3). While holding the splash guard firmly against the fenderwell, tighten the screws, and bolt in this order

NOTE: Make sure that there is no gap between the splash guard and the body. If a gap exists, loosen the screws and repeat the above procedure.

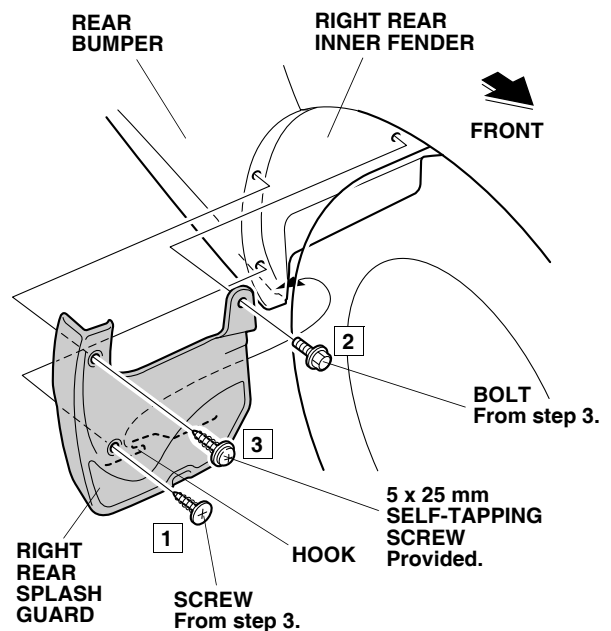


Installing the Front Splash Guards


- Turn the steering wheel fully counterclockwise.

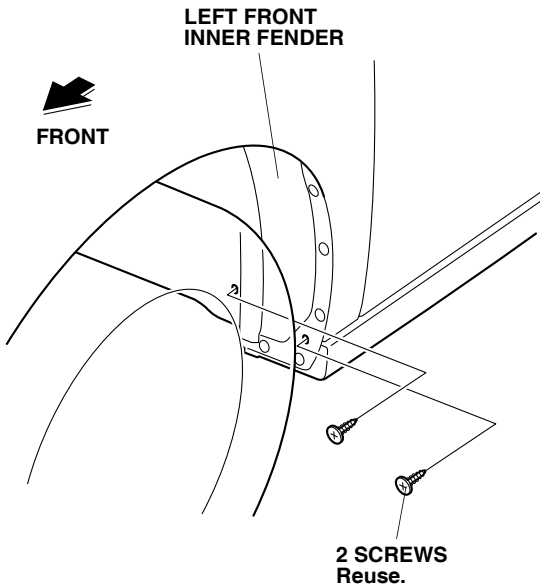

- Remove two screws from the left front inner fender.
- Using a pushpin, pierce the center of two clips on the left front inner fender.

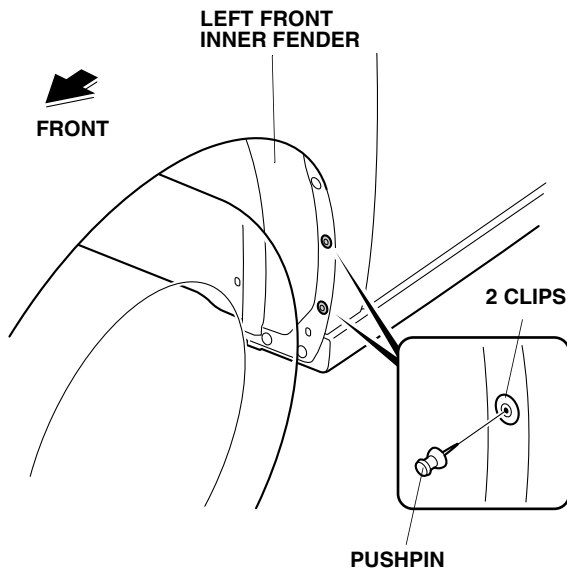

- Secure the left front splash guard to the left front inner fender with one 5 x 25 mm self-tapping screw (provided), and three screws (from step 1 and 6). While holding the splash guard firmly against the fenderwell, tighten the self-tapping screw and screws in the order 1 → 2 → 3 → 4. **NOTE:** Make sure that there is no gap between the splash guard and the body. If a gap exists, loosen the screws and repeat the above procedure.

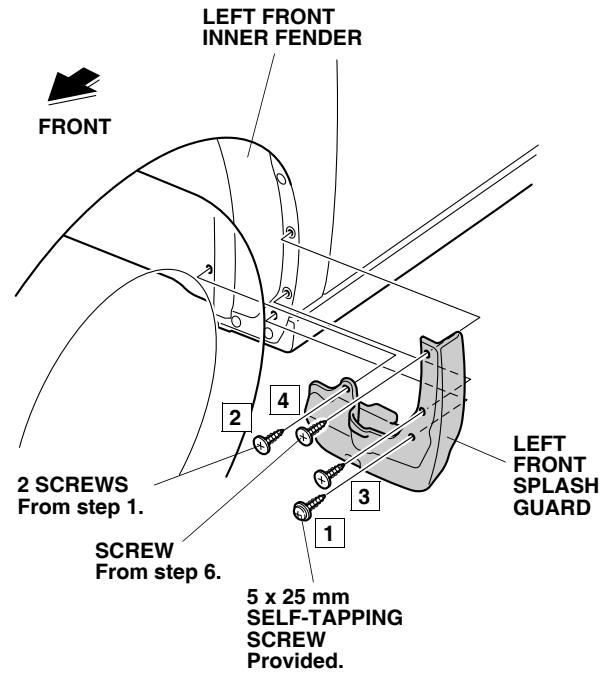

- Repeat steps 5 through 8 to install the right front splash guard.