




INSTALLATION INSTRUCTIONS


Accessory FULL NOSE MASK P/N 08P35-S0X-100G	Application ODYSSEY	Publications No. All 26011
		Issue Date AUG 2003

PARTS LIST

Mask (hood section)

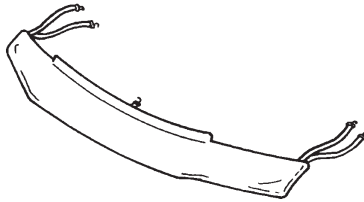

Mask (bumper section)

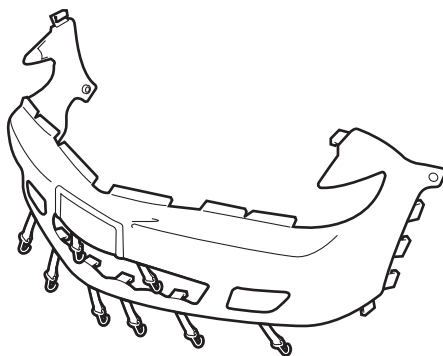

2 Snap-screws




2 Fenderwell nuts



2 Washers



Storage bag

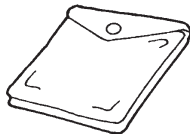

TOOLS REQUIRED

#2 Phillips screwdriver

Scissors

INSTALLATION


NOTE:

- Make sure the vehicle and the nose mask are clean and completely dry before installation. If moisture under the mask is allowed to dry, it may cloud the paint. If the mask gets wet, remove it and allow it to air-dry completely.
- Make sure any repainted surfaces are cured.
- Make sure the hood and nose of the vehicle have been waxed with a high-quality paste wax.
- Make sure you install the nose mask securely. If the mask starts to flap or comes loose while driving, safely pull off the highway, stop the vehicle, and secure or remove the mask.

Displaying the License Plate

If your state law requires the display of both license plates, cut out the piece of the bumper section that covers the front license plate.


- Face the inside of the mask toward you.
- Carefully cut out the license plate section with scissors at the top seam, and remove the overcast stitching.

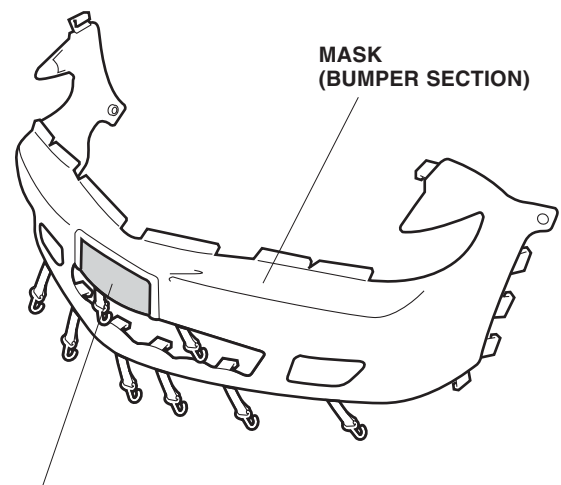


OVERCAST STITCHING
(Remove for license plate.)

Installing the Hood section

1. Open the hood and locate the two center clips that secure the underhood liner. Remove the two center underhood liner clips.

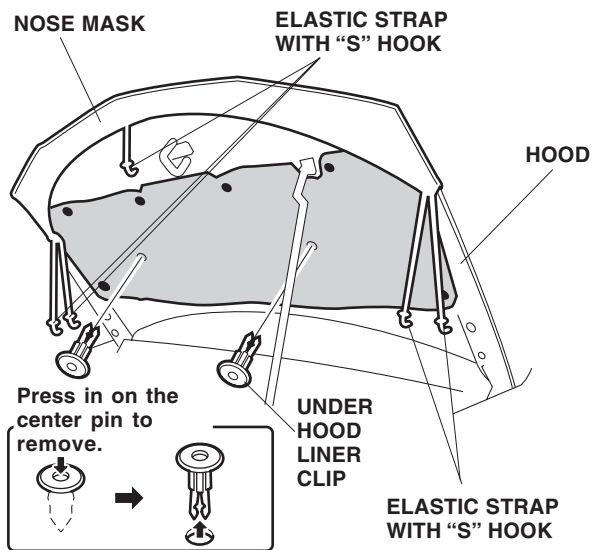


2. Fit the corners of the mask's hood section around the hood. Adjust the mask so it fits smoothly around the edges.
3. Secure the mask by hooking the five elastic straps to the holes in the back of the hood.

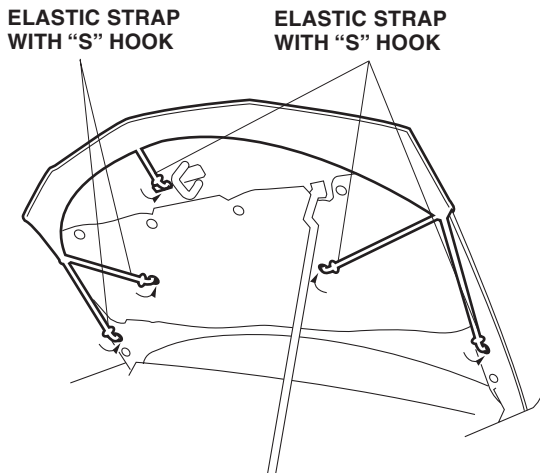


Installing the Bumper Section

4. Turn the steering wheel all the way clockwise.
5. Pry out the expansion clip that fastens the inner fender; remove and retain the expansion clip, then clean the area around the hole.

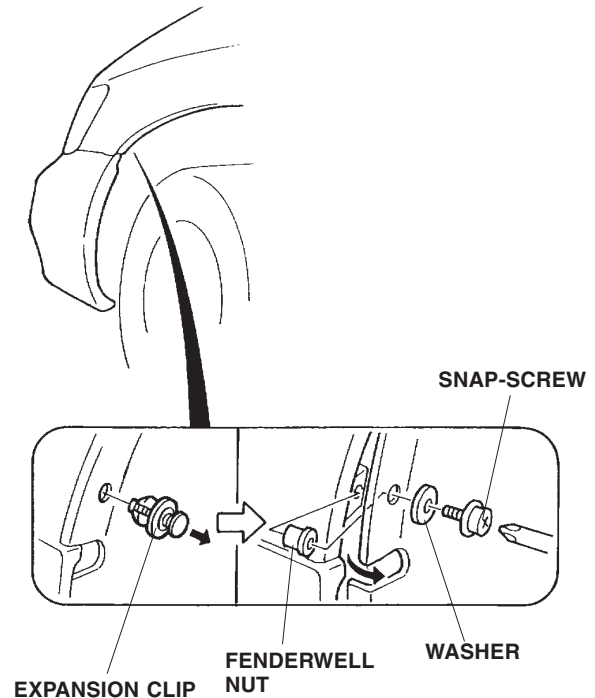


6. Pull out on the inner fender, and press one fenderwell nut into the hole in the fender flange.
7. With its washer in place, securely tighten a snap-screw into the fenderwell nut.
8. Turn the steering wheel all the way counterclockwise and repeat steps 5 thru 7 to install a snap-screw on the right fenderwell.

- Slip the pocket of the mask's fender section onto the front corner of the fender; then attach the plastic clip to the top inside edge of the fender. Attach the "S" hook to the hole in the front bulkhead.

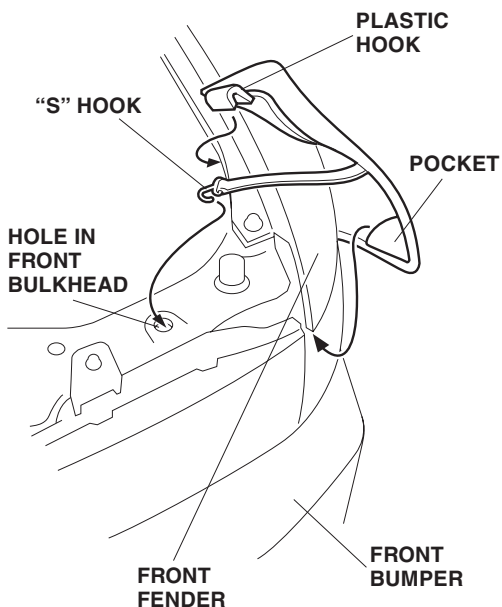


- Fit the mask across the bumper, and attach the mask to the other side in the same manner.
- Pull the mask back toward the wheelwell, smooth out any wrinkles, and snap the mask to the snap-screw.

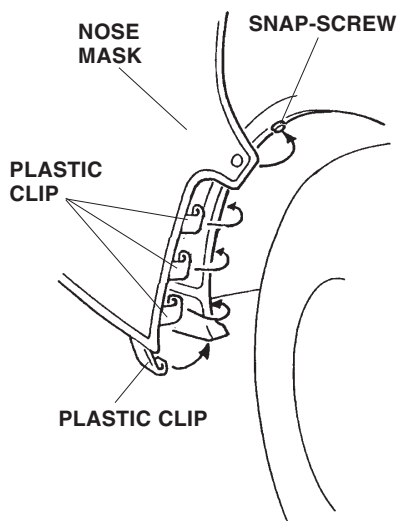


- Attach one plastic clip to the bottom corner of the spoiler, and attach the other three plastic clips to the fenderwell.
- Repeat steps 11 and 12 on the other side.

- Insert the upper tabs of the mask into the opening between the left headlight and the front bumper; then between the grille and front bumper. Repeat on the other side.

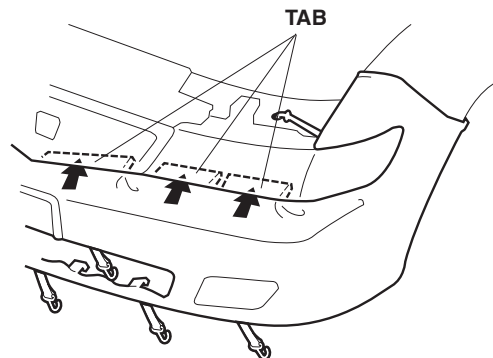

- Attach the four plastic hooks to the bottom edge of the grille opening, and the "S" hooks to the top edge of the grille opening.

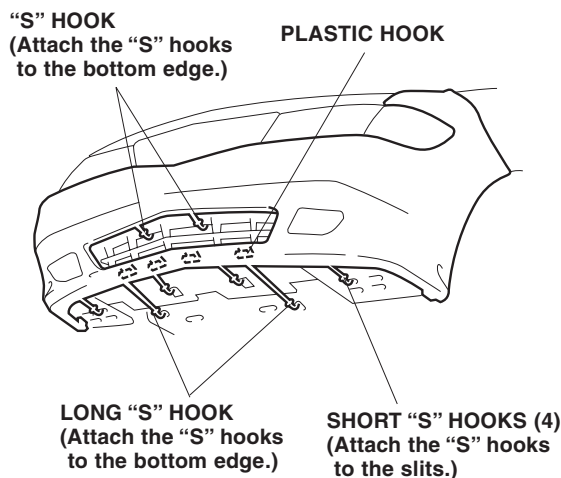

- Pull the mask toward the bottom edge, and attach the three long "S" hooks and the two short "S" hooks to the underspoiler.
- Put these instructions and the expansion clip (removed in step 5) into the storage bag for future use.

CLEANING THE NOSE MASK

Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the vinyl and the flannel backing. Rinse the mask completely with clean water and hang it to dry, out of direct sunlight. Make sure the mask is completely dry before you reinstall it.