


HandA-Accessories.com

PUB No. Title
AI AII21921 2001 CIVIC 2-DOOR CD CHANGER ATTACHMENT


Issued
10/20/00

 HONDA INSTALLATION INSTRUCTIONS	Accessory	Application	Publications No.
	CD CHANGER ATTACHMENT	2001 CIVIC 2-DOOR	AII 21921 Issue Date OCT 2000


PARTS LIST

**CD Changer Attachment (sold separately):
P/N 08B26-S5P-100**


CD changer bracket

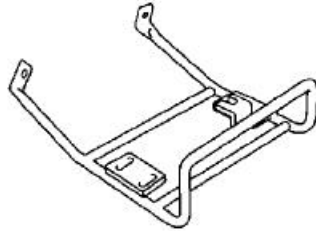

Right side bracket

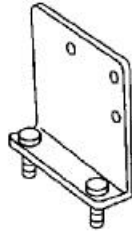

Left side bracket

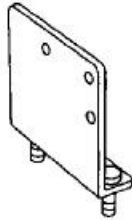


3 Clip nuts



3 Washer-bolts




16 Wire ties

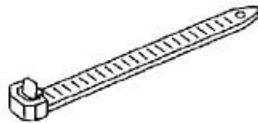


4 Cap nuts



5 Cushion tapes

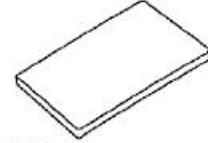

BUS cable

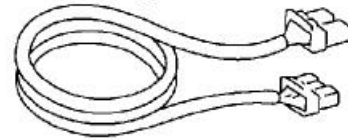


4 Washer-screws



**CD Changer (sold separately):
P/N 08A26-1B1-100**


CD changer

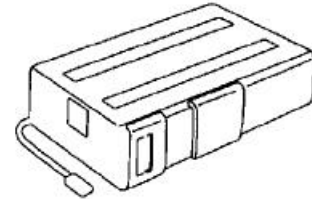

Owner's Manual



CD magazine

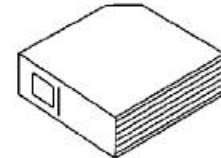

4 Washer-screws, 4 x 6 mm
(Not used)



Adhesive seal sheet



Locking covers




PUB No. Title
AI AII21921 2001 CIVIC 2-DOOR CD CHANGER ATTACHMENT

Issued
10/20/00

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Flat-tip screwdriver
Stubby Phillips screwdriver
10 mm Combination wrench
Clip remover
8 mm and 10 mm Sockets
Ratchet
Small flat-tip screwdriver
Isopropyl alcohol
Shop towel

Illustration of the CD Changer Installed on the Vehicle

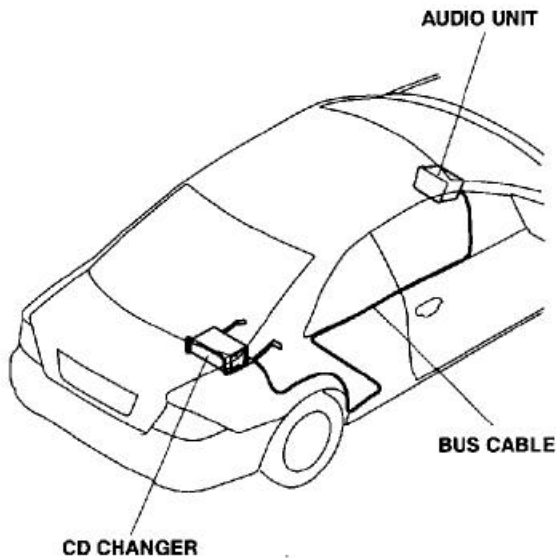


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your car. These procedures should not be attempted by "do-it-yourselfers."

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.

3. Open the trunk lid, and remove the weatherstrip in the area shown. Remove the four clips, then pull out on the right trunk side trim panel in the direction shown.

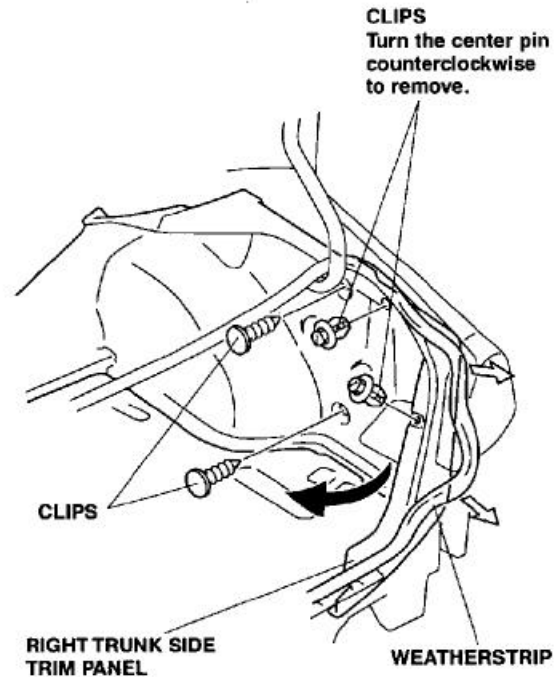


4. Inside the passenger's compartment, remove the rear seat cushion by removing the bolt and releasing the two hooks.

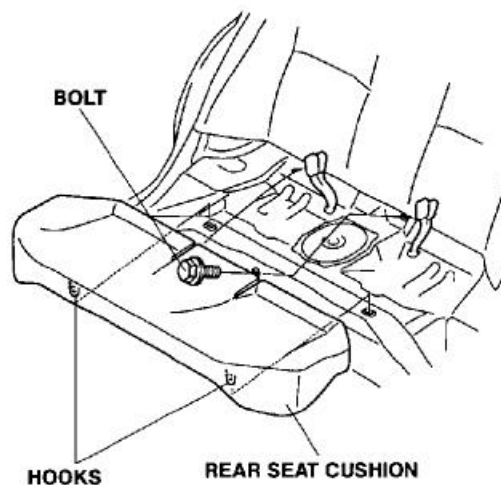

PUB No. Title
AI AII21921 2001 CIVIC 2-DOOR CD CHANGER ATTACHMENT


Issued
10/20/00

5. Inside the trunk, fold the right rear seat-back forward by pulling the lever under the rear parcel shelf.

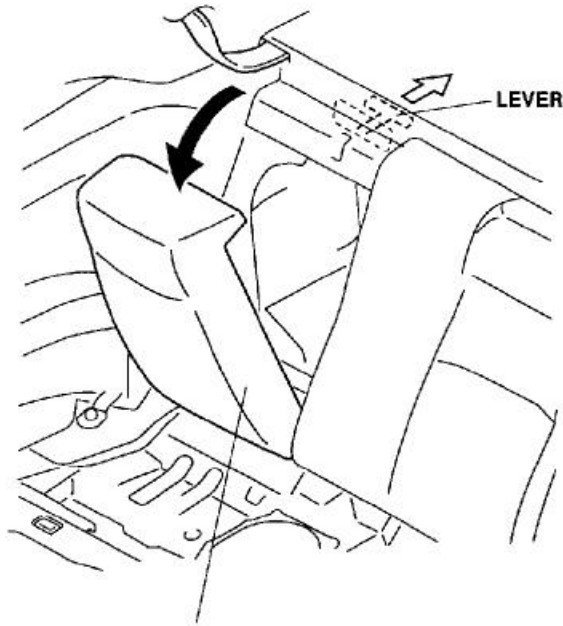


RIGHT REAR SEAT-BACK

6. Pry up on the two retaining tabs and the two hooks, and remove the lid from the right rear side lining.

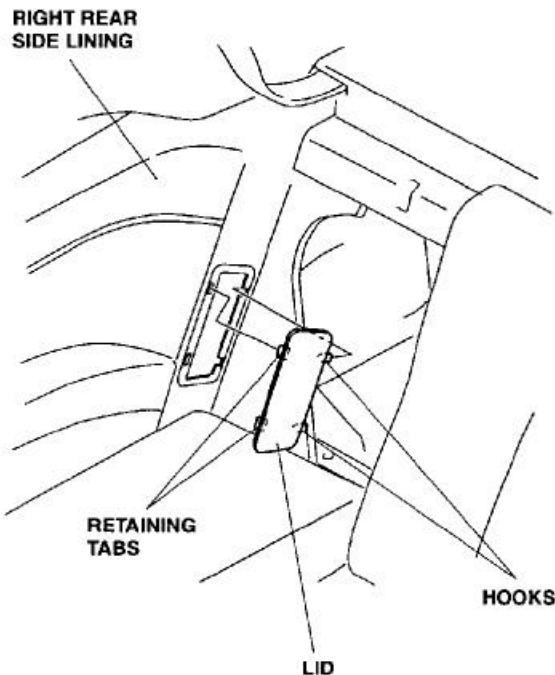


7. Pull up on the parking brake lever, then remove the console box (nine clips).

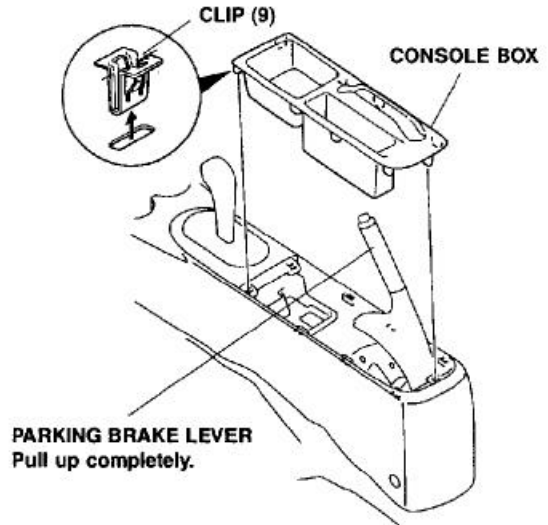

8. Remove the two self-tapping screws, two washer-screws, and two clips that fasten the center console, and remove the console:

- On A/T model, place the shift lever in the Neutral position.
- If the seat is equipped with an optional armrest, recline the seat-back before you remove the console.
- On M/T model, remove the shift knob from the lever by firmly holding down the plastic section above the boot with one hand and turning the knob counterclockwise.

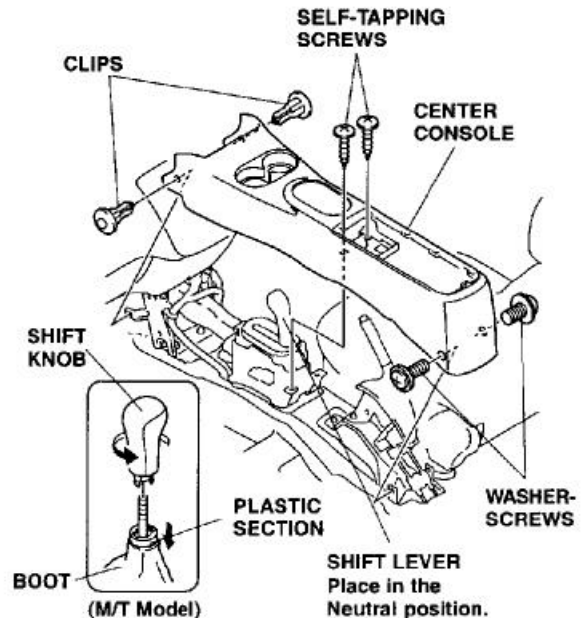


PUB No. Title
AI AII21921 2001 CIVIC 2-DOOR CD CHANGER ATTACHMENT

Issued
10/20/00

9. Remove the dashboard center lower cover.


Without a Cigarette Lighter and Ashtray:

- With the parking brake applied, place the gear shift lever in the Neutral position.
- Gently pry out on the lower cover to release the six retaining clips.
- Unplug the accessory power socket connector, and remove the lower cover.
- If equipped, unplug the fog light harness.

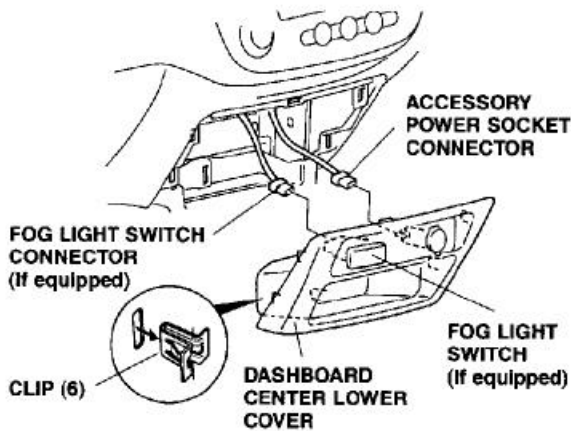


With a Cigarette Lighter and Ashtray:

- With the parking brake applied, place the gear shift lever in the Neutral position.
- Remove the ashtray.
- Inside the ashtray opening, remove the one self-tapping screw that secures the dashboard center lower cover.
- Gently pry out on the lower cover to release the six retaining clips.
- Unplug the cigarette lighter harness and the illumination bulb, then remove the lower cover. If equipped, unplug the fog light harness.

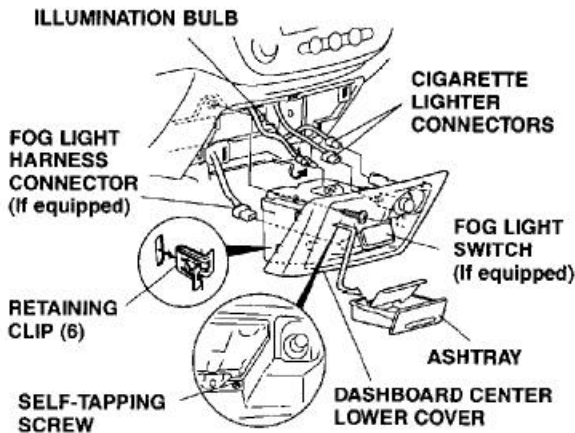


10. Remove the center panel:

- Remove the two bolts from the bottom of the center panel.
- Reach through the bottom opening, and push out on the center panel bracket to release the nine retaining clips.
- Unplug the five connectors and the antenna lead, then remove the center panel.

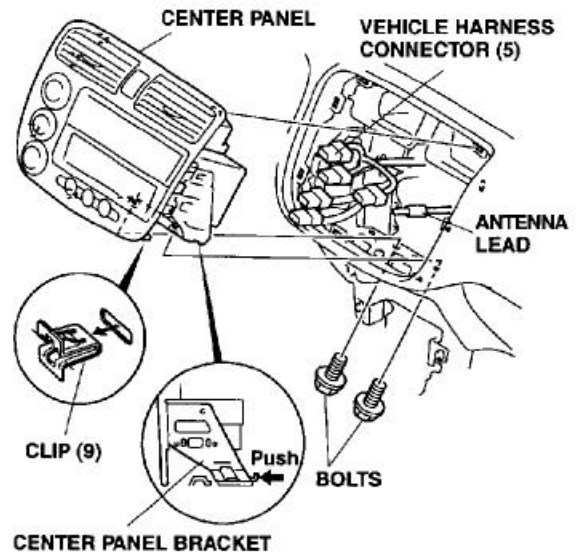

Installing the CD Changer

11. Carefully unpack the CD changer. Remove the three shipping clips, and discard the shipping cover. Save the shipping clips for your customer in the event the unit needs to be serviced.

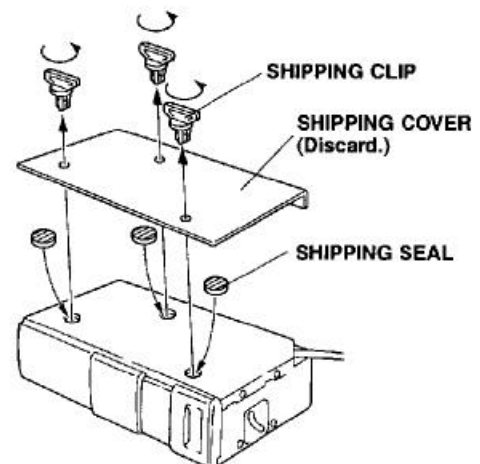


12. Attach an adhesive seal (included in the CD Changer) over each of the three shipping clip holes.


PUB No. Title
AI AII21921 2001 CIVIC 2-DOOR CD CHANGER ATTACHMENT

Issued
10/20/00


13. Visually check the position of the spring adjusting pins on both sides of the CD changer. If both of the spring adjusting pins are not in the horizontal (H) position, move the pins to the horizontal position with a small flat-tip screwdriver.

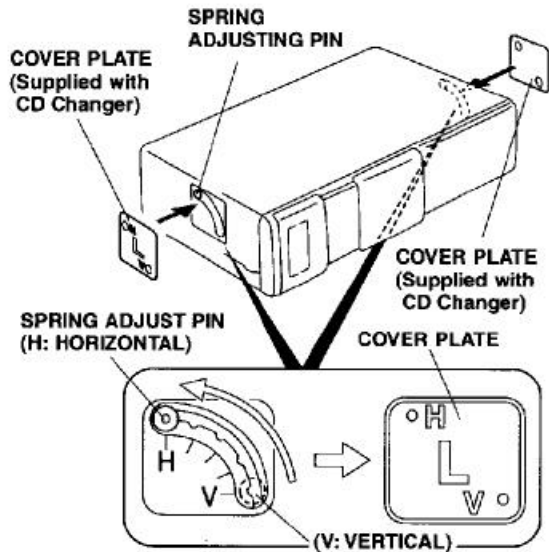


14. Remove the adhesive backings from the "L" and "R" locking covers, and attach them to the side of the CD changer. Align the two diagonally opposite holes with the H and V positions.
15. Slide the three clip nuts onto the rear shelf through the holes in the shelf.

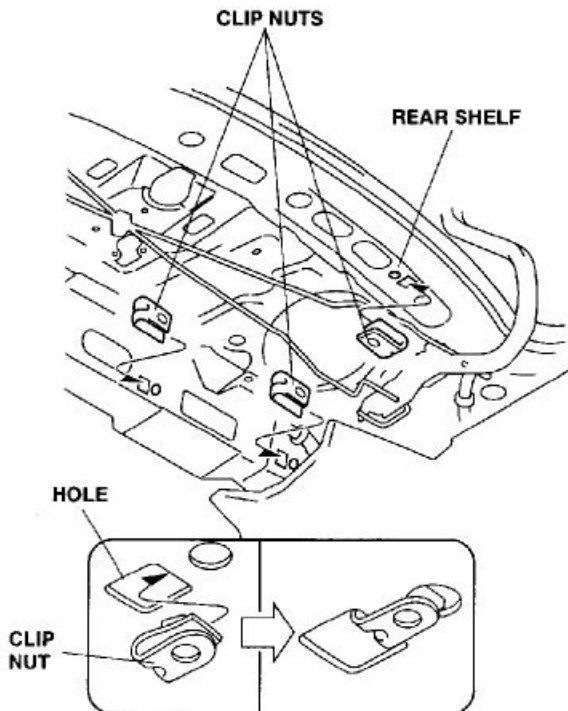

16. Position the CD changer bracket on the clip nuts you just installed, and install the three washer-bolts.

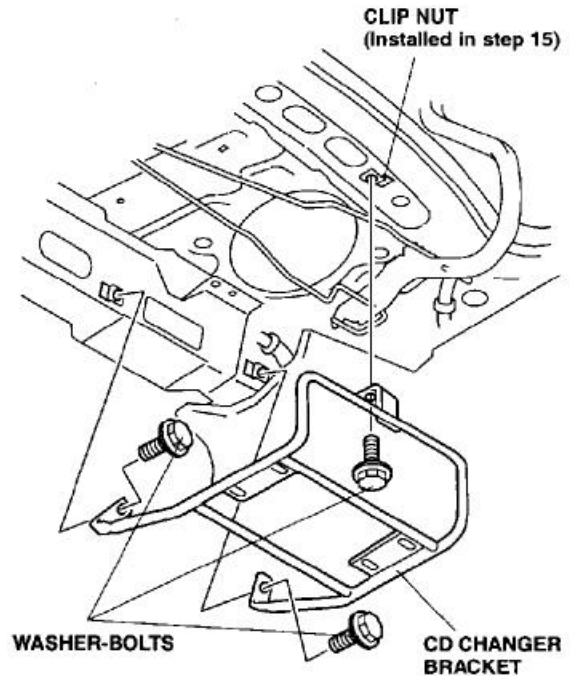


17. Position the side brackets on the CD changer, and install the four washer-screws supplied with the CD Changer Attachment. Note the direction of the side brackets: The extra hole in each of the brackets should face the front of the CD changer. Tighten the washer-screws securely.

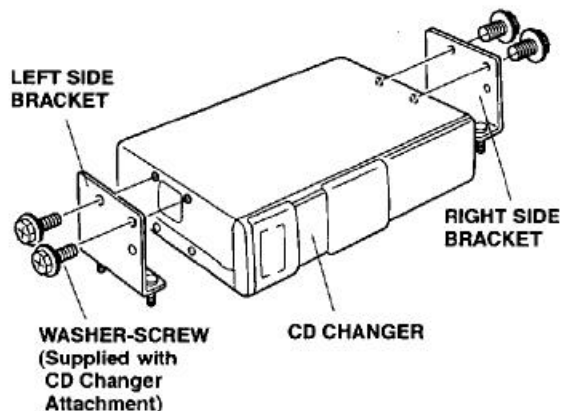

PUB No. Title
AI AII21921 2001 CIVIC 2-DOOR CD CHANGER ATTACHMENT


Issued
10/20/00

18. Position the CD changer on the CD changer bracket, and install a cap nut on the end of each stud extending from the CD changer.

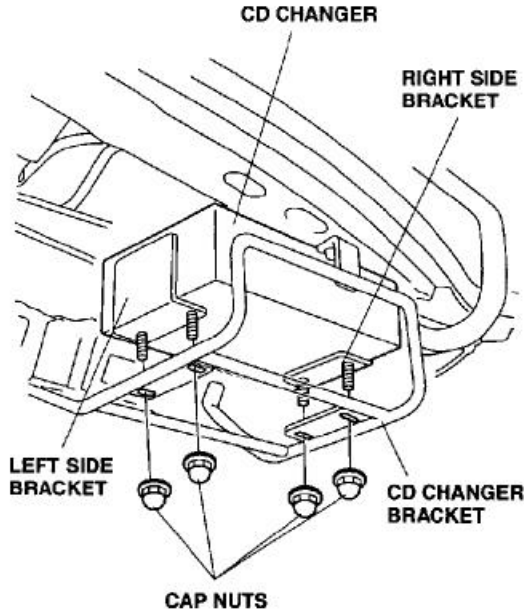


Routing the BUS Cable

19. Connect one end of the BUS cable to the connector from the CD changer.

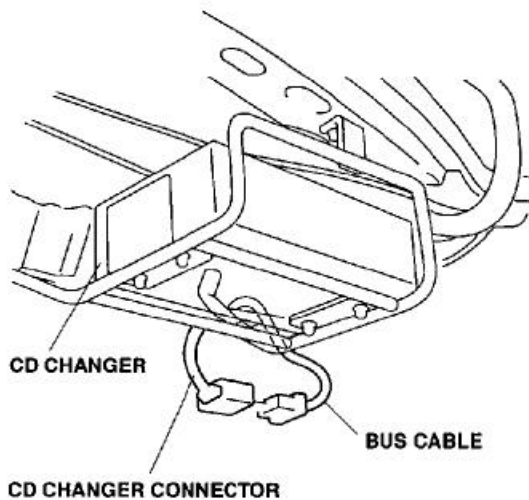


20. Secure the connector and BUS cable to the CD changer bracket with three wire ties in the areas shown.

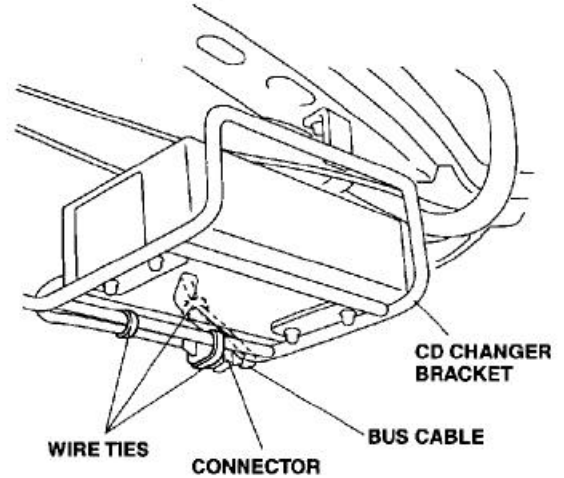

21. Inside the trunk, route the other end of the BUS cable into the passenger's compartment through the hole in the rear panel that divides the passenger's compartment from the trunk.


Route the BUS cable into the passenger's compartment.

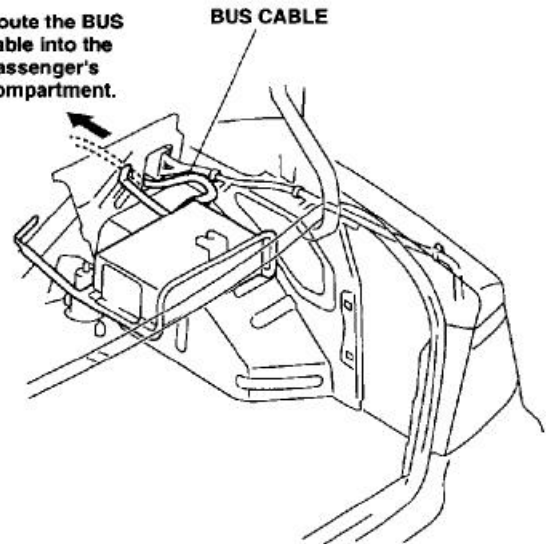


PUB No. Title
AI AII21921 2001 CIVIC 2-DOOR CD CHANGER ATTACHMENT

Issued
10/20/00

22. Inside the passenger's compartment along the right side trim panel, route the BUS cable along the vehicle harness.

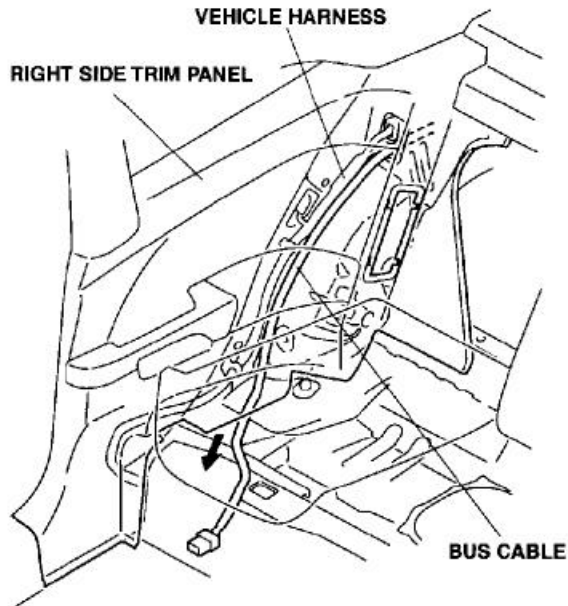


23. Raise the right rear seat-back, and remove the clip that secures the floor carpet. Turn over the floor carpet.

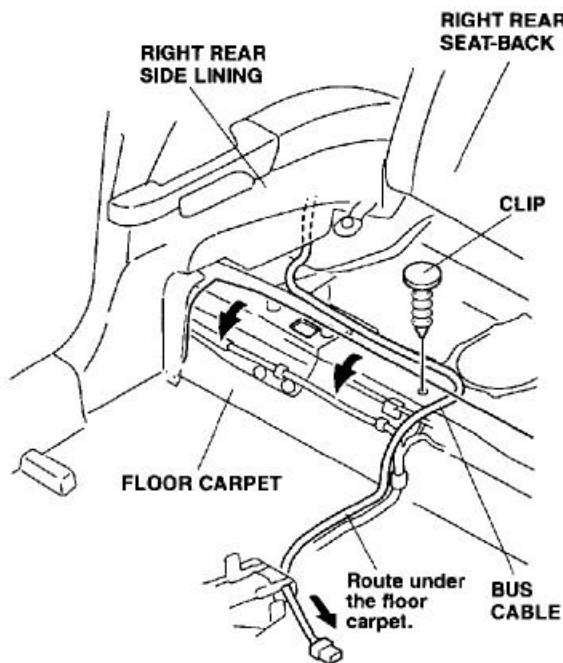


24. Pull the BUS cable out from under the right rear side lining, and route the cable forward as shown.

25. Route the BUS cable forward under the parking brake lever base and along the vehicle harness to the right front console frame.

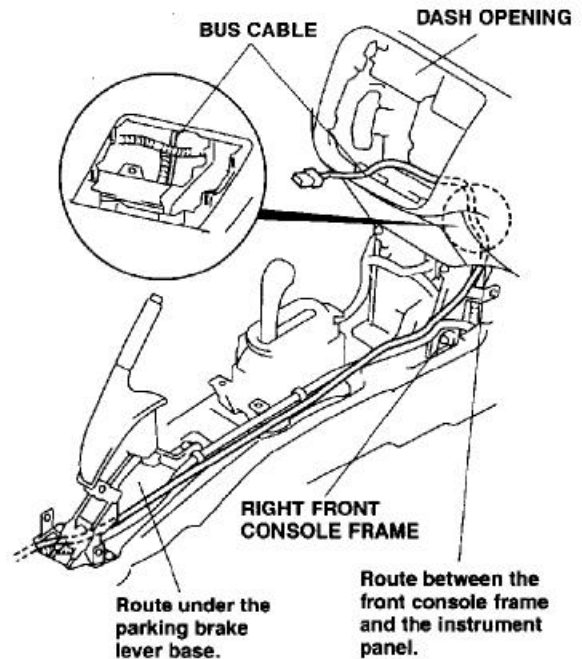


26. Route the BUS cable connector through the clearance between the right front console frame and the instrument panel and out through the dash opening.
27. Pull the vehicle harness 20-pin connector (blue) and BUS cable connector out through the dash opening; then secure them to the vehicle harness with one wire tie in the area shown.

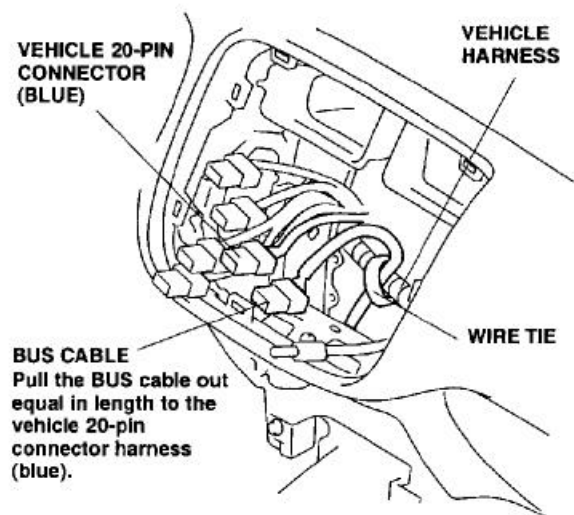


PUB No. Title
AI AII21921 2001 CIVIC 2-DOOR CD CHANGER ATTACHMENT

Issued
10/20/00

28. Secure the BUS cable to the vehicle harness with six wire ties in the areas shown.

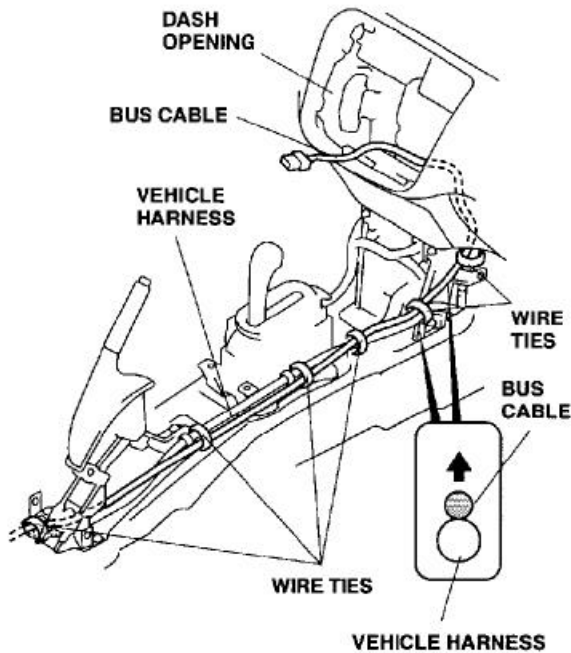


29. Turn over the floor carpet, then secure the BUS cable to the vehicle harness with the one wire tie in the area shown.

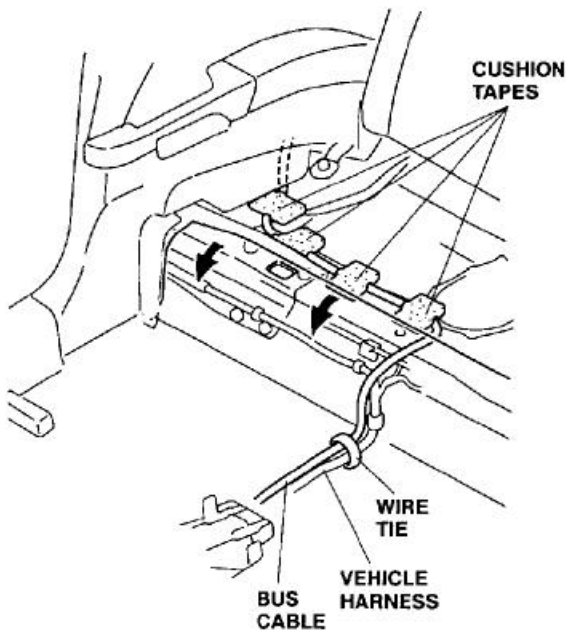


30. Using isopropyl alcohol on a shop towel, thoroughly clean the areas where the cushion tapes will attach; then secure the BUS cable to the floor panel with the four cushion tapes in the areas shown.

31. Using isopropyl alcohol on a shop towel, thoroughly clean the areas where the cushion tapes will attach; then secure the BUS cable to the wheelwell with one cushion tape as shown.

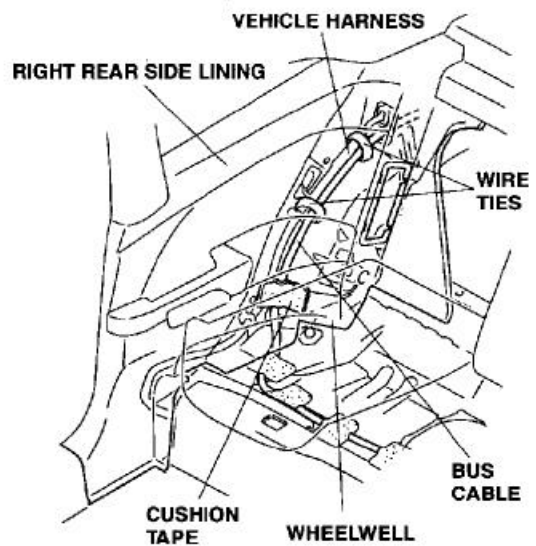

32. Behind the right rear side lining, secure the BUS cable to the vehicle harness with two wire ties in the areas shown.
33. Secure the BUS cable to the CD changer bracket with the wire tie in the area shown.

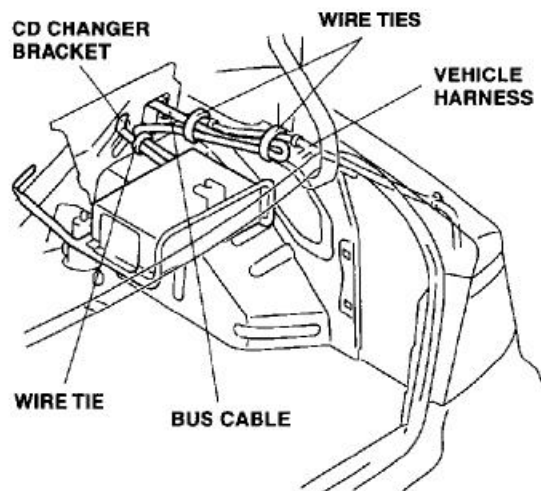


34. Bundle up the excess cable, and secure it to the vehicle harness with two wire ties.

PUB No. Title
AI AII21921 2001 CIVIC 2-DOOR CD CHANGER ATTACHMENT


Issued
10/20/00

35. Plug the BUS cable connector, the vehicle 20-pin connector (blue), and the antenna lead into the rear of the audio unit.


With Radio and Pocket:

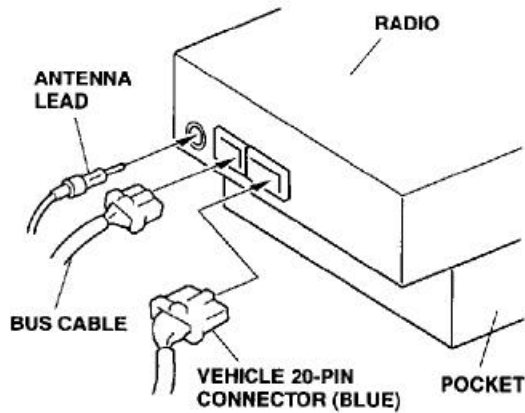

With Radio and Cassette Player:

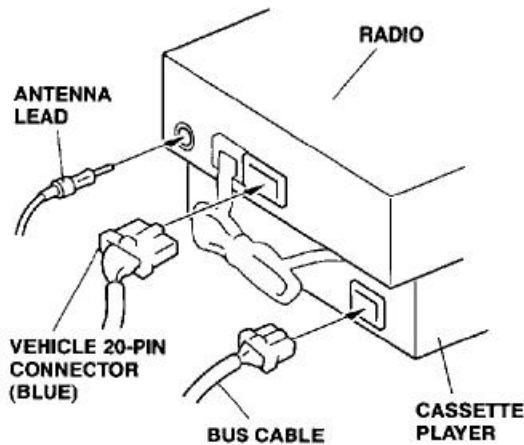

36. Connect the four vehicle connectors to the center panel, and reinstall the center panel.

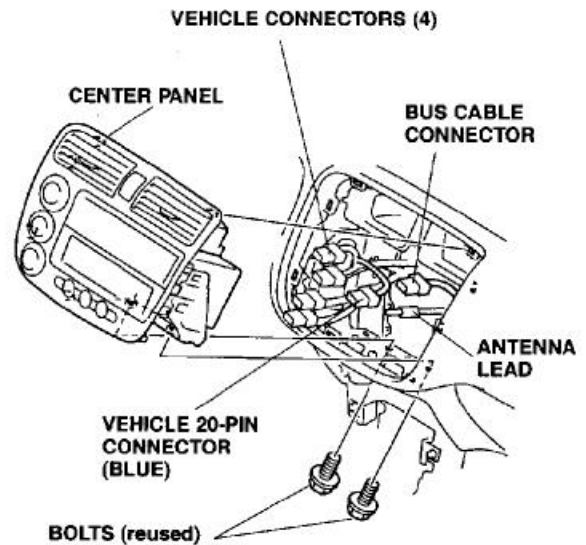

37. Check that all wire harnesses are routed properly and all connectors are plugged in.
38. Reconnect the negative cable to the battery.
39. Enter the radio anti-theft code and the radio station presets.
40. Reset the clock.
41. Check the operation of the CD changer as described in the Owner's Manual supplied.
42. Reinstall all removed parts. Make sure that all retaining clips and retaining tabs seat securely.
43. Put the CD Changer Owner's Manual and the shipping clips (removed in step 11) in the glove box for your customer.