



INSTALLATION INSTRUCTIONS

Accessory
REAR DIFFUSER SPOILER


Application
CR-Z

Publications No.
All 43568

Issue Date
AUG 2010

PARTS LIST

Rear diffuser spoiler

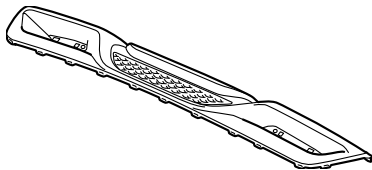

TOOL AND SUPPLIES REQUIRED

Phillips screwdriver

Trim Tool Set (SOJATP2014)

(Available through the Honda Tool and Equipment program. On the iN, click on: Service/Service Bay/Tool and Equipment Program, then enter the number under "Search." Or call 888-424-6857.)


5 mm Hex wrench

Stubby phillips screwdriver

Blanket

10 mm Open end wrench

Illustration of the Rear Diffuser Spoiler Installed on the Vehicle

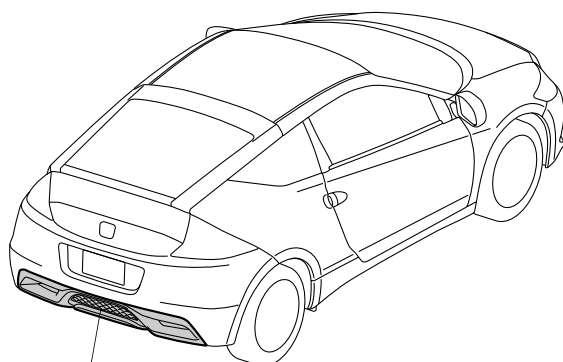

**REAR DIFFUSER
SPOILER**


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


NOTE: Be careful not to damage the vehicle body paint finish.

1. Make sure you have the anti-theft code for the audio unit and navigation system (if equipped), then write down the radio station presets.
2. Disconnect the negative cable from the battery.


- Open the hatch. With the help of an assistant, remove the rear bumper (six self-tapping screws, two hex bolts, four clips, eighteen retaining tabs, unplug the vehicle connector, and release the vehicle connector from the holder). Place the rear bumper on a blanket after removal.

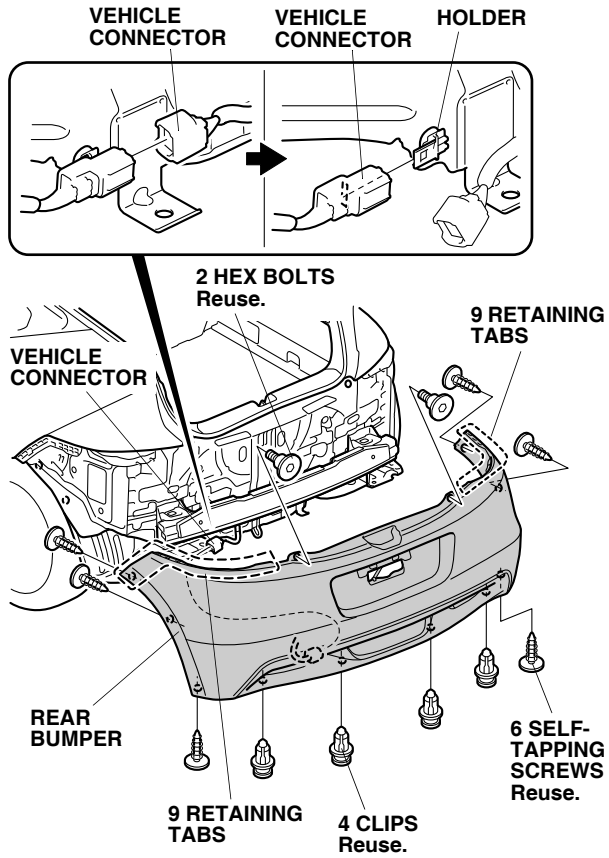

- Remove the diffuser (two clips and twelve retaining tabs).

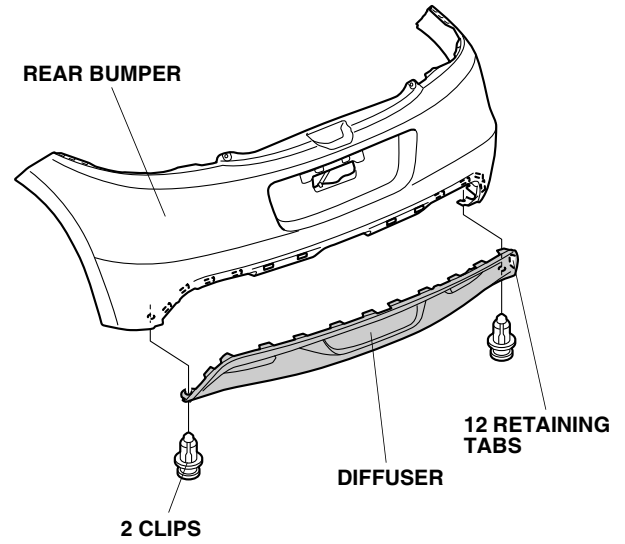


- Remove the right and left trim pieces (one retaining tab and one hook for each).

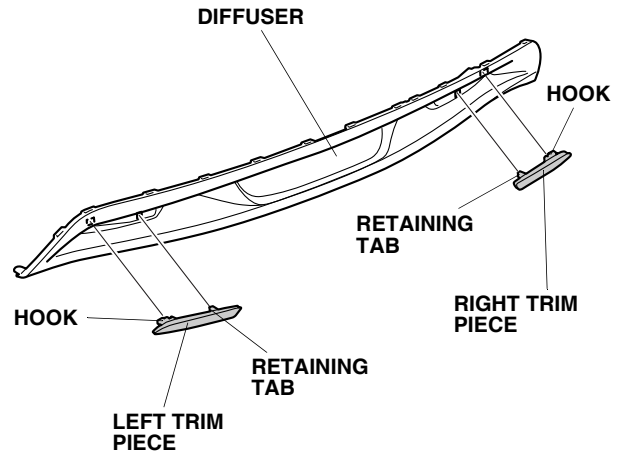


Installing the Rear Diffuser Spoiler


6. Install the right and left trim pieces to the rear diffuser spoiler.

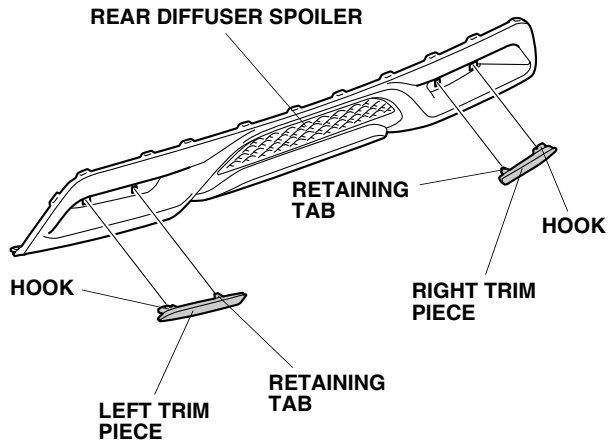

7. Install the rear diffuser spoiler to the rear bumper (twelve retaining tabs and two clips).

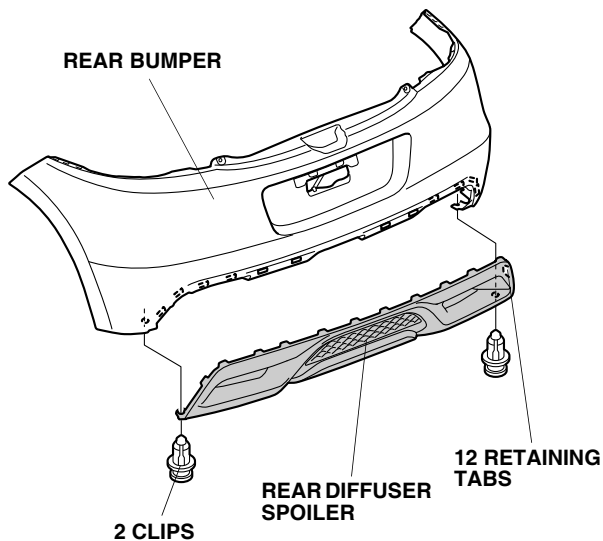

8. With the help of an assistant, reinstall the rear bumper.

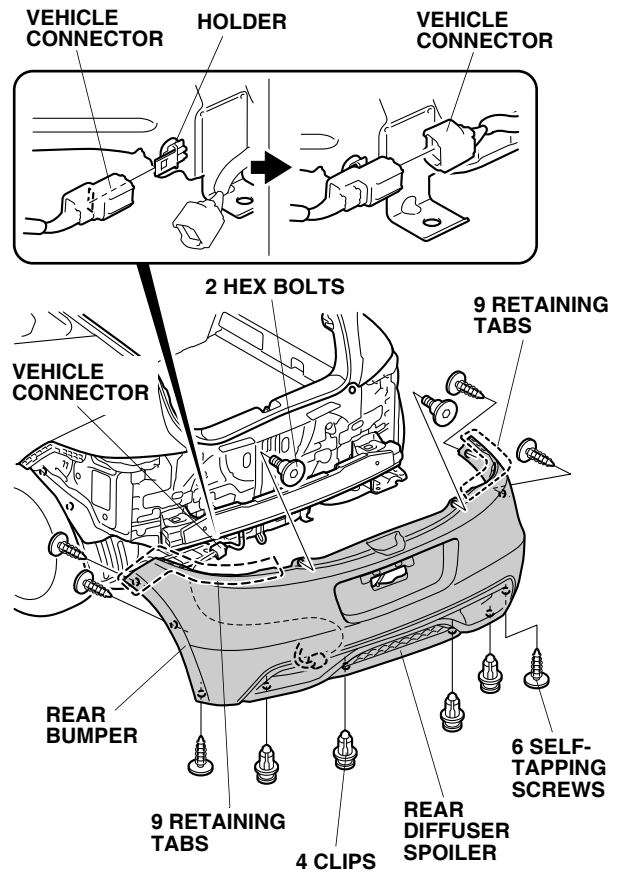

9. Reconnect the negative cable to the battery.
10. Enter the customer's anti-theft code for the audio and navigation system (if equipped), and reset the radio station presets.
11. Reset the clock.
12. Reinstall the removed parts.
13. If the IMA battery level gauge display is at zero, start the engine, and hold it between 3,500 and 4,000 rpm (without load) in P or N position until the IMA battery level gauge display shows at least half-charged.

USE AND CARE

Please copy this page and hand it to your customer.

The rear diffuser spoiler has a textured surface. To prevent wax build-up on the textured surface, do not wax the rear diffuser spoiler. To clean the textured surface, use a soft brush to remove any debris.