



ACURA INSTALLATION INSTRUCTIONS

Accessory

BODY SIDE MOLDING

Application

MDX

Publications No.

BII 32741-33979

Issue Date

OCT 2006

PARTS LIST

Right front body side molding



Left front body side molding




Right rear body side molding



Left rear body side molding



4 Alcohol pads



TOOLS AND SUPPLIES REQUIRED

Tape measure

Rubber roller

Shop towel

Felt-tip pen


Masking tape

INSTALLATION


NOTE:

- If you're also installing door edge guards (sold separately), install them before you install the body side molding.
- Be careful not to damage the body paint finish.
- This molding kit should only be installed if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to "cure", do not wash the vehicle for 24 hours.
- These instructions are for the left side of the vehicle. The same procedure applies to the right side of the vehicle.


1. Attach the masking tape to the upper part of the front door along the character line. Using a felt-tip pen, mark the masking tape 500 mm from the door edge.

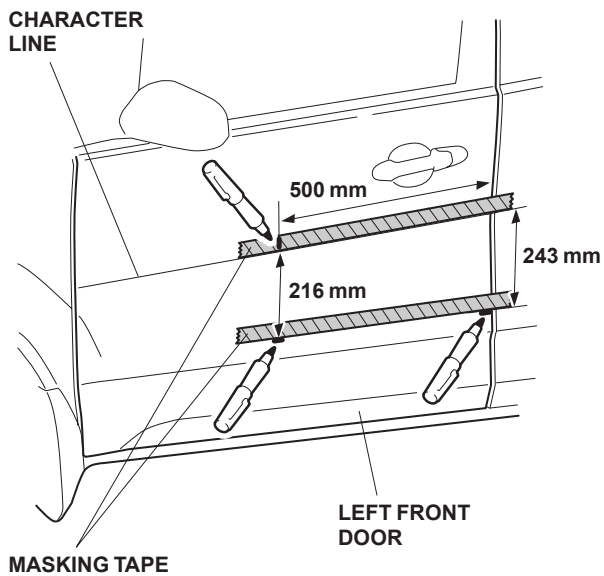

2. Measure down from the masking tape and mark the door at the two points shown. Attach another piece of masking tape above the marks.
3. On the back of the left front body side molding, remove one inch of the adhesive backing from the four ends and tape them to the front of the body side molding. Remove the remaining adhesive backings.

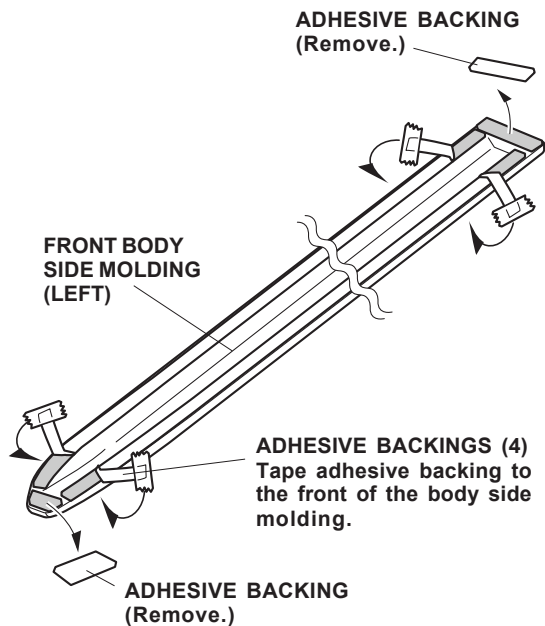

4. Using one alcohol pad, clean the area where the side molding will attach.

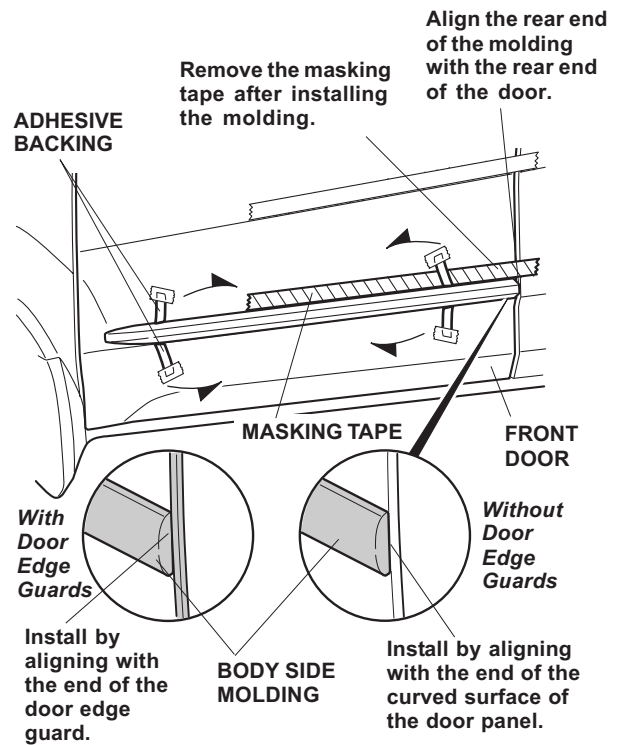


5. Position the molding on the door and align it with the masking tape. Remove the masking tape.


NOTE: If door edge guards are installed, match the rear edge of the left front body side molding with the door edge guard.

6. While applying pressure on the molding, carefully remove the adhesive backing. Hold the molding firmly against the door with the palm of your hand.


- Attach the masking tape to the upper part of the rear door along the character line. Using a felt-tip pen, mark the masking tape 350 mm from the door edge.

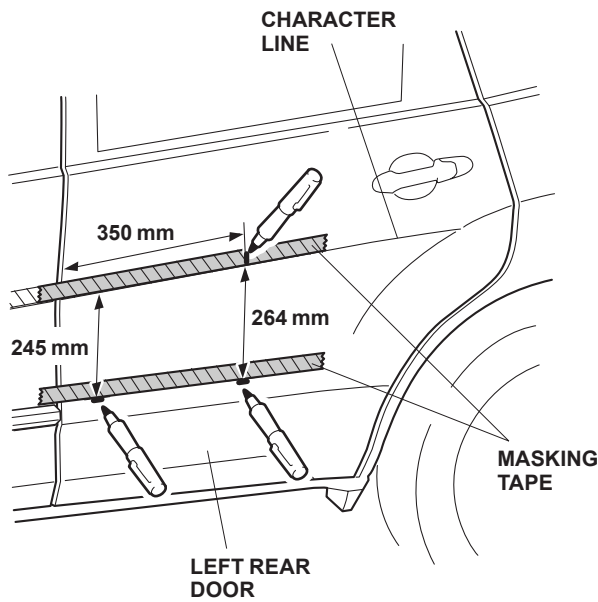


- Measure down from the masking tape and mark the door at the two points shown. Attach another piece of masking tape above the marks.
- On the back of the left rear body side molding, remove one inch of the adhesive backing from the ends of the body side molding and tape them to the front of the body side molding.

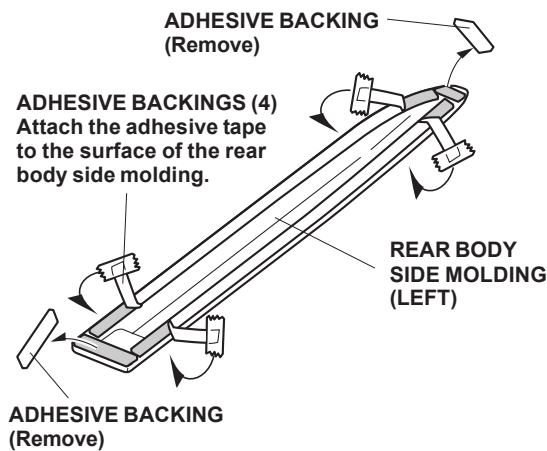

- Using one alcohol pad, clean the area where the side molding will attach.

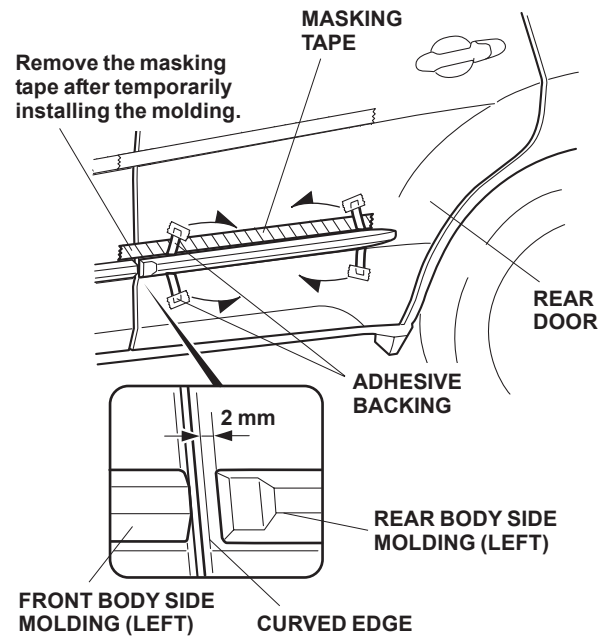

- Position the molding on the door and align it with the masking tape. Remove the masking tape.
- While applying pressure on the molding, carefully remove the adhesive backing. Hold the molding firmly against the door with the palm of your hand.
- Repeat on the other side.
- Using a hard rubber roller, apply pressure along the entire length of the moldings.

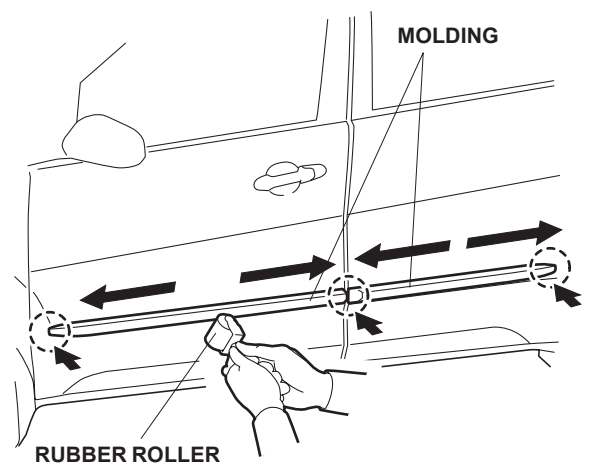

- Hold the molding firmly against the door with the palm of your hand, particularly at both the edges.