




INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
FOG LIGHT P/N 08V31-SNA-100	CIVIC 4-DOOR	All 30181
		Issue Date
		SEP 2005

PARTS LIST


Right fog light

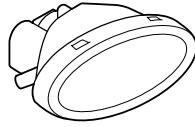


Left fog light




Right bracket A

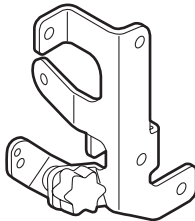


Left bracket A

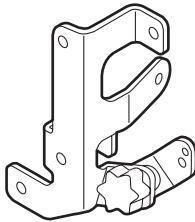


Right bracket B




Left bracket B




Switch harness

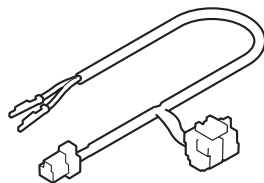


Fog light harness

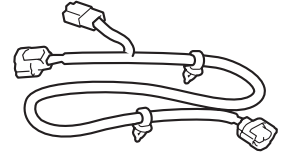


Subharness




Switch

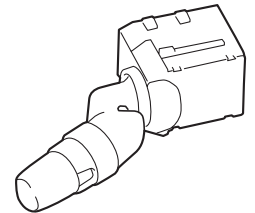

Right trim

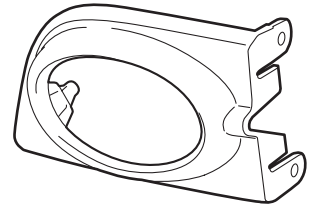


Left trim

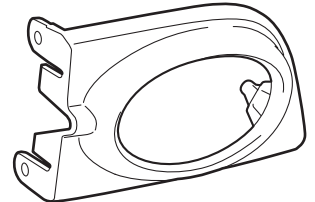

4 Large stepped screws



5 Wire ties

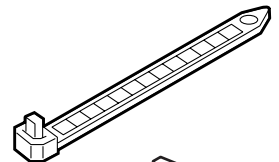

Clip



4 Small stepped screws




2 Washer screws, 4 x 8 mm




10 Self-tapping screws, 5 x 16 mm




Fuse (20A)




Relay

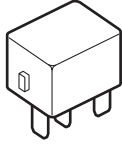


4 Wire ties with clips A

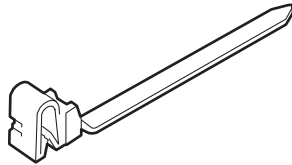

Wire tie with clip B

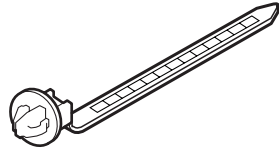

Ground bolt



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Flat-tip screwdriver

Ratchet

10 mm Sockets

Drill

3 mm Drill bit

20 mm Hole saw

Blanket

Pushpin


Utility knife

Gloves

Hacksaw blade

Masking tape


Illustration of Fog Lights installed on the vehicle

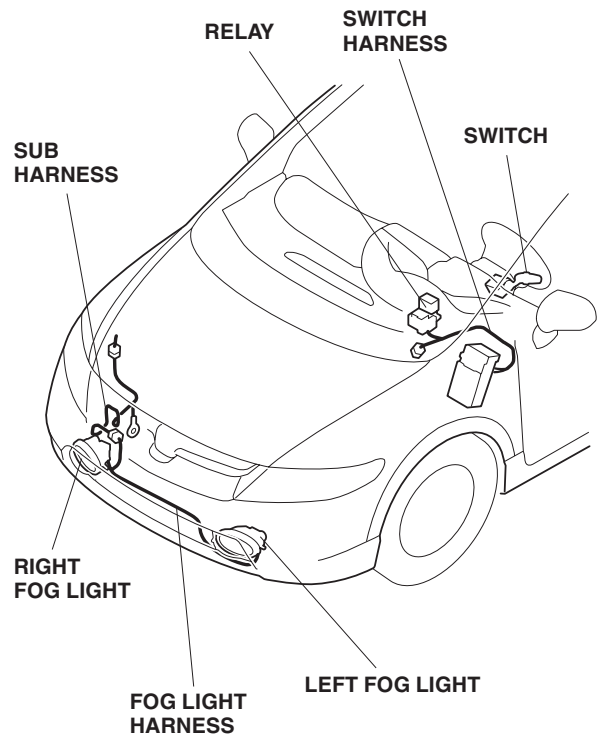


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.
3. Remove the front bulkhead cover (two expansion clips, three clips and move the right and left fender trims inward).

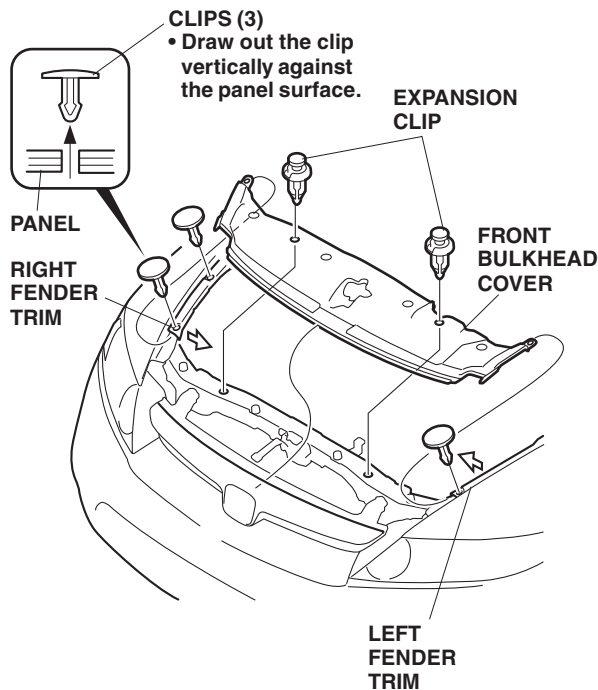

4. With the help of an assistant, remove the front bumper (four long clips, six clips and two self-tapping screws). To prevent damage, set the front bumper on a blanket.

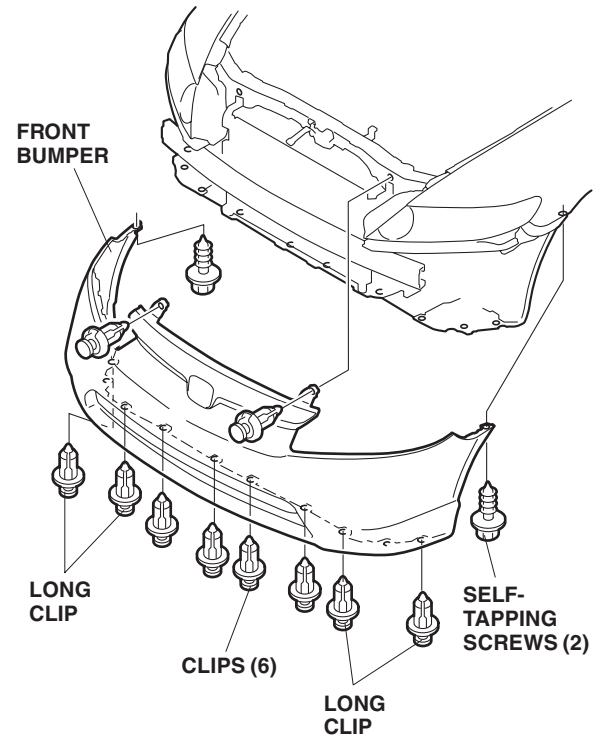


5. Apply masking tape to the front bumper (left side) in the area shown.

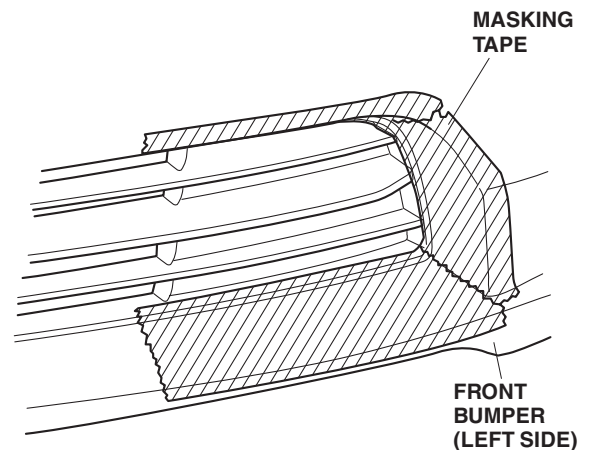


CIVIC HYBRID


- Remove the bumper cover (six self-tapping screws).

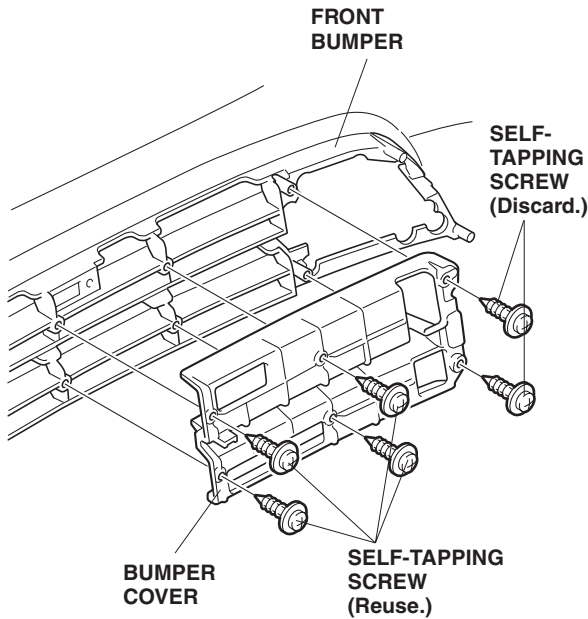


- On the inside of the front bumper, locate the eight marks on the bumper. Using a pushpin, pierce the front bumper at each of the eight marks.

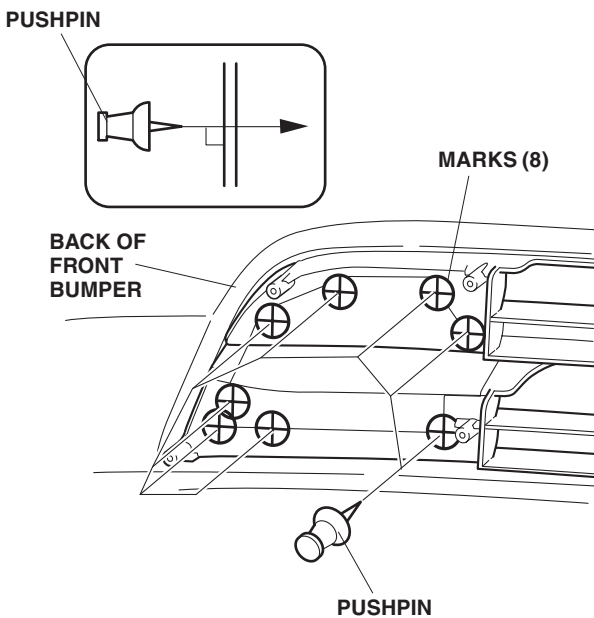


- If the mark at the illustrated position is not visible, measure the dimensions and make a mark on the front bumper with a pushpin as shown in the illustration.

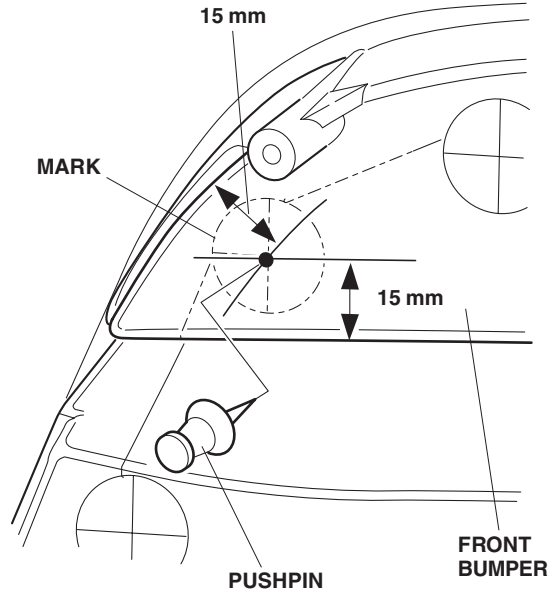


- While wearing eye protection, drill a 20 mm hole through each of the eight marks on the front bumper with a 20 mm holesaw.

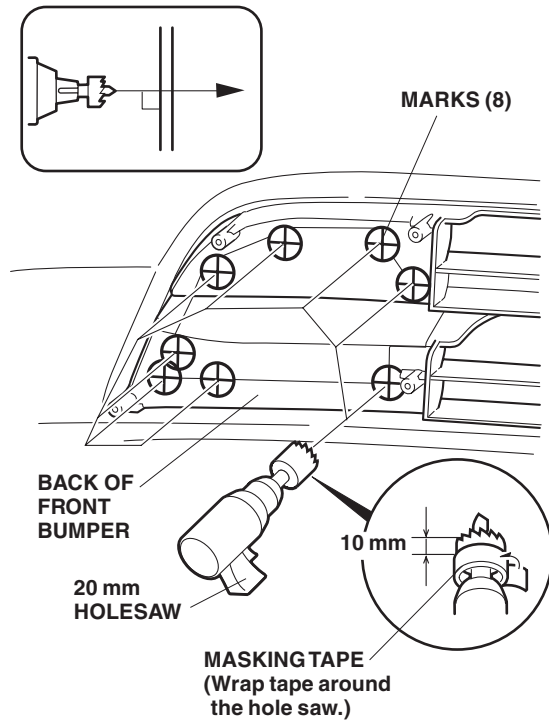

8. Using a hacksaw blade, cut out the marked area on the front bumper.
 - Take care not to damage the front bumper.
 - After cutting out the marked area, remove any burrs from the edges of the hole.

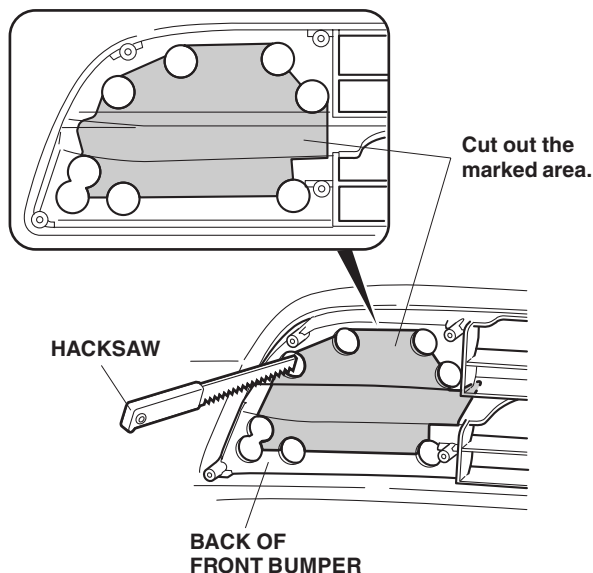


9. Using a utility knife, cut out the two pieces of bumper in the two areas shown.
 - If there are the pins on the front bumper, cut them off as shown.

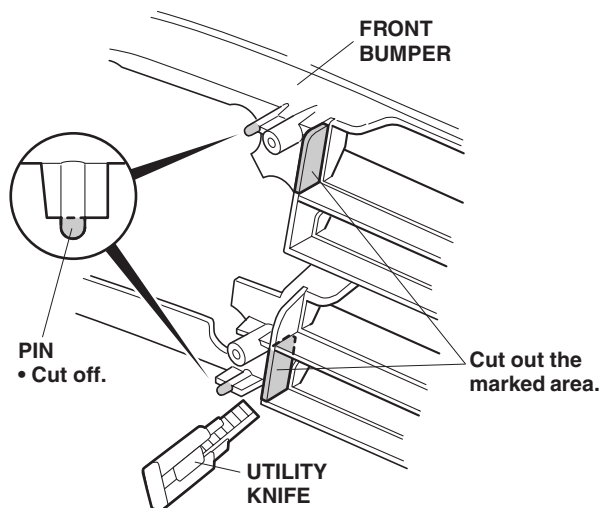


10. Repeat steps 5 thru 9 to mark and cut out the right side of the bumper.

11. Position the left bracket A and left bracket B on the left fog light, and install the two small stepped screws and one 4 x 8 mm washer screw. Tighten the screws securely.
 - Before installing bracket A and bracket B, check the identification mark: The brackets marked "L" go on the left side; the brackets marked "R" go on the right side.

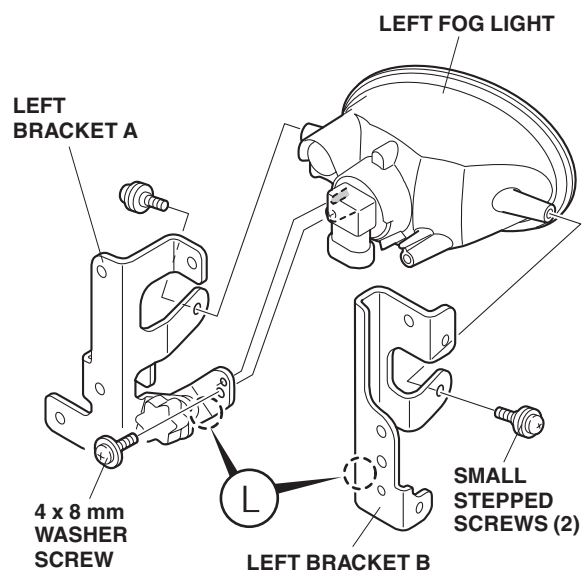

12. Inside the front bumper, slide the fog light into the cutout you made, and secure it with four 5 x 16 mm self-tapping screws.

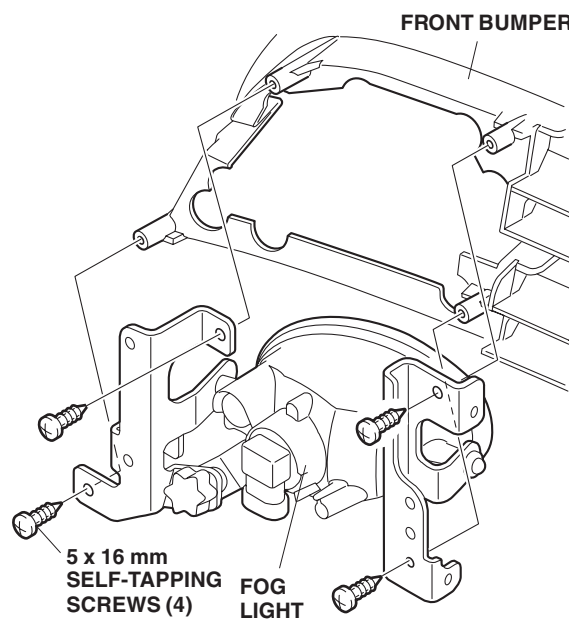


13. Repeat steps 11 and 12 for the right side.

CIVIC HYBRID


- Attach the right fog light bracket B, installed on the right fog light, to the bumper cover. Then, install the bumper cover/right fog light bracket B assembly on the front bumper using the four self-tapping screws (reuse) and four 5 x 16 mm self-tapping screws.

14. Position the left trim on the bumper and install the

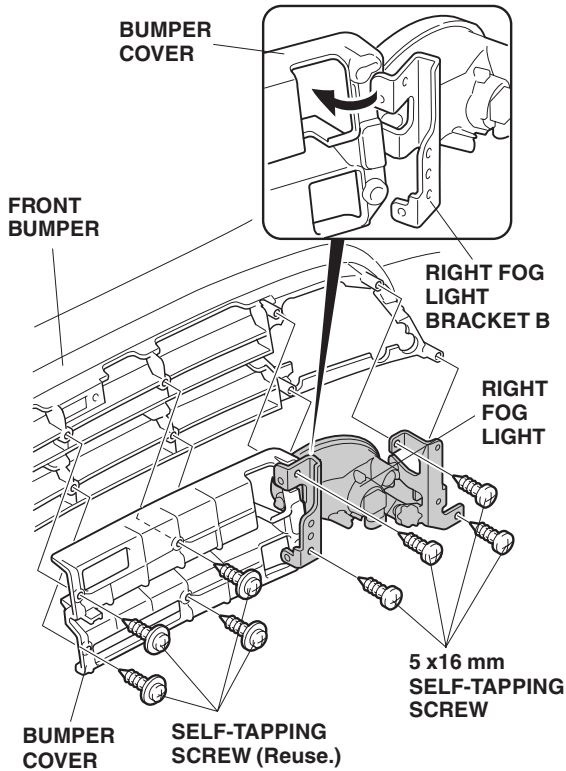


two large stepped screws and one 5 x 16 mm self-tapping screw.

15. Repeat for the right side.

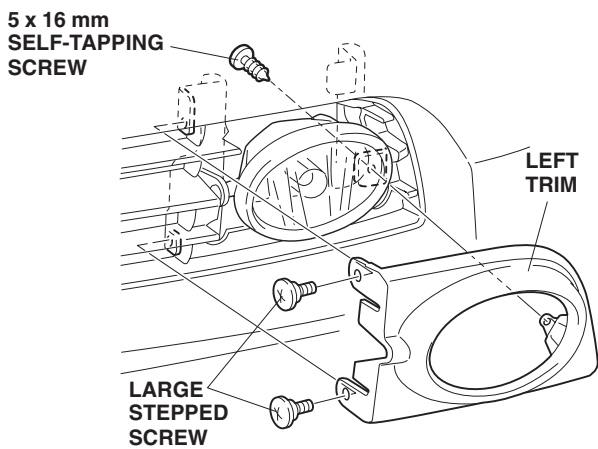


16. Connect the fog light harness 2-pin connector to

the left fog light and route the fog light harness on the inner side of the front bumper. Connect the 2-pin connector to the right fog light.

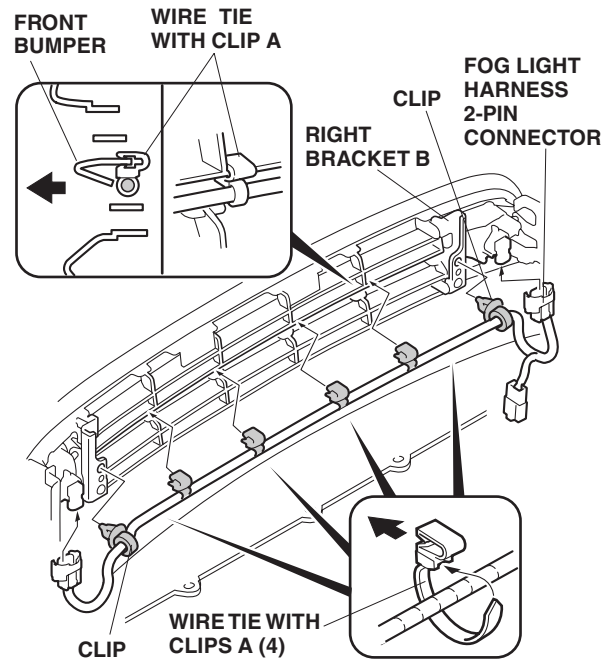


17. Secure the two clips on the fog light harness to the left bracket B and right bracket B.


18. Install the four wire ties with clips A on the fog light harness. Align the wire ties next to the vertical ribs. Secure the fog light harness to the front bumper by inserting the four wire ties with clips A into the front bumper opening.

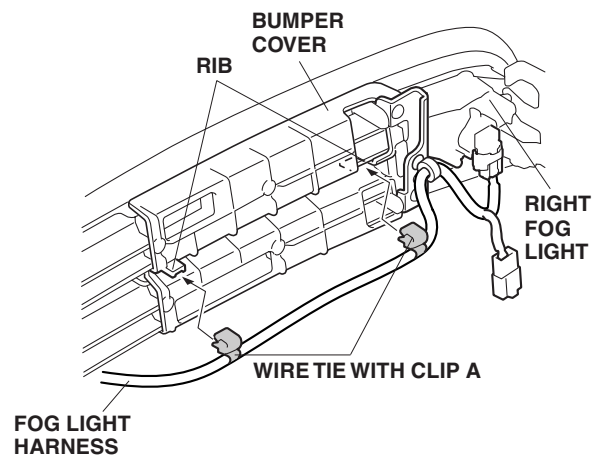


19. Slide the clip onto the fog light harness 2-pin connector and secure it to the fog light bracket A.

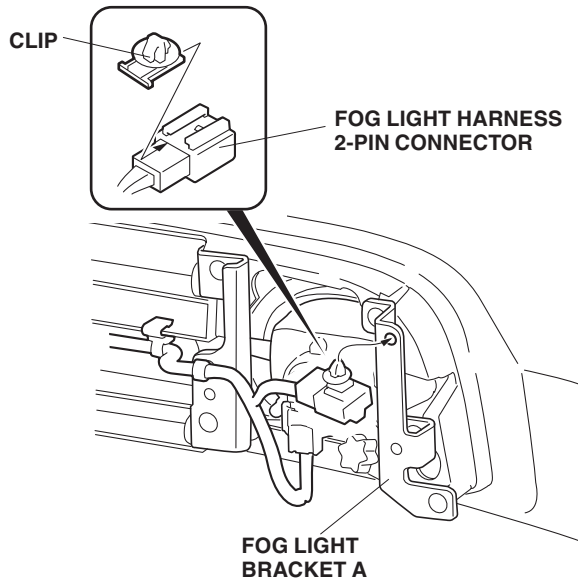


20. Remove one bolt from the washer reservoir tank and loosen the two bolts.

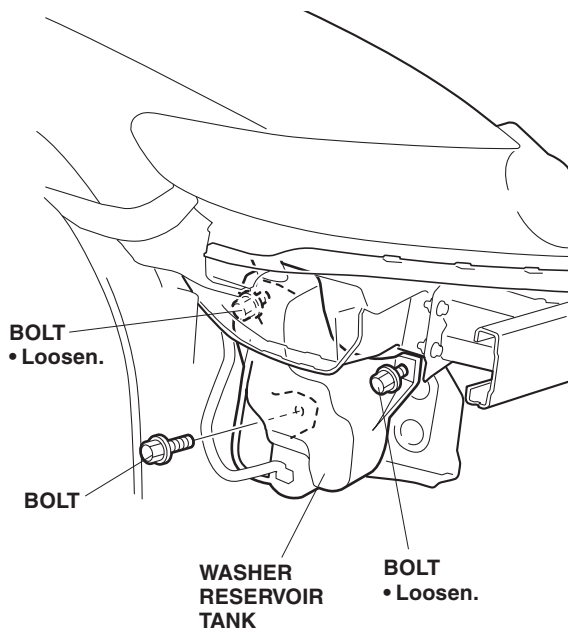

21. Locate the 1-pin connector blue-taped to the vehicle harness and remove the blue tape to free the 1-pin connector. Plug the 1-pin connector you just freed into the 1-pin connector of the subharness.

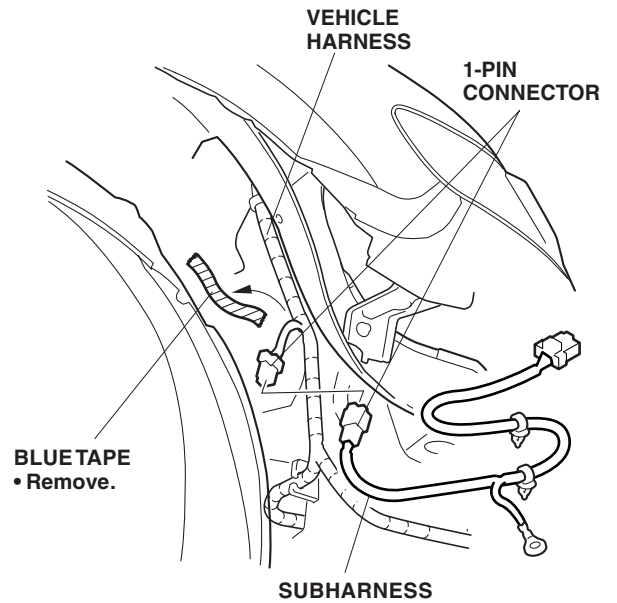


22. Route the subharness between the washer reservoir tank and vehicle panel and route it as shown.

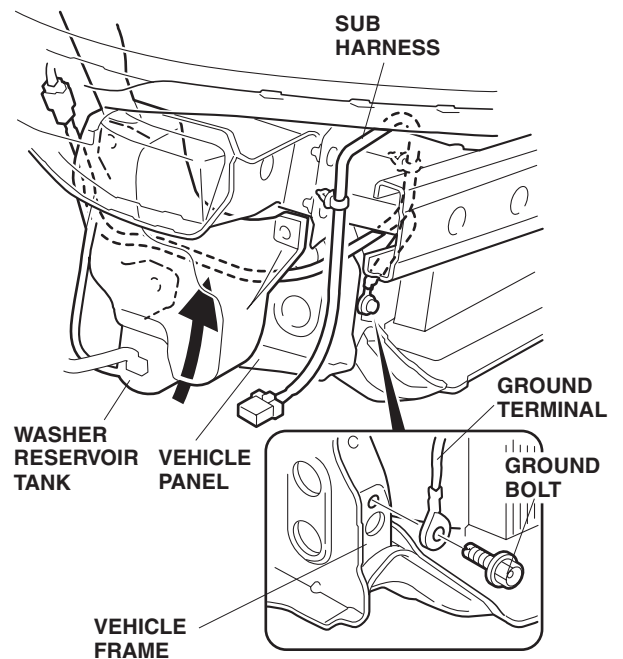


23. Secure the subharness ground terminal to the vehicle frame using the supplied ground bolt.

24. Secure the two clips on the subharness to the vehicle frame and secure the subharness to the vehicle harness with two wire ties.

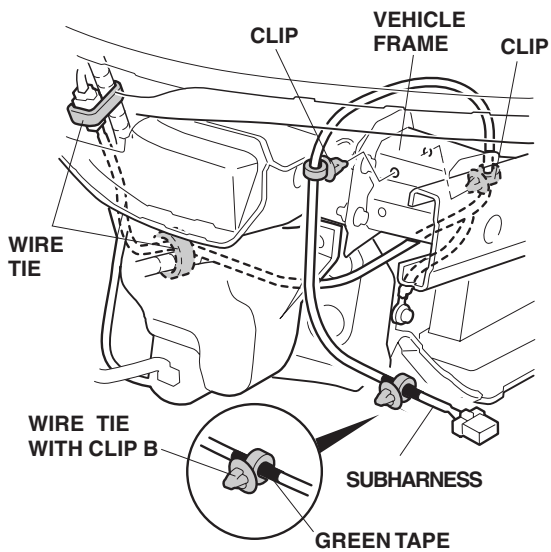


25. Install a wire tie with clip B on the subharness in the position marked with the green tape.
26. Connect the subharness 2-pin connector to the fog light harness 2-pin connector.

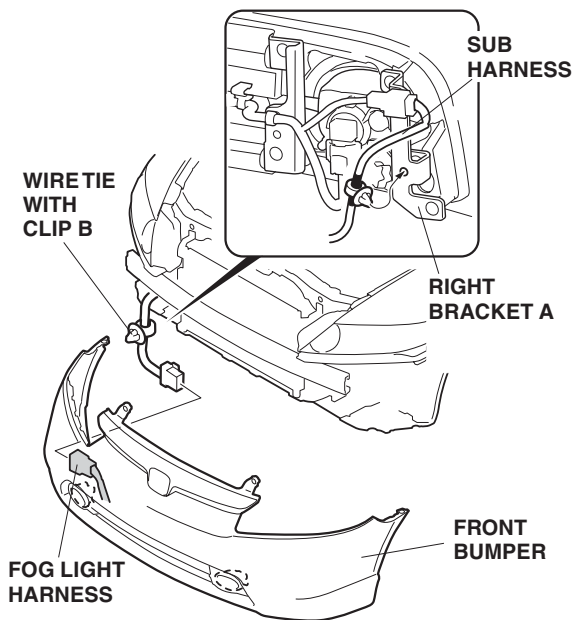


27. Secure the wire tie with clip B installed in step 25 to the right bracket A.
28. Reinstall the front bumper.


29. If equipped, remove the driver's dashboard under cover by turning the knob counterclockwise, and releasing two clips and pin. Take care not to damage the clips.

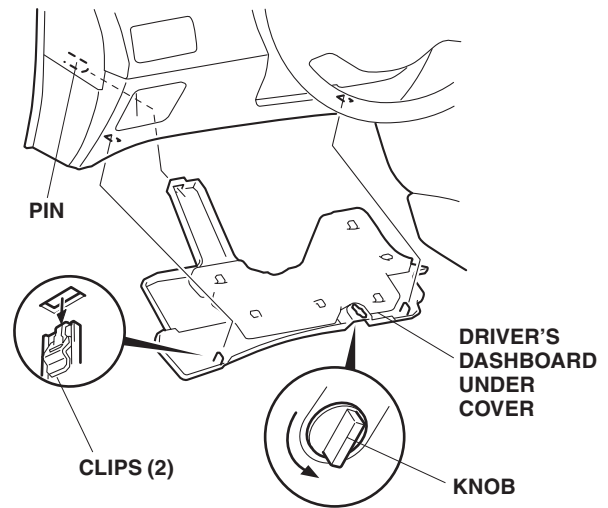


30. Remove the driver's dashboard lower cover. Release the eight retaining clips. Take care not to damage the clips.

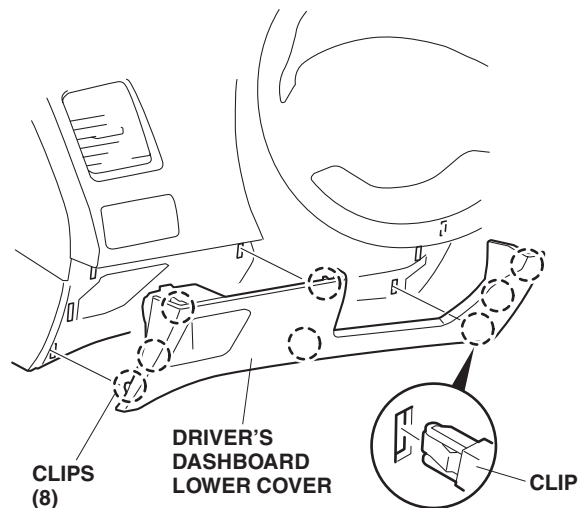


31. Lower the tilt lever. Insert a flat-tip screwdriver along the guide of the column lower cover and release the retaining tabs on the column upper cover.

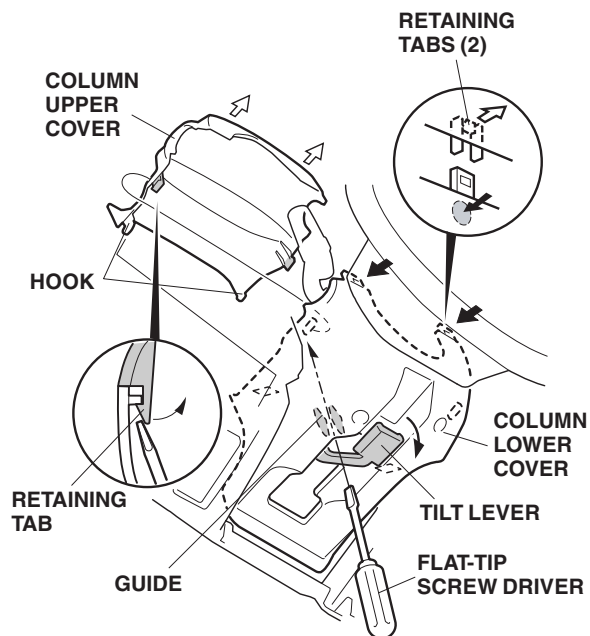


32. Separate the column upper cover from the column lower cover (two retaining tabs).
 33. Remove the column upper cover (two hooks).
 34. Remove the lower cover (two self-tapping screws and one screw).

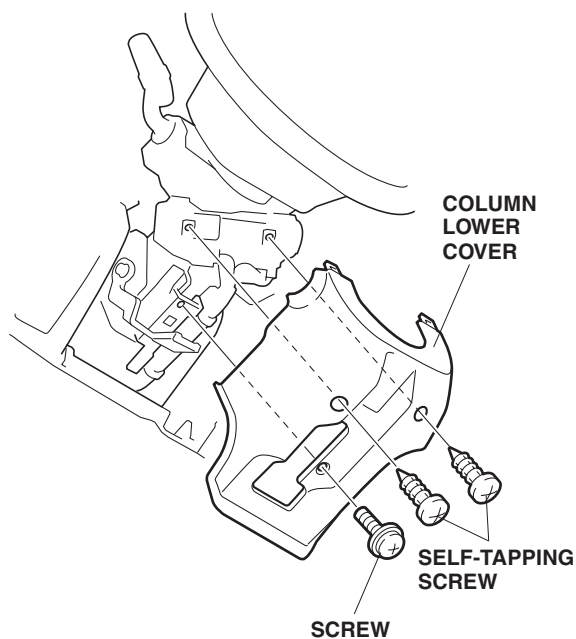

35. Remove the green 42-pin connector, white 34-pin connector and the blue 21-pin connector from the fuse box by pushing the retaining tab and raising the lock on each respective connector.

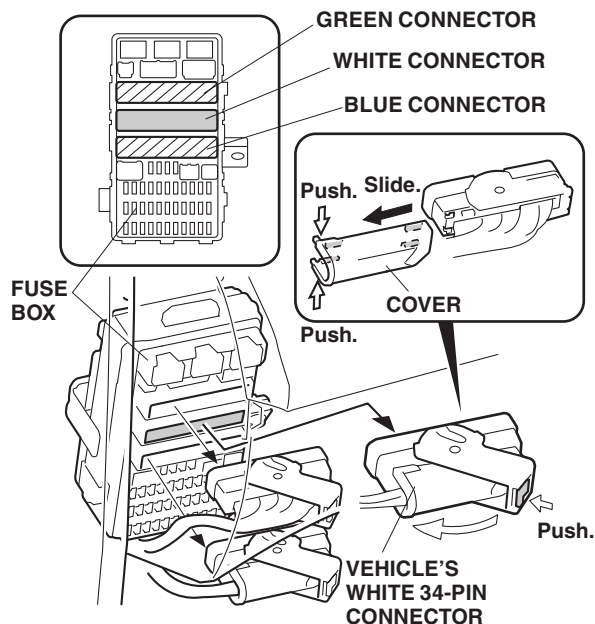


36. Close the lock on the vehicle's white 34-pin connector and remove the cover by sliding it. Insert the white/red terminal and blue terminal on the switch harness into the vehicle's white 34-pin

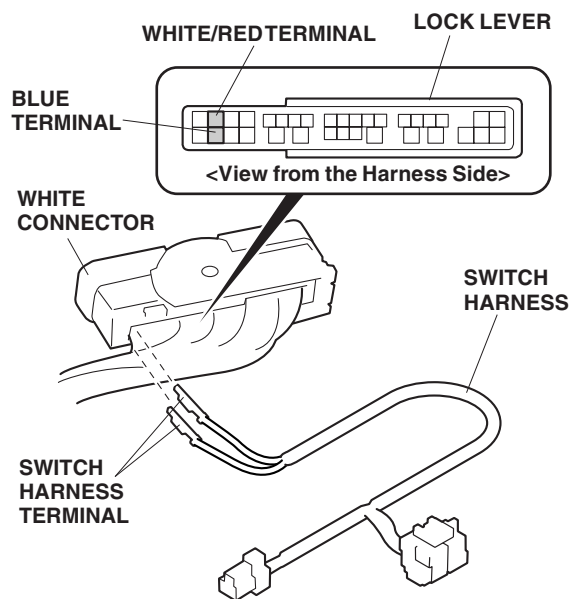


connector as shown.

37. Reinstall the vehicle connectors in the fuse box.
38. Route the switch harness above the vehicle knee

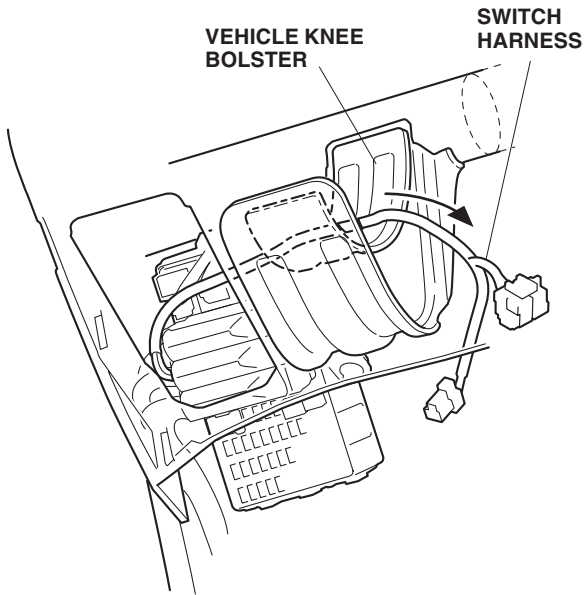


bolster as shown.

39. Plug the relay into the switch harness relay block, then slide the relay block onto the vehicle bracket

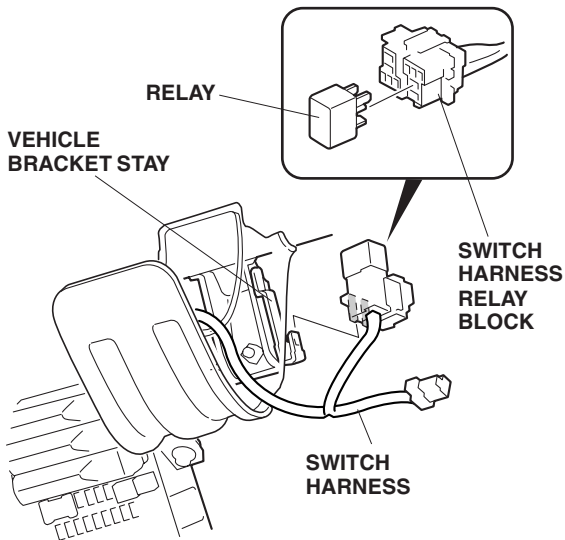


- stay.
40. Locate the 1-pin connector blue-taped to the vehicle harness. Plug the 1-pin connector into the

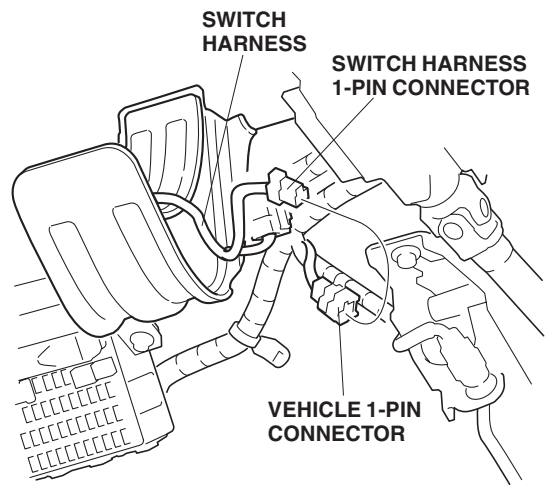


1-pin connector of the switch harness.

41. Secure the switch harness to the vehicle harness and vehicle knee bolster with three wire ties in

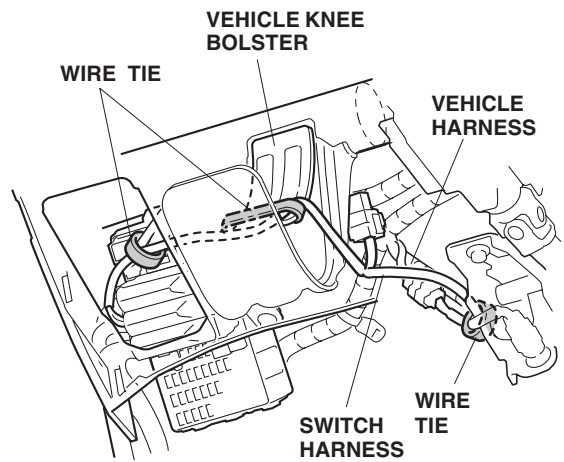

the areas shown.

42. Lower the tilt lever and pull the steering wheel toward you.

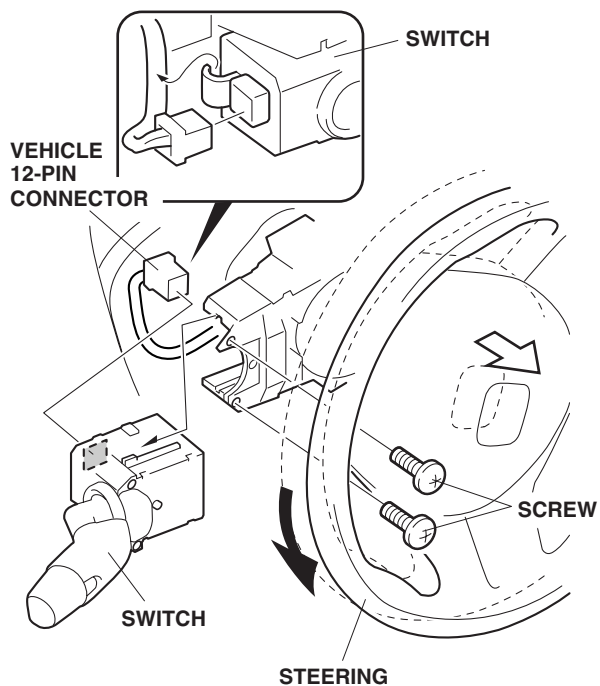


43. Turn the steering wheel 90° counterclockwise.
44. Remove the vehicle 12-pin connector from the switch. Remove the two screws from the switch.

and remove the switch.


45. Install the new switch with the original screws. Then plug the vehicle 12-pin connector into the new switch.

- Do not install the switch while holding the

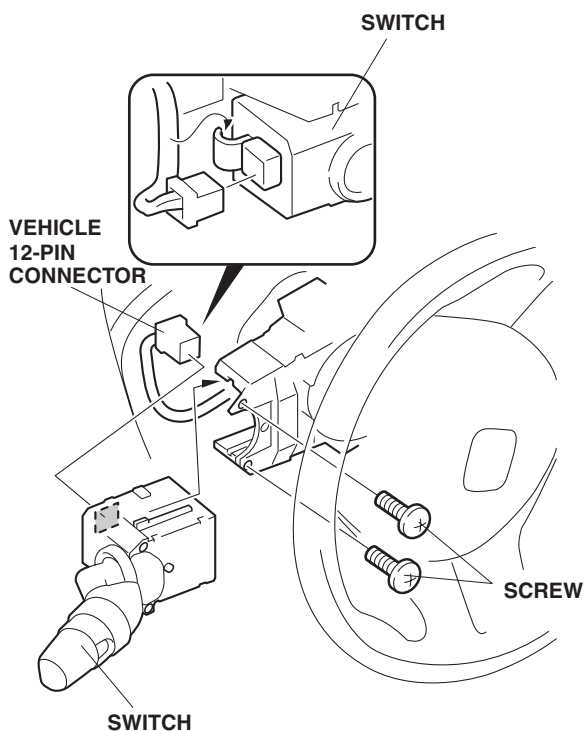

lever.

46. Install the 20A fuse into the fuse box in the

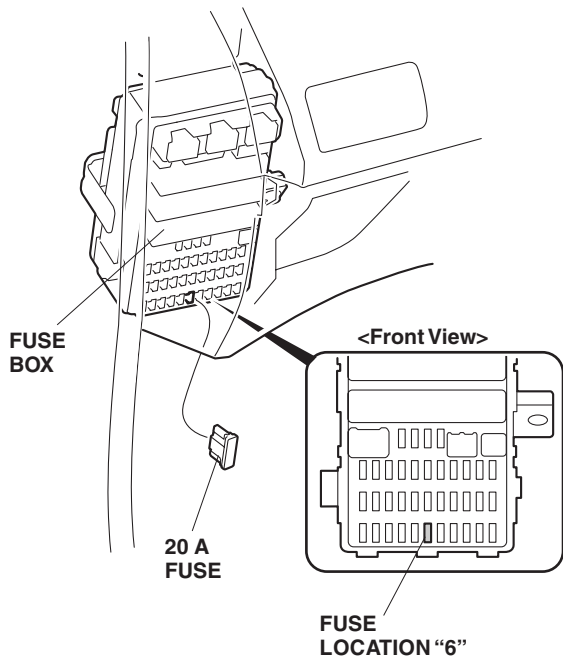

location shown.

47. Check that all wire harnesses are routed properly and all connectors are plugged in.

48. Reinstall all removed parts. Do not reinstall the outboard bumper bolt at this time. Check that all clips and fasteners are installed securely.

49. Reconnect the negative cable to the battery.

USE AND CARE

How to Operate Fog Lights

- Turn the light switch to the "D" position (headlights on low beam).
- Turn the fog light switch (indicator is on).

NOTE: The fog lights lenses can cloud when the outside temperature is cold; this is normal and should go away in warm weather.


- If the fog light don't come on, check the fuse and

all the connectors, including the ground cable.

Fog Light Aiming Adjustment

50. Adjust the fog light:

- Pull down the inner fender and under cover.
- Adjust the aiming according to local laws and regulations.
- To adjust, turn the aiming adjustment knob in or out until the correct aiming is obtained.

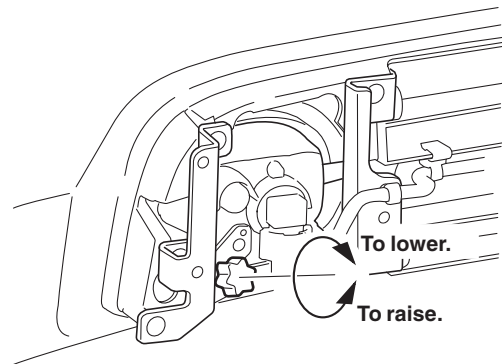

51. Reset the clock, and reset the radio station presets.


52. Reinstall the four outboard bumper bolts.

NOTE: When the battery is disconnected, the driver's window AUTO function is disabled.


- Start the engine. Push down on the driver's window switch until the window is fully open.
- Pull up on the driver's window switch to close the window completely, then hold the switch for 2 seconds or more.
- Lower and raise the driver's window to check operation of the driver's window AUTO function.

BULB REPLACEMENT


1. Remove the two long clips and three clips from the bottom of the front bumper, and pull down the inner fender and under cover.

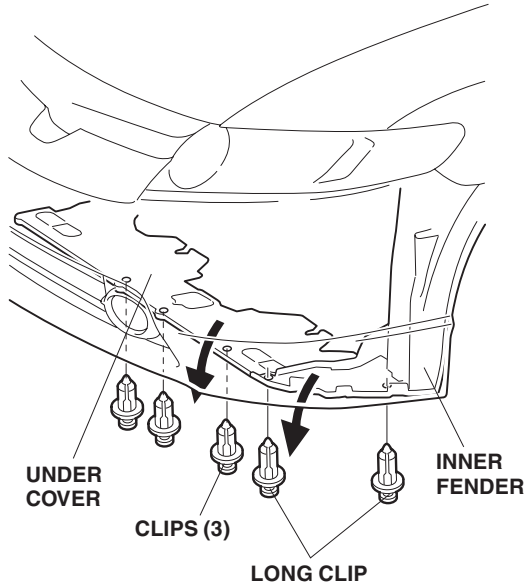

2. Unplug the connector from the fog light.
3. Remove the bulb.

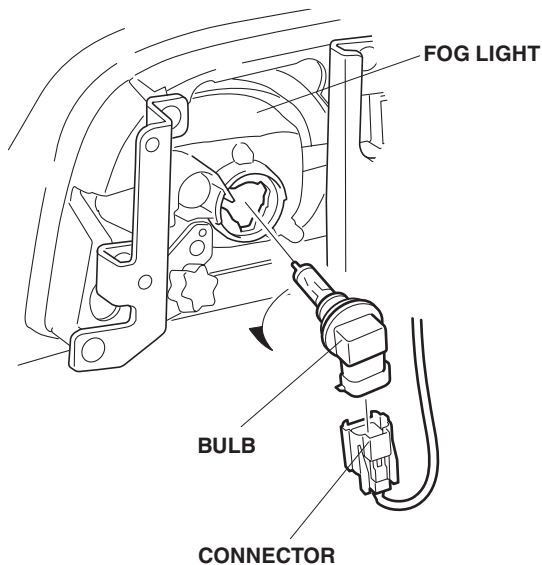



4. Install the new bulb and socket into the fog light.
 - Use only a genuine Honda halogen light bulb of specified wattage.
Rating: 12V 55W H11 Halogen Light Bulb P/N 33165-S5A-003
 - Do not touch the bulb. Oily or greasy substances on the bulb can shorten its service life due to the heat produced when the bulb is turned on. If the bulb is accidentally touched, wipe it clean with a soft cloth that has been dampened with a denatured alcohol or a mild detergent solution.
 - Align the tab on the fog light with the cutout in the bulb when installing the new bulb. If not aligned, the fog light may annoy oncoming drivers.
5. Reinstall the removed parts in the reverse order of

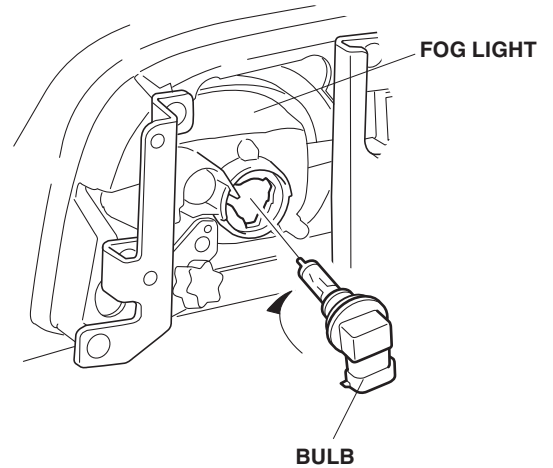

removal.

- Check that the wire harnesses are not pinched.
6. Check the operation of the fog light; adjust the aiming if necessary.

CIRCUIT DIAGRAM

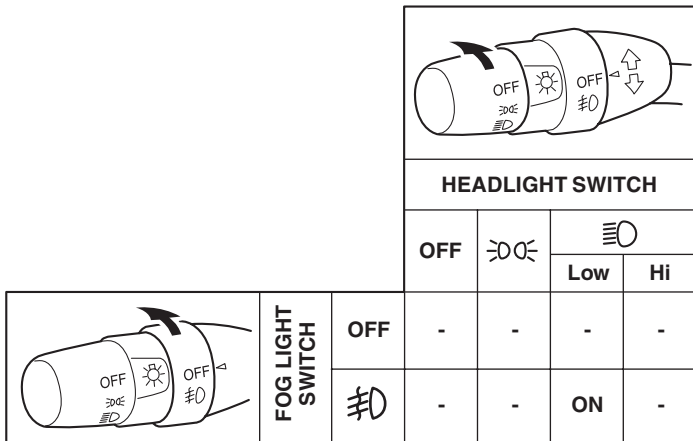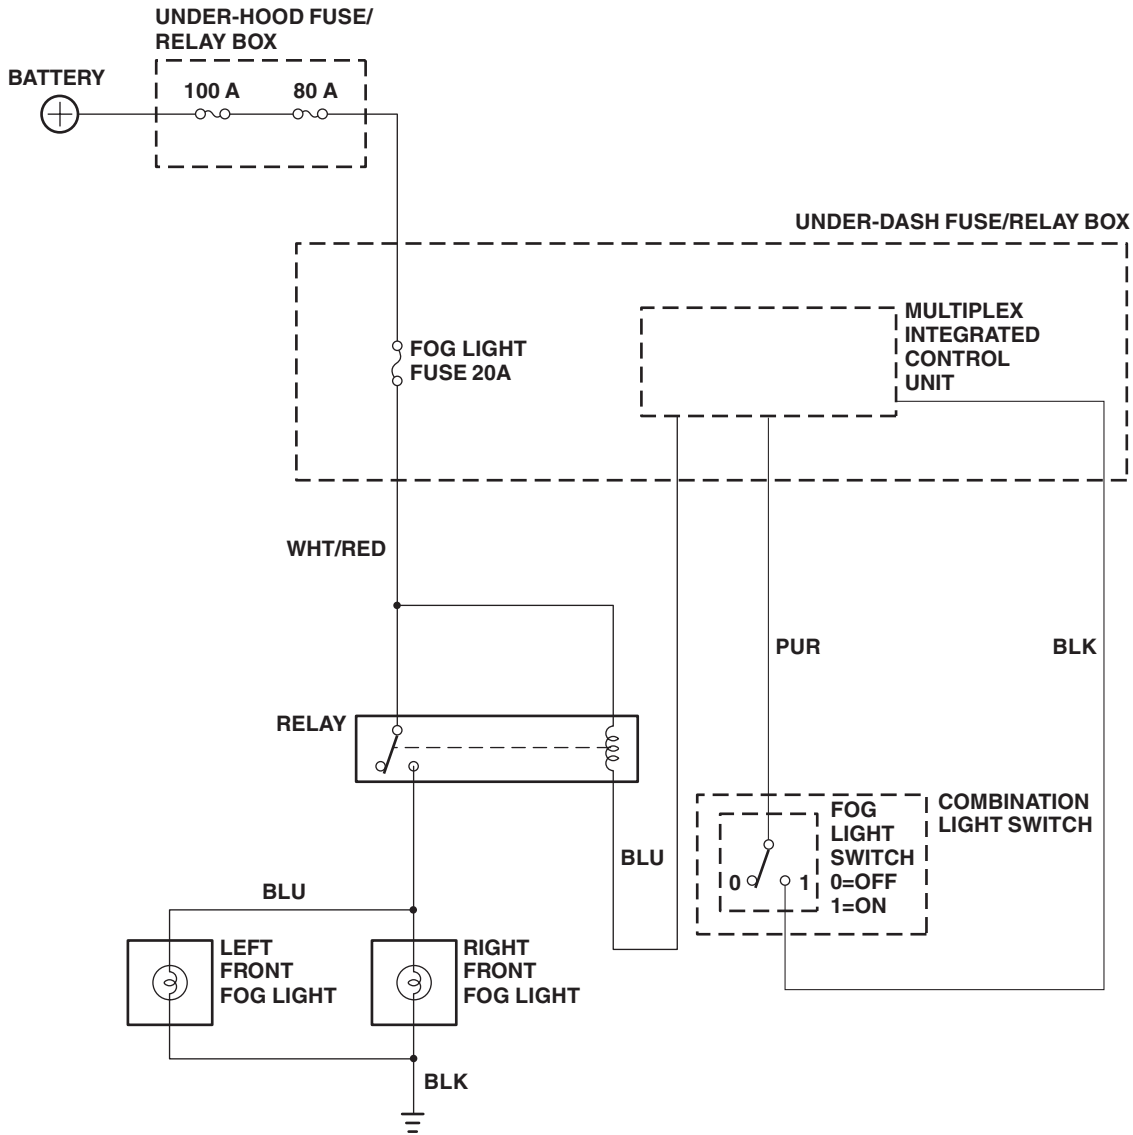

BLK	BLACK	BRN	BROWN
YEL	YELLOW	ORN	ORANGE
BLU	BLUE	PUR	PURPLE
GRN	GREEN	NAT	NATURAL
RED	RED	PNK	PINK
WHT	WHITE	GRY	GRAY
LT BLU	LIGHT BLUE	LT GRN	LIGHT GREEN